access control custom API documentation

1. Version and revision records

Version	describe	date
V1.0	create	2019-06-06 _ _ _ _
V1.1	Modify Wiegand interface mode	2019-06-25 _ _ _ _ _
V1.2	Add Wiegand input interface	2019-08-09
V1.3	Add three-color lighting control	2019-09-24
V1.5	The three-color light interface is compatible with multiple platforms Wiegand input adds active stop interface	2019-12-26

2. Table of contents

1. Version and revision records 1
2. Table of contents 2
3. How to use SMDT API in Android Studio 4
4. SDK interface functions 5
   4.1. public int smdtSendCard(String idCard , int transformat) 5
      Description: Wiegand interface operation, the parameter is ID card number 5
   4.2. public int smdtSendCard(String HID_value, String PID_value, int transformat) 5
      Description: Wiegand interface operation, the parameter is the public code hidden code 5
   4.3. public String smdtReadWiegandData ( ) 6
      Description: Get Wiegand input, this is a blocking method, use the following parameters. 6
   4.4. public int smdtReleaseWiegandRead() 7
      Description: Actively exit the blocking method smdtReadWiegandData(), which can only be used after version 1.5. 7
   4.5. public String[] smdtGetCameraVidPid(int cameraId) 7
      Description: Read camera VID, PID interface 7
   4.6. public int setLedLighted(String ledColor, boolean lighted) 8
      Description: Fill light operation (new API) -- white light, red light, green light . Only available after version 1.5 8
   4.7. public int s etControl(int type, int values) 8
      Description: Fill light operation -- white light . (It is recommended to use setLedLighted for versions after 2019-12-26) 8
   4.8. public int smdtSetUsbPower(int type, int num, int values) 9
      Description: Fill light operation -- red light . (It is recommended to use setLedLighted for versions after 2019-12-26) 9
   4.9. public int smdtSetGpioDirection(int gpioNumber, int direction, int value) 9
      Description: Fill light operation -- green light . (It is recommended to use setLedLighted for versions after 2019-12-26) 9
   4.10. public int setRelayIoMode(int mode, int delay); 10
      Description: Relay mode and delay settings 10
   4.11. public int setRelayIoValue(int value); 11
      Description: Turns the relay on or off 11
   4.12. public int getRelayIoMode(); 12
      Description: In non-automatic mode, get the state of the relay 12
5. For other general functions, please refer to the API documentation of the

Seetech system_20180205.docx ..... 错误!未定义书签。

3. How to use SMDT API in Android Studio

1. Copy SmdtAccessControl_1_1.jar to [Project Directory\app\libs\];
2. Right-click the jar file in the libs folder and select add as Library...

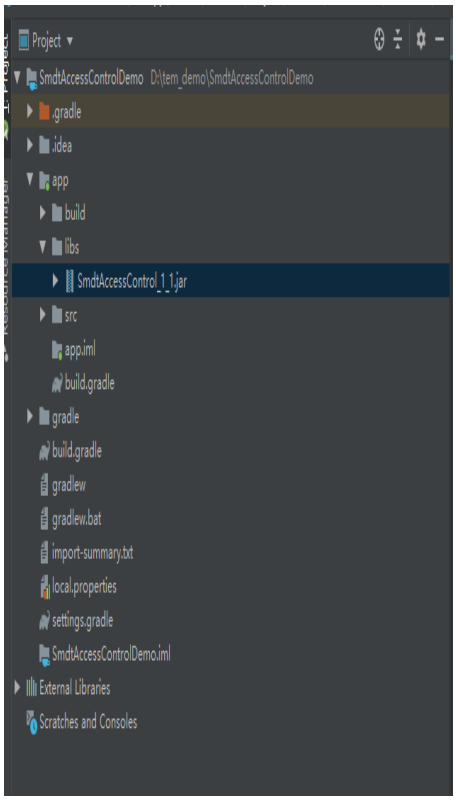

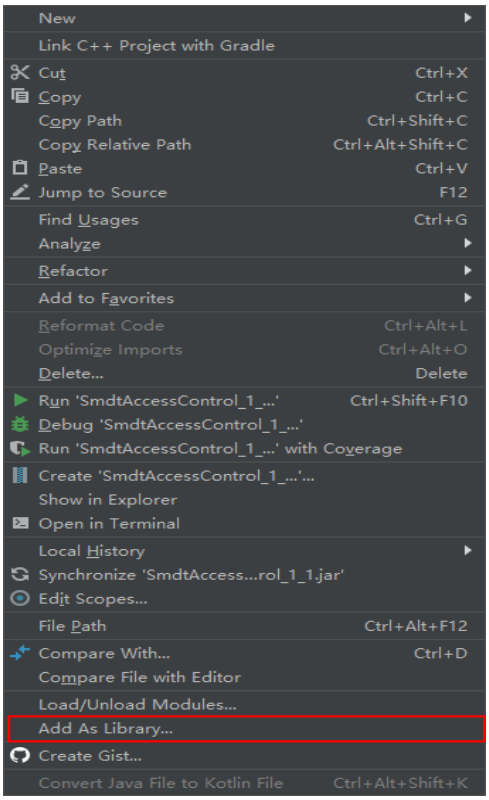

Note: All api calls

SmdtManager smdt = SmdtManager.create(this);

```
started with the SMDT API
 First declare the SmdtManager object, and then you can start using
the API. For example:
//declare the SmdtManager object
private SmdtManager smdt ;
smdt = SmdtManager.create ( this ) ;

//
use API smdt.setRelayIoValue ( 0 ) ;
```

4. SDK interface functions

4.1. public int smdtSendCard(String idCard , int transformat)

Description: Wiegand interface operation, the parameter is ID card number .

API version implementing this interface : V1.1

parameter name / return value	type	illustrate	Example
idCard	String	card number	2147584137
transformat	int	Format: Wiegand 26=1, Wiegand 34=2;	1
return value	int	success : 0, failure: -1	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
smdt .smdtSendCard( "2147584137" , 1 ) ;
```

4.2. public int smdtSendCard(String HID_value, String PID_value, int transformat)

Description: Wiegand interface operation, the parameter is the public code hidden code .

API version implementing this interface : V1.0

parameter name / return value	type	illustrate	Example
HID_value	String	cryptic code	001
PID_value	String	public code	34953
transformat	int	Format: Wiegand 26=1, Wiegand 34=2;	1
return value	int	success : 0, failure: -1	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
```

```
smdt .smdtSendCard( "001" , "34953" , 1 ) ;
```

4. 3. public String smdtReadWiegandData ( )

Description: Get Wiegand input, this is a blocking method, use the following parameters.

API version implementing this interface : V1.0

parameter name / return value	type	illustrate	Example
return value	String	Return Wiegand Card Number	Such as: 4017669612

Note: Blocking method, swiping the card once will trigger once, it is recommended to open a thread in the Service to monitor all the time

example:

```
private class ReadThread extends Thread {
    @Override
    public void run() {
        while (!isInterrupted()) {
            String result = smdt.smdtReadWiegandData();
            if (result == null || result.equals("")||
        result.equals("0")) {
                Log.i(TAG, "result ==== null...........");
                continue;
            }
            Log.i(TAG, "result =======" + result);
         }
    }
}
```

when using it:

```
mReadThread = new ReadThread() ;
mReadThread .start () ;
```

end :

```
@Override
protected void on Stop () {
    super .onPause() ;
if ( mReadThread != null ) {
        mReadThread .interrupt() ;
//Version 1.5 and later can use the following code to exit the
blocking function in time smdtReadWiegandData ()
```

```
        smdt.smdtReleaseWiegandRead () ;
    }
}
```

4. 4. public int smdtReleaseWiegandRead()

Description: Actively exit the blocking method smdtReadWiegandData(), which can only be used after version 1.5.

API version implementing this interface : V1. 5

parameter name / return value	type	illustrate	Example
return value	int	success: 0 fail: -1	Such as: 4017669612

4. 5. public String[] smdtGetCameraVidPid(int cameraId)

Description: Read camera VID, PID interface

API version implementing this interface : V1.0

parameter name / return value	type	illustrate	Example
cameraId	int	Camera ID value	0
return value	String []	string[0] means vid, string[1] means pid	

be careful:

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
String[] results = smdt .smdtGetCameraVidPid( 0 ) ;

Result: results[0]=34b3 ,results[1]=53a9
```

4. 6. public int setLedLighted(String ledColor, boolean lighted)

Description: Fill light operation (new API) -- white light, red light, green light . Only available after version 1.5

API version implementing this interface : V1. 5

parameter name / return value	type	illustrate	Example
ledColor	String	SmdtManager.LED_WHITE white light SmdtManager.LED_RED red light SmdtManager.LED_GREEN green light	
lighted	boolean	true: turn on the lights false: turn off the lights	1
return value	int	success : 0, Failed: -1	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
smdt.setLedLighted ( SmdtManager.LED_WHITE , true ) ;
```

4. 7. public int s etControl(int type, int values)

Description: Fill light operation -- white light . (It is recommended to use setLedLighted for versions after 2019-12-26)

API version implementing this interface : V1.0

parameter name / return value	type	illustrate	Example

type	int	fixed at 3	
values	int	0: off, 1: on	1
return value	int	success : 0, failure: -1	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
smdt.setControl ( 3 , _ _ 0 ) ;
```

4. 8. public int smdtSetUsbPower(int type, int num, int values)

Description: Fill light operation -- red light . (It is recommended to use setLedLighted for versions after 2019-12-26)

API version implementing this interface : V1.0

parameter name / return value	type	illustrate	Example
type	int	fixed at 1	
num	int	Firmware is 3	
values	int	0: off, 1: on	1
return value	int	success : 0, failure: -1	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
smdt .smdtSetUsbPower( 1 , 3 , 1 ) ;
```

4. 9. public int smdtSetGpioDirection(int gpioNumber, int direction, int value)

Description: Fill light operation -- green light . (It is recommended to use setLedLighted for versions after 2019-12-26)

API version implementing this interface : V1.0

parameter name / return value	type	illustrate	Example
gpioNumber	int	fixed at 4	
direction	int	fixed at 1	
values	int	0: off, 1: on	1
return value	int	success : 0, failure: -1	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
smdt .smdtSetGpioDirection( 4 , 1 , 1 ) ;
```

4. 10. public int setRelayIoMode(int mode, int delay);

Description: Relay mode and delay settings .

API version implementing this interface : V1.1

parameter name / return value	type	illustrate	Example
mode	int	model: 0: Indicates no automatic closing mode, that is, it will not automatically close after opening the relay 1: Indicates automatic closing mode (high effective - default low level, then high level for X seconds, and finally low level), that is, after opening the relay, it will automatically close after a delay of X seconds 2: Indicates automatic closing mode (low effective - default low level, then high level for X seconds, and finally low level), that is, after opening the relay, it will automatically close after a delay of	

		X seconds	
delay	int	The delay of automatic closing mode, the unit is s, the maximum is 63s	5
return value	int	success : 0, failure: -1	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
smdt .setRelayIoMode (1,5) ; //Auto mode, automatically close in five seconds
smdt .setRelayIoValue (1) ; //In automatic mode, both 0 and 1 can open the relay
```

4. 11. public int setRelayIoValue(int value);

Description: Turns the relay on or off .

API version implementing this interface : V1.1

parameter name / return value	type	illustrate	Example
value	int	Non-electric closing mode, 0 means close the relay, 1 means open the relay. In auto-close mode, calling this method will open the relay.	
delay	int	The delay of automatic closing mode, the unit is s, the maximum is 63s	5
return value	int	success : 0, failure: -1	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
smdt .setRelayIoMode (0,5) ; //Non-automatic mode, the delay parameter is invalid
smdt .setRelayIoValue (1) ; //Open the relay
smdt .setRelayIoValue (0) ; //Close the relay
```

4.12. public int getRelayIoMode();

Description: In non-automatic mode, get the state of the relay

API version implementing this interface : V1.0

parameter name / return value	type	illustrate	Example
return value	int	0 means off state, 1 means on state	

example:

```
SmdtManager smdt = SmdtManager.create ( this ) ;
int status = smdt . getRelayIoMode (); //Get the status of the relay
```