


Star 1000

STARSIGNAL VEHICLE PRODUCTS

Model 1550

Driver

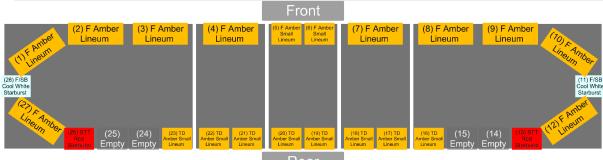


Rear

Position 01 Position 02 Position 03 Position 04 Position 05 Position 06 Position 07 Position 08 Position 09 Position 10 Position 11 Position 12 Position 13 Position 13	Light Head Type and Style Amber Lineum Amber Lineum Amber Lineum Amber Lineum Amber Small Lineum Amber Small Lineum Amber Lineum Amber Lineum Amber Lineum Cool White Starburst Amber Lineum Red Starburst	Amperage 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550
Position 15 Position 16 Position 17 Position 18 Position 20 Position 21 Position 22 Position 23 Position 24 Position 26 Position 26 Position 27 Position 28	Amber Small Lineum Cool White Starburst	0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550


Customer	Order Number / PO	Order Date Jun 23, 2015
Order Notes		

Model 1550 Production Copy - Bill of Materials

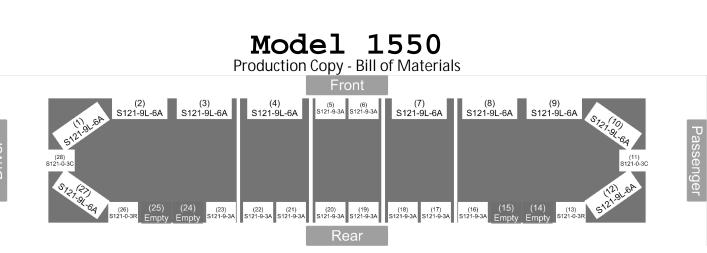


Quantity	Component	Description
10	S121-9L-6A	Amber Lineum
10	S121-9-3A	Amber Small Lineum
2	S121-0-3C	Cool White Starburst
2	S121-0-3R	Red Starburst

Wiring Diagram

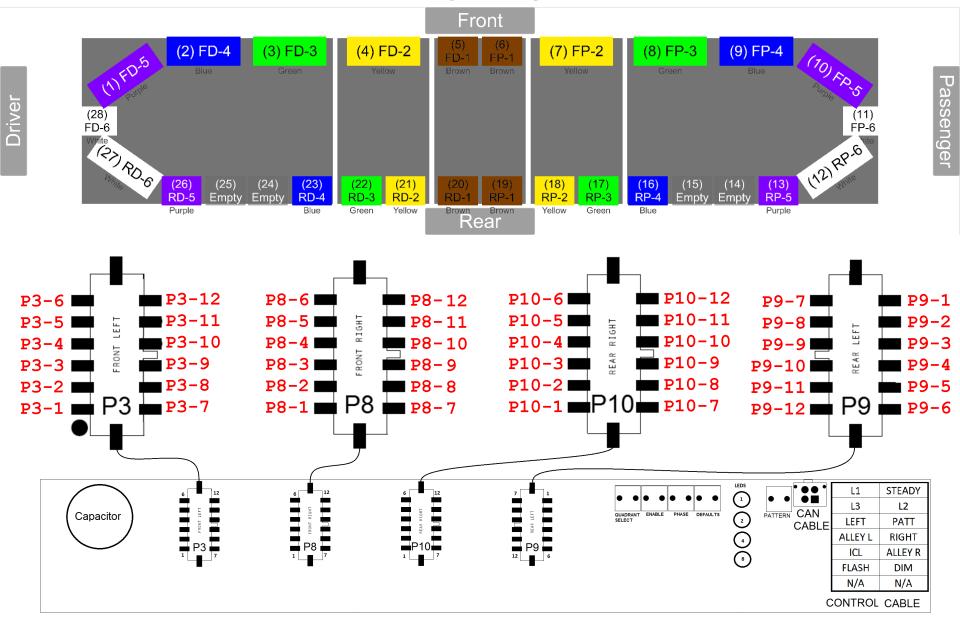

Bar Programming

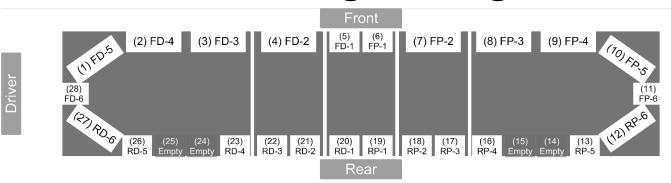

Input Map

Default Program 5 Level 1 Takedown / Work Lights
Level 2 Flashing Alley & Pursuit
Pattern
Turn Left Turn Right
Left Alley Direct Left Direct Right

Default Program 5

Passenger

Function Definitions

Function	Positions		Pattern(s)	
	Phase A	Phase B	Pattern(s)	
Takedown / Work Lights				
Level 1	RP-1 thru -6	RD-1 thru -6	Slow Triple	
Level 2	FP-1 thru -6, RP-5 thru -6	FD-1 thru -6, RD-5 thru -6	Quadruple w/ Post Pop	
Direct Left	RP-1 thru -4, RD-1 thru -4		Snake	
Direct Right	RP-1 thru -4, RD-1 thru -4		Snake	
Left Alley			Steady Burn	
Right Alley			Steady Burn	
Flashing Pursuit				
Flashing Alley				
Turn Left	RD-5		Steady Burn	
Turn Right	RP-5		Steady Burn	
Brake Lights	RP-5, RD-5		Steady Burn	