


IV Swinger 2

User Guide

Document Revision: 1.03 (26-Apr, 2017)

Chris Satterlee

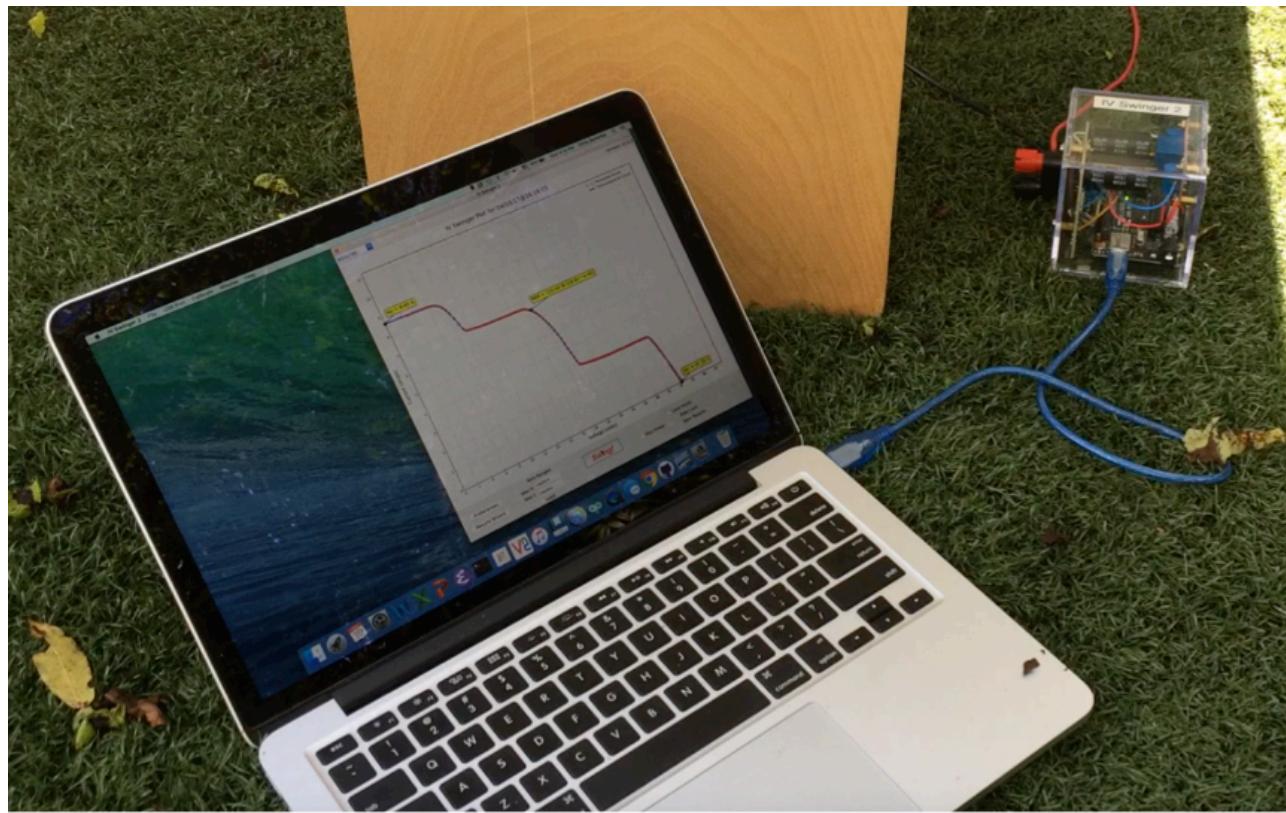

Copyright (C) 2017 Chris Satterlee

IV Swinger and IV Swinger 2 are open source hardware and software projects.

Permission to use the hardware design is granted under the terms of the TAPR Open Hardware License Version 1.0 (May 25, 2007) - <http://www.tapr.org/OHL>

Permission to use the software is granted under the terms of the GNU General Public License v3 - <http://www.gnu.org/licenses>.

Current versions of the license files, documentation, Fritzing file (hardware description), and software can be found at:

https://github.com/csatt/IV_Swinger

Table of Contents

1	YouTube Demo Videos / Quick Start	5
1.1	YouTube Demo Videos	5
1.2	Quick Start	5
2	Introduction.....	6
3	Visual Tour of the Hardware	8
3.1	USB Port.....	8
3.2	Binding Posts / PV Connection Cables	8
3.3	Innards.....	9
3.3.1	Circuit Board with Load Capacitors	9
3.3.2	Arduino UNO	10
3.3.3	Relay Module.....	11
4	Using the IV Swinger 2 Software	12
4.1	Main Window	12
4.1.1	Swing! Button	13
4.1.2	Results Wizard Button	13
4.1.3	Preferences Button.....	14
4.1.4	Plot Power Button	14
4.1.5	Loop Mode Controls	15
4.1.6	Axis Ranges Control	16
4.1.7	Image Size Control.....	16
4.1.8	Version.....	17
4.2	Tooltips	17
4.3	Menus.....	17
4.3.1	About Menu (Windows)	18
4.3.2	IV Swinger 2 Menu (Mac)	18
4.3.3	File Menu.....	19
4.3.4	USB Port Menu	19
4.3.5	Calibrate Menu	19
4.3.6	Help Menu	20
4.4	Results Wizard Dialog.....	21
4.4.1	Expanding and Collapsing Date Groups	21
4.4.2	Selecting Runs	22
4.4.3	Changing the Title.....	23
4.4.4	Overlaying Multiple Runs	24
4.4.4.1	Changing Overlay Plotting Options	25
4.4.4.2	Saving Overlays	25
4.4.5	Viewing the PDF	26
4.4.6	Batch Updates	26
4.4.7	Deleting Runs.....	27
4.4.8	Copying Runs	28
4.4.9	Changing Where to Look for Runs	30
4.4.10	Creating a Desktop Shortcut to Runs Folder	32
4.5	Preferences Dialog	33
4.5.1	Plotting Preferences Tab	34
4.5.1.1	Line type	34
4.5.1.2	Isc, MPP, Voc labels	35
4.5.1.3	Font scale, Line scale, and Point scale	35
4.5.1.4	ADC correction.....	35

4.5.2	Looping Preferences Tab	36
4.5.3	Arduino Preferences Tab	37
4.5.3.1	SPI clock freq.....	37
4.5.3.2	Max IV points	37
4.5.3.3	Min Isc ADC.....	38
4.5.3.4	Max Isc poll	38
4.5.3.5	Isc stable ADC	38
4.5.3.6	Max discards	38
4.5.3.7	Aspect height	38
4.5.3.8	Aspect width	38
4.6	Folders and Files	38
4.6.1	IV_Swinger.cfg file	39
4.6.2	Logs folder	39
4.6.3	Run folders and files	39
4.6.3.1	IV_Swinger.cfg	39
4.6.3.2	iv_swinger2_yymmdd_hh_mm_ss.pdf.....	39
4.6.3.3	iv_swinger2_yymmdd_hh_mm_ss.gif	39
4.6.3.4	iv_swinger2_yymmdd_hh_mm_ss.csv	39
4.6.3.5	adc_pairs_yymmdd_hh_mm_ss.csv	40
4.6.4	Overlays folder	40
4.6.4.1	overlaid_yymmdd_hh_mm_ss.pdf.....	40
4.6.4.2	overlaid_yymmdd_hh_mm_ss.gif	40
5	Known Bugs	41
5.1	Gap between second and third points	41
5.2	Tail of curve only.....	42
6	Ratings and Limitations.....	43
7	Laptop Software Installation	44
7.1	Mac.....	44
7.1.1	IV Swinger 2 application (Mac).....	44
7.2	Windows.....	44
7.2.1	IV Swinger 2 application (Windows).....	44
7.2.2	Arduino driver (Windows)	44

Table of Figures

Figure 2-1: Typical IV Curve of Unshaded PV Module	6
Figure 3-1: USB Port.....	8
Figure 3-2: Binding Posts and PV Cables	9
Figure 3-3: Circuit Board with Load Capacitors	10
Figure 3-4: Arduino UNO	10
Figure 3-5: Relay Module	11
Figure 4-1: Main Window (annotated).....	12
Figure 4-2: IV Curve with Power Plotted.....	14
Figure 4-3: Results Wizard Dialog.....	21
Figure 4-4: Expanding a Date Group	22
Figure 4-5: Selecting a Run	23
Figure 4-6: Changing the Title of a Run	24
Figure 4-7: Creating an Overlay.....	25
Figure 4-8: Copying Runs to a USB Drive (Mac).....	29
Figure 4-9: Copying Runs to a USB Drive (Windows)	30
Figure 4-10: Path to Results Folder.....	31
Figure 4-11: Changing the Path to a USB Drive	31
Figure 4-12: Path Successfully Changed to USB Drive.....	32
Figure 4-13: Making a Desktop Shortcut to Raw Results	33
Figure 4-14: Preferences Dialog.....	34
Figure 4-15: Preferences Looping Tab.....	36
Figure 4-16: Preferences Arduino Tab	37
Figure 4-17: Run folder contents.....	39

1 YouTube Demo Videos / Quick Start

1.1 YouTube Demo Videos

Part I: <https://youtu.be/WhnTWciiNNo> (7:02)

Part II: https://youtu.be/9iPq5AsuU_U (6:48)

1.2 Quick Start

1. Open the IV Swinger 2 application on your Mac or Windows laptop

Software installation instructions are on page 44. There should be a “Not connected” message below the button labeled “Swing!”

2. Connect the USB cable from the IV Swinger 2 hardware to the laptop

The “Swing!” button on your screen should change to red text and the “Not connected” message should disappear.

3. Connect the PV panel to the cables

Take care to connect the positive (+) cable from the panel to the female IV Swinger cable (RED binding post) and the negative (-) cable from the panel to the male IV Swinger cable (BLACK binding post).

4. Establish the desired PV panel conditions

i.e. angle, shading, etc. Also at this point, take any other desired measurements such as insolation and temperature.

5. Click on the “Swing!” Button

The IV curve will be displayed on the screen. Repeat as many times and as often as desired. All results are saved and can be viewed, copied, combined, modified, etc. later.

- "Plot Power" can be checked to include the power curve on the graph. This can be done after the fact too.
- "Loop Mode" can be checked to repeatedly swing IV curves. "Rate Limit" can be checked to slow down the looping rate to a specified interval. Since looping can generate a lot of data and image files, the default is to not save the results. "Save Results" can be checked to override this default.

6. Click on the “Results Wizard” Button

A dialog window will open with options to:

- View results of previous runs
- Combine multiple curves on the same plot (overlays)
- Modify the title and appearance of curves and overlays
- Copy them to a USB drive (or elsewhere)
- View the PDF

The Results Wizard does not require the hardware to be connected. In fact it can be run on results that were collected by a different computer and copied to a USB drive.

2 Introduction

Like the first-generation IV Swinger, IV Swinger 2 automates the process of tracing the IV curve of a single photovoltaic (PV) solar panel.

The IV curve is a graph of current versus voltage for various load values driven by the PV panel. A typical IV curve of an unshaded PV panel looks like this:

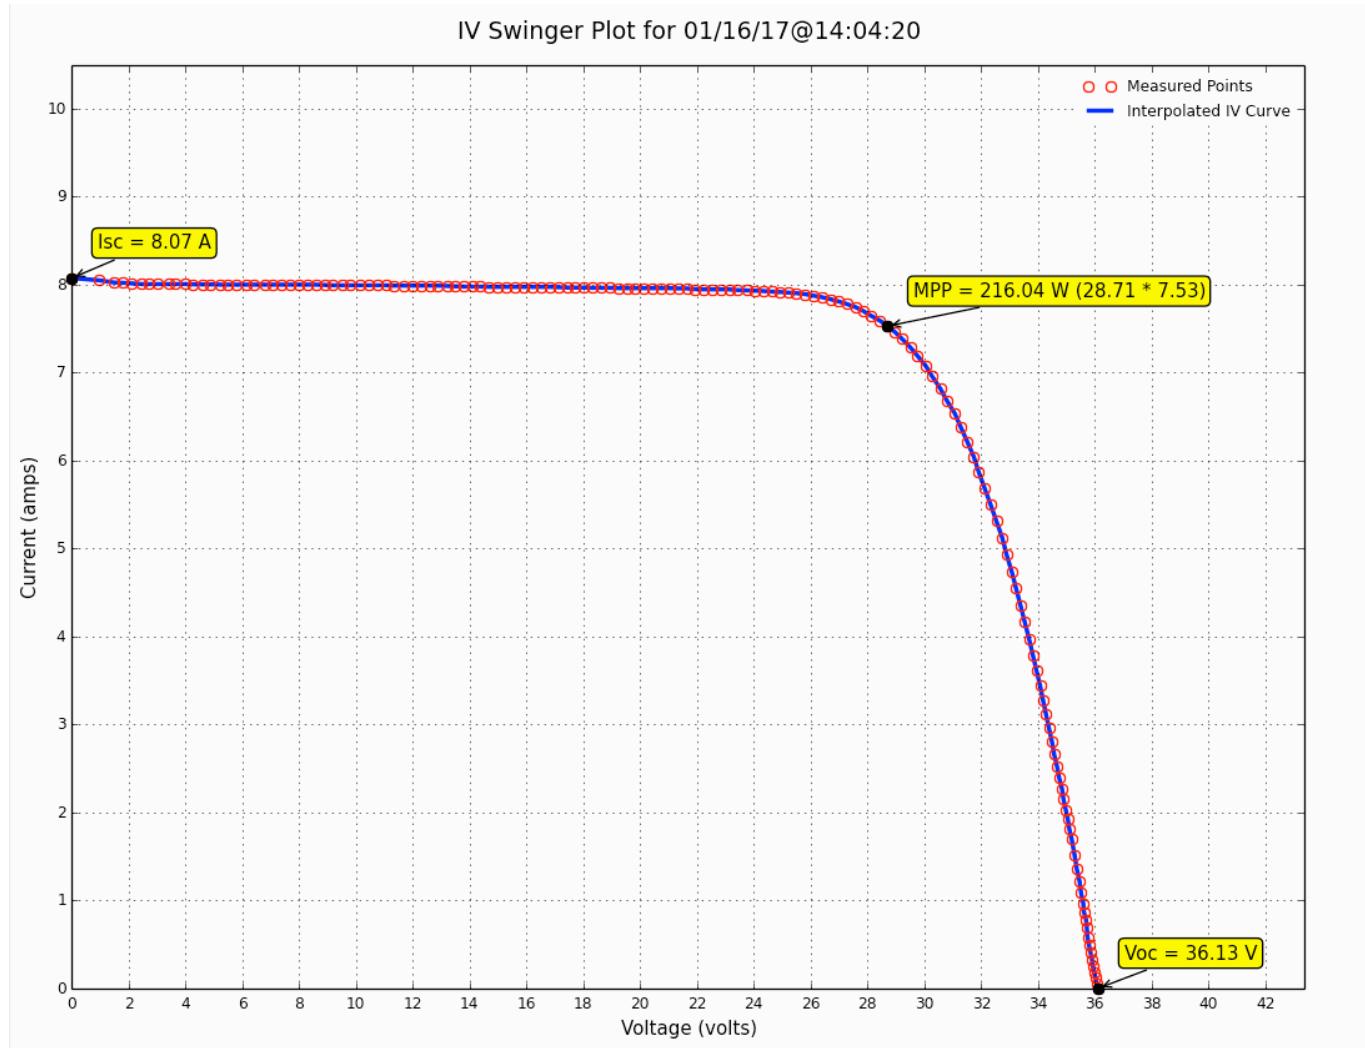


Figure 2-1: Typical IV Curve of Unshaded PV Module

At one extreme there is the short-circuit current (I_{sc}), which is the current delivered by the PV when the leads are directly connected to each other (in which case the load is 0 ohms and the voltage is 0 volts). At the other extreme is the open-circuit voltage (V_{oc}), which is the voltage across the PV terminals when there is no connection between them (in which case the load is infinite and the current is 0 amps). Between these two points is a curve dependent on the load (resistance) connected between the PV terminals. As seen above, the typical IV curve is a fairly horizontal line declining slightly from I_{sc} as the voltage increases and then declining steeply when the voltage nears V_{oc} . Power is the product of current and voltage. No power is delivered when the circuit is shorted (since the voltage is 0) and no power is delivered when the circuit is open (since the current is 0). The maximum power is delivered for the load value at the “knee” of the curve. One purpose of generating an IV curve is to determine the maximum power that a given panel can generate under a given set of conditions (such as insolation and

temperature). Plotting the IV curves for different conditions including shading is an important lab exercise in courses teaching principles of photovoltaic operation

Manual generation of an IV curve is a fairly tedious (albeit educational) process. First the I_{sc} and V_{oc} values are measured with a multimeter. Then the PV panel is connected to a variable load. This can be a bank of light bulbs that may be switched into or out of the circuit. Or it can be a heavy-duty rheostat. The load value is incrementally changed, and at each point the meter is used to measure the current and voltage, which are recorded manually. Then the values are typed into a spreadsheet and plotted. Performing this process by hand at least once is a good way to get a real feel for what is going on. But it is time-consuming, subject to human error, subject to changing conditions, etc.

The IV Swinger is named for the process of “swinging out an IV curve”, which is how Gil Masters describes it in his CEE176B class at Stanford. The first generation IV Swinger uses immersion heating coils for the loads, and a Raspberry Pi single-board computer to control relays that switch the loads into and out of the circuit. It has built-in voltmeter and ammeter hardware that are read by the software at each load value. The results are written to a USB thumb drive for later viewing.

IV Swinger 2 is a completely different design. It uses a capacitor as the load. A discharged capacitor “looks” like a short circuit (zero resistance). But as it charges up, its apparent resistance increases. When it is fully charged, it “looks” like an open circuit (infinite resistance). A typical PV module in full sun will charge the capacitor up to the V_{oc} voltage in a matter of milliseconds. An Arduino UNO microcontroller board is used to control a single relay that switches between bleeding the charge from the capacitor to connecting the PV module across it. After switching the PV module into the circuit, the Arduino very quickly reads from the voltmeter and ammeter hardware repeatedly to record points on the IV curve as the capacitor charges up.

IV Swinger 2 requires a Mac or Windows laptop to be connected to it by a USB cable. The power for the Arduino and other circuitry come through the USB cable. An application program running on the laptop communicates with the Arduino via the USB cable and provides the interface to the user.

Although IV Swinger 2 is not quite as easy to relate to the manual method as the original IV Swinger, it has many advantages:

- Real time results
- Much better resolution (>100 points per curve vs. ~20)
- Much lower time to swing a curve (milliseconds vs seconds)
- Much smaller size and lower weight
- Simpler user interface
- Simpler, more reliable and repairable design
- More flexible connectivity (binding posts)
- Much lower cost to build (\$50 vs \$330)
- Much less time and effort to build

3 Visual Tour of the Hardware

3.1 USB Port

On the front of the IV Swinger 2 is a single “Type B” USB port/jack. This how the IV Swinger 2 connects to the host laptop computer both for power and communication. Note that when the USB cable is plugged into this port, the lid is “locked” onto the case and when the cable is unplugged, the lid may be removed.

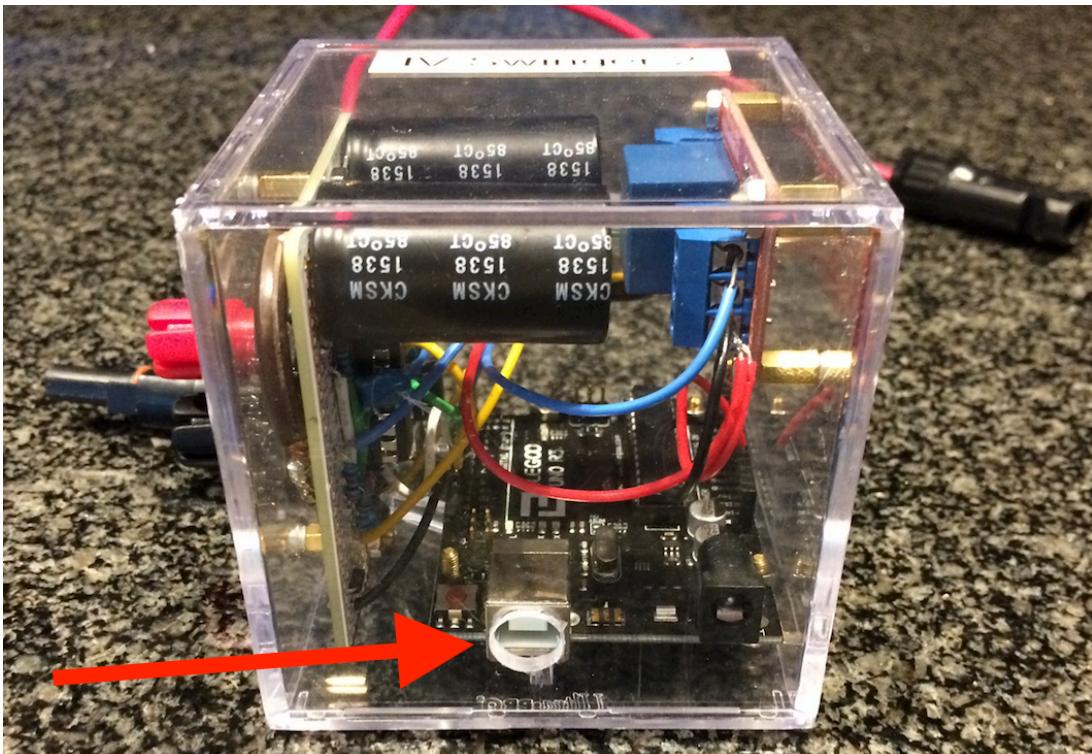


Figure 3-1: USB Port

3.2 Binding Posts / PV Connection Cables

On the lower left side, at the rear, are the RED and BLACK binding posts. The RED post connects to the positive module cable (PV+) and the BLACK post connects to the negative module cable (PV-). The PV connection cables are inserted into the holes in the binding posts at the back, and the knobs tightened down. Make sure the connection cable with the female MC4 connector is connected to the RED binding post and the cable with the male MC4 connector is connected to the BLACK binding post. The binding posts allow for the flexibility of using different length PV connection cables or even non-MC4 connections such as banana plugs, but you have to be careful to get the polarity correct.



Figure 3-2: Binding Posts and PV Cables

3.3 Innards

3.3.1 Circuit Board with Load Capacitors

The white “Perma-Proto” board on the side with the binding posts contains the following:

- 2000 μ F load capacitance (two 1000 μ F capacitors in parallel)
- Bleed resistor. Between tests, the relay connects this resistor across the capacitors to drain them of all charge.
- Analog-to-Digital Converter (ADC) for voltmeter and ammeter
- Shunt resistor (on back). This is used for the ammeter. It is a precise low-resistance (.005 Ω) resistor that is in the load circuit. The voltage across it is measured by the ADC (after amplification by the op amp circuit). Ohm’s Law is then used to calculate the measured current.
- Voltage divider circuit to scale the PV voltage down to the range supported by the ADC
- Op amp circuit to scale the voltage across the ammeter shunt resistor up to the range supported by the ADC

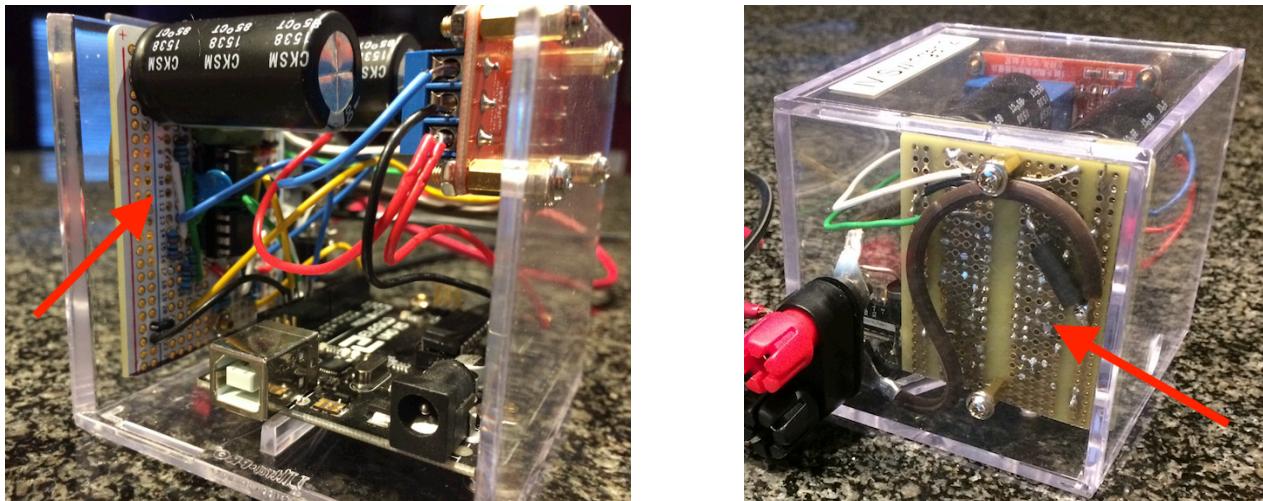


Figure 3-3: Circuit Board with Load Capacitors

3.3.2 Arduino UNO

The Arduino UNO is the board (with the USB port) mounted to the bottom of the case. This is a very inexpensive (~\$10) and ubiquitous microcontroller that is a staple of the “maker” community. It runs software that communicates with the host laptop computer over USB. When instructed by the laptop, it runs the algorithm for swinging the IV curve. This algorithm consists of activating the relay and repeatedly reading the ammeter and voltmeter values from the ADC while the capacitor charges up. When the points have all been measured, the values are uploaded to the laptop.

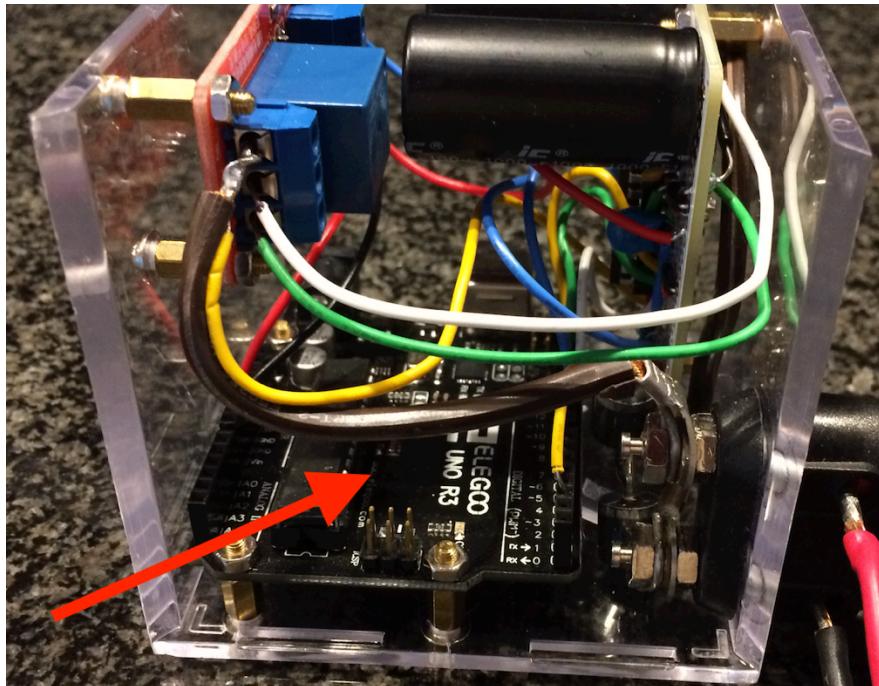


Figure 3-4: Arduino UNO

3.3.3 Relay Module

The relay is controlled by the Arduino software to switch what is across the capacitor load: the bleed resistor or the PV module. The bleed resistor is selected most of the time. The load capacitor is selected only for the brief amount of time that the IV curve is being traced. A relay is a physical switch operated by an electromagnet. You can hear it “click” when it switches. The two clicks (representing the beginning and end of the IV curve) will be very close together in most cases (“click-click”). But in low sun cases, there can be several seconds between the two clicks since the capacitor load takes a lot longer to charge up to the Voc voltage.


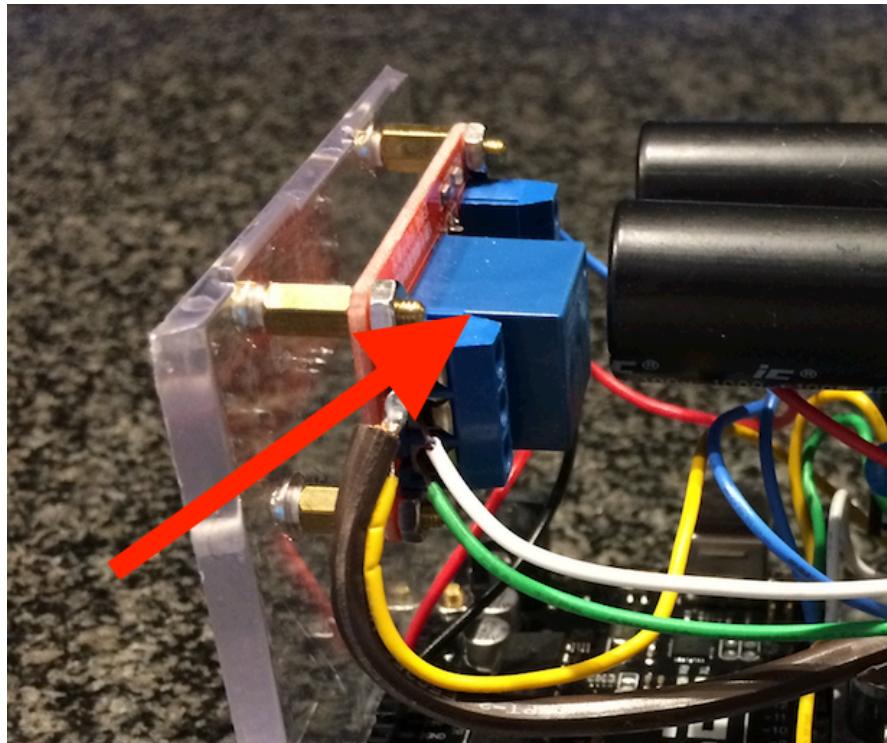


Figure 3-5: Relay Module

4 Using the IV Swinger 2 Software

The IV Swinger 2 software application runs on a Mac or Windows laptop. If it is already installed, you can recognize it from its icon:

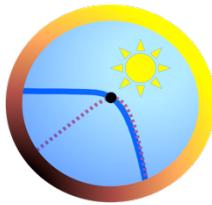

On a Mac, the program will be in the Applications folder. On Windows, it will be in the standard place that your version of Windows keeps programs (e.g. the “Program Files (x86)” folder).

If the application is not already installed, see the *Laptop Software Installation* section on page 44 of this document.

4.1 Main Window

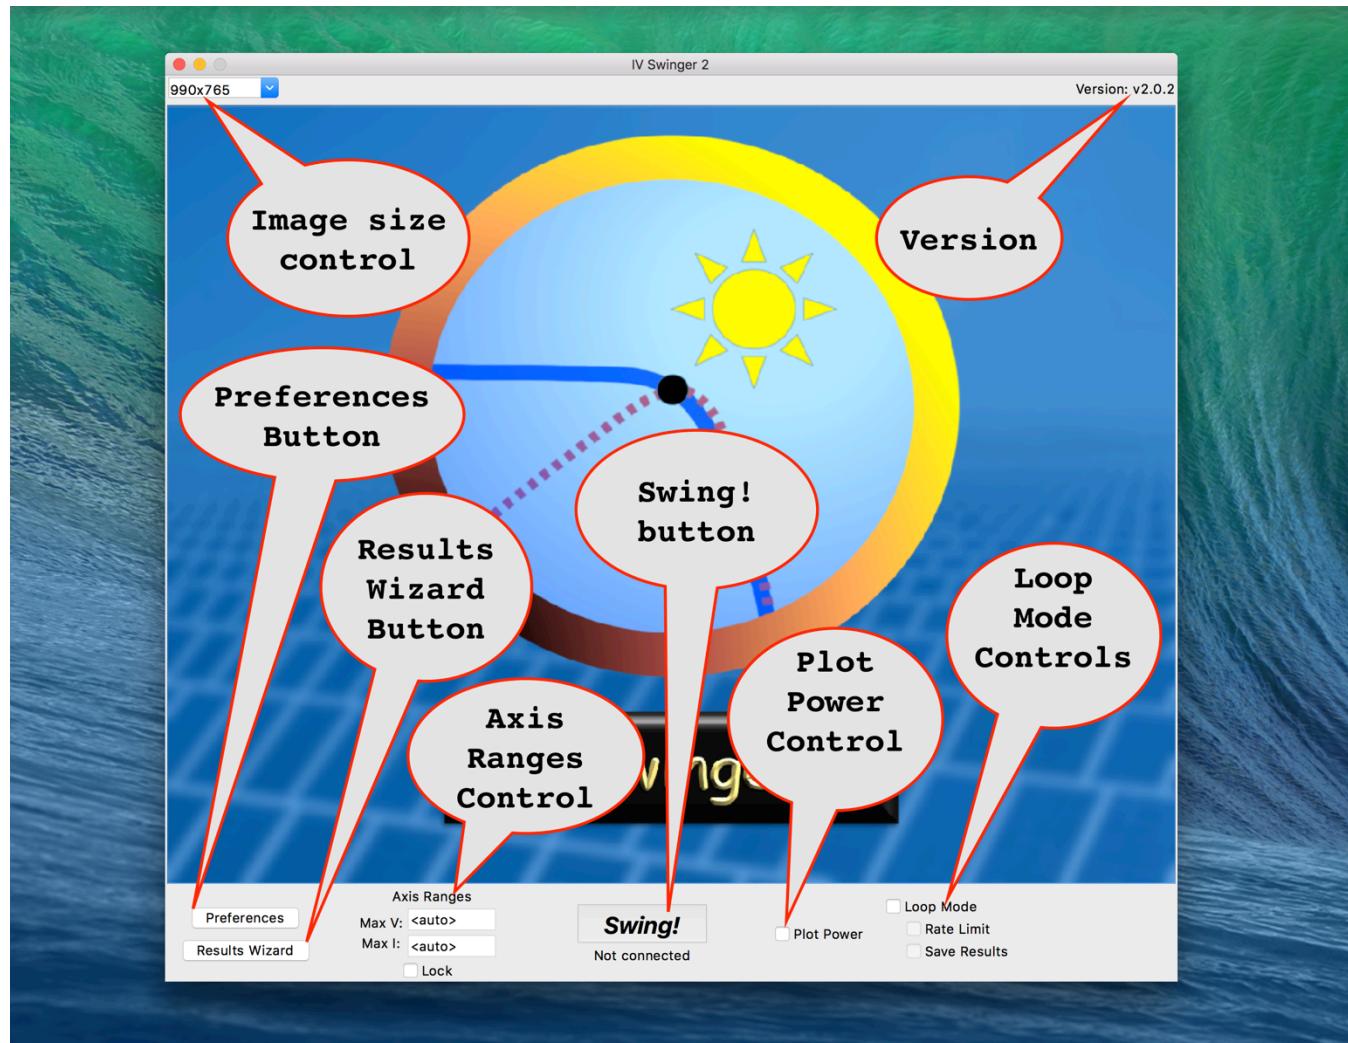


Figure 4-1: Main Window (annotated)


When the application is first opened, a “splash screen” with the logo and title is displayed. The annotated image in Figure 4-1 above is from the Mac version. The Windows version is the same other than the standard window control buttons and the fact that Windows includes the menus on the window itself¹. In order of importance, the annotated items are as follows:

4.1.1 Swing! Button

The Swing! button is used to initiate the tracing of an IV curve. Before the IV Swinger 2 hardware is connected, the button looks like this:




The button cannot be pressed until the hardware is connected and the button changes its appearance to this:

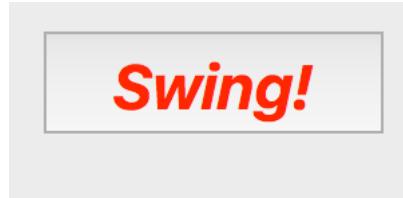

Pressing the button can be done either by clicking it with the mouse or by pressing the Enter key.

4.1.2 Results Wizard Button

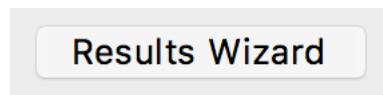

Click this button to open the Results Wizard, which is a dialog that provides options to:


- View results of previous runs
- Combine multiple curves on the same plot (overlays)
- Modify the title and appearance of curves and overlays
- Copy them to a USB drive (or elsewhere)
- View the PDF

The Results Wizard does not require the hardware to be connected. In fact it can be run on results that were collected by a different computer and copied to a USB drive.

Detailed usage instructions are provided in the Results Wizard Dialog section on page 21.

¹ Most of the screen captures in this document are from the Mac version. There are minor differences in the “look and feel” of the Windows equivalents, but no functional differences.

4.1.3 Preferences Button

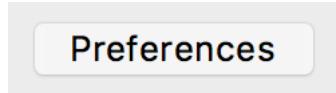

Click this button to open the Preferences Dialog, which provides options to:

- Change the appearance of the plotted graph (font size, line size, etc)
- Change the behavior of the looping option
- Change the behavior of the low-level Arduino code

Detailed usage instructions are provided in the Preferences Dialog section on page 33.

4.1.4 Plot Power Button



Check this box to display the power curve overlaid on the IV curve.


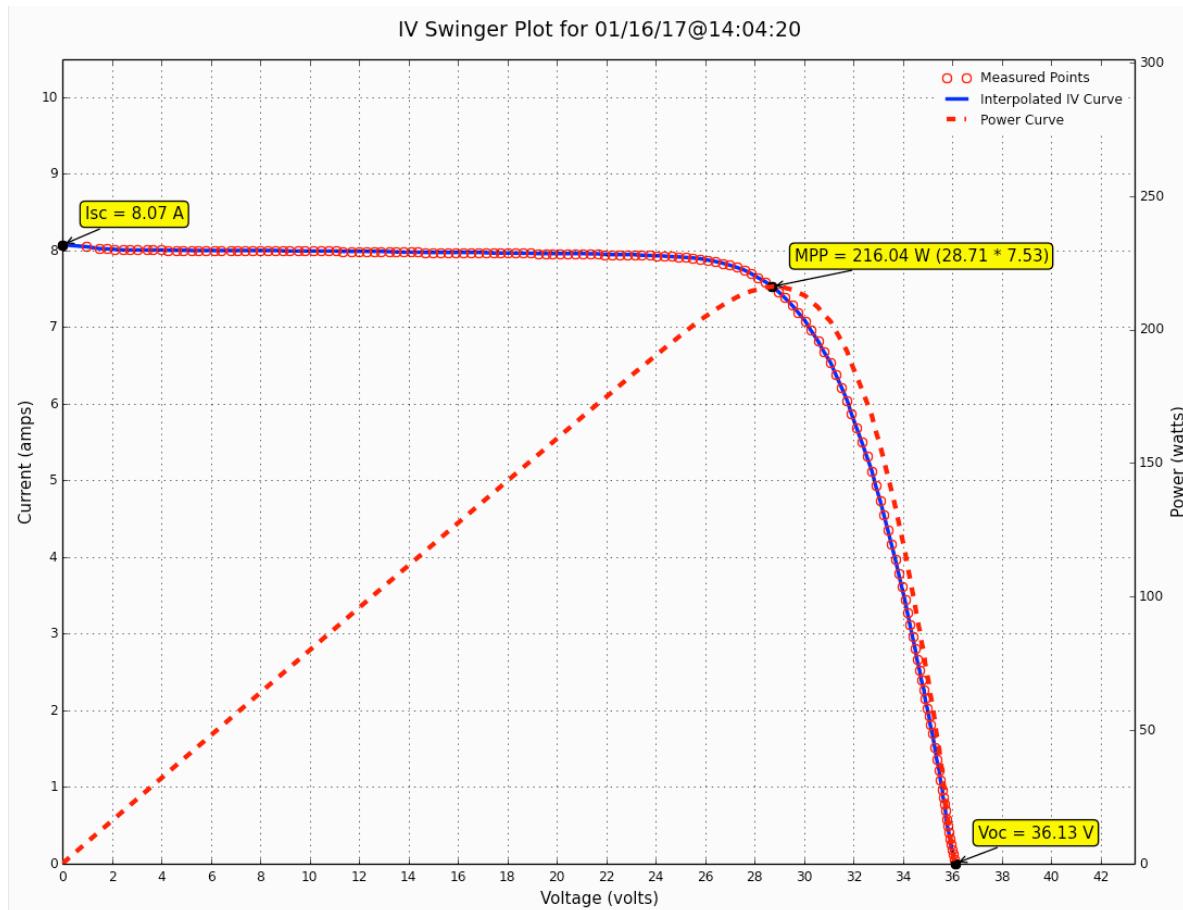


Figure 4-2: IV Curve with Power Plotted

Figure 4-2 above is an example. The graph now has a secondary vertical axis on the right indicating power in watts. This axis is scaled such that the power curve (dashed red line) intersects the IV curve at the Maximum Power Point (MPP).


4.1.5 Loop Mode Controls

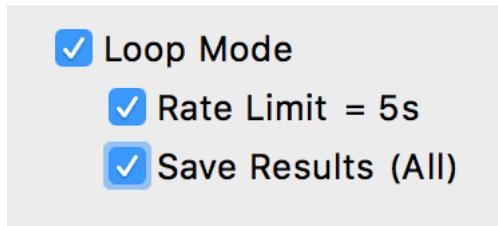


By default, pressing the Swing! button generates a single IV curve. Checking the “Loop Mode” box enables automatic repetition of the curve tracing. When this box is checked, pressing the Swing! button starts the looping. The Swing! button changes to a STOP button and the looping continues until that button is pressed.

If neither of the other two boxes are checked, a maximum of one IV curve is traced every one second and none of the results are saved. This mode can be useful to observe the effect of different types of shading in real time without cluttering your disk with all of the saved results.

If the Rate Limit box is checked, a small dialog pops up requesting the number of seconds to delay between repetitions:

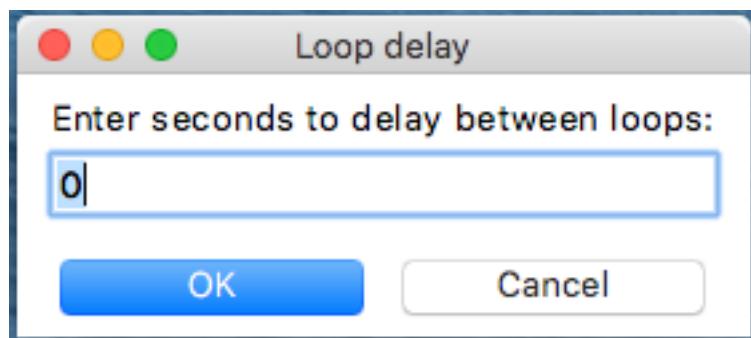


If the Save Results box is checked, the following dialog pops up:

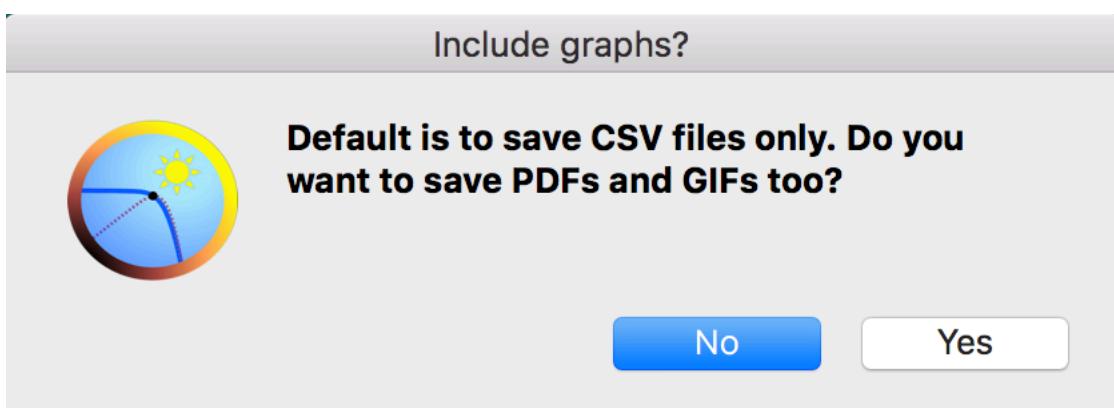


If you choose “No”, only the (very small) CSV files are saved and the graph files are not saved. However, if the Results Wizard is used to browse these results later, it will re-generate the graph files. If you choose “Yes”, the graph files will be saved too.

4.1.6 Axis Ranges Control

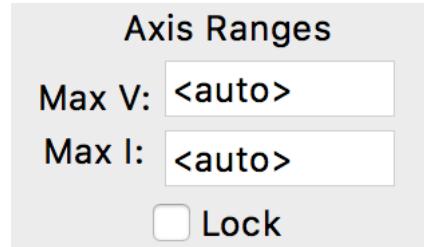

By default, the axis ranges are chosen automatically, i.e. the maximum voltage on the X-axis and the maximum current on the Y-axis are chosen so the displayed IV curve fits nicely on the graph. The axis range controls can be used to override this behavior.


The Lock box can be checked to lock the ranges to the values of the first (or most recent) run or to values entered by the user (just type the desired value and hit Enter). If the values are changed when a plot is currently displayed, it will be redrawn using the new values.

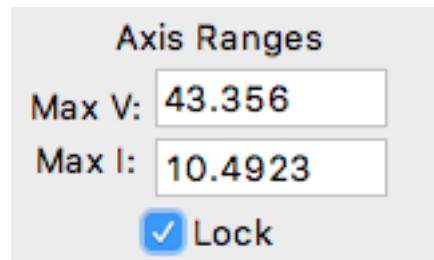

A typical use case for this would be if you want to swing a series of IV curves and see them all at the same scale. After swinging the first one in the series, check the box and then swing the others.

Note that when Loop Mode is enabled, the Lock box is automatically checked (and grayed out). This is so all iterations of the loop are plotted at the same scale so all changes from one iteration are properly visualized relative to each other.

4.1.7 Image Size Control

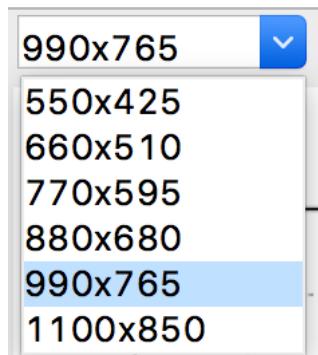

The image size control in the upper left of the main window controls the size of the displayed image in pixels (width x height). If the default size isn't a good fit for your laptop screen, use this to change it. The pull down menu has several choices. You may also just type in a size, but it must be in the ratio of 11.0 x 8.5 (actually, just type in the width and the height will be calculated for you).

Note that this only affects the size of the GIF image that is used to display the graph on your laptop screen. The PDF is always the same size: 11.0" x 8.5".


4.1.8 Version

Version: v2.0.2

The version number of the software is displayed in the upper right corner of the main window.

4.2 Tooltips


Most of the user interface tools (e.g. buttons, checkboxes, pulldowns, etc.) have "tooltips", which are little yellow pop-up help windows that appear when the mouse is hovered over the tool. For example:

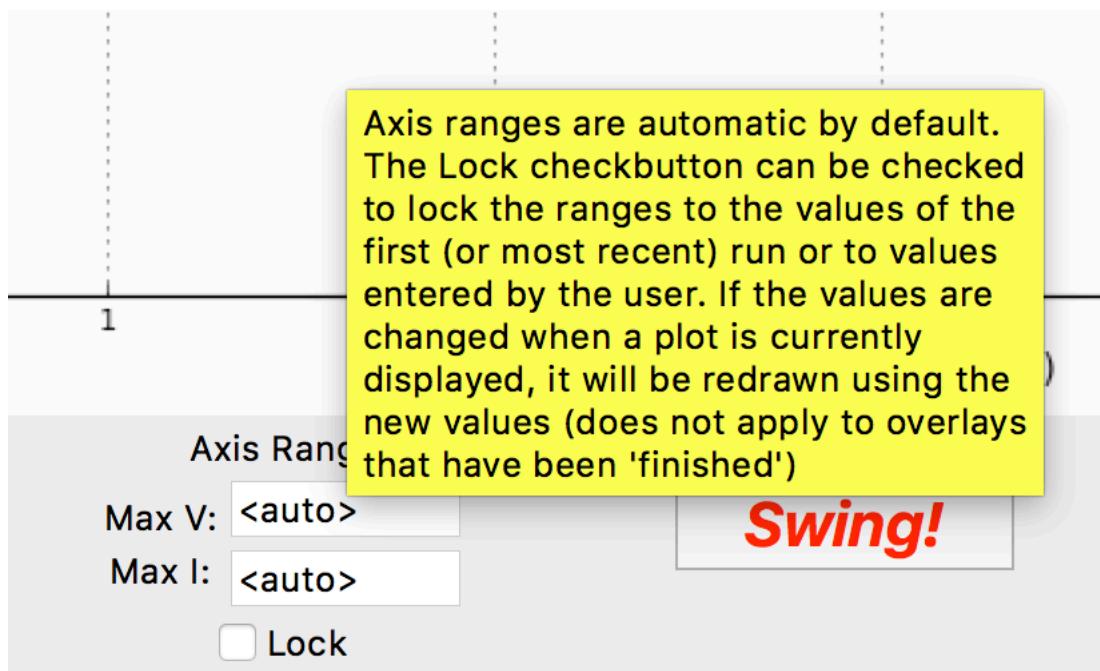


The tooltip disappears after you've had enough time to read it. But if you weren't finished, just move the mouse off and then back onto the tool and it will reappear.

4.3 Menus

As mentioned earlier, the Windows version has the menus along the top of the application window (like all Windows applications):

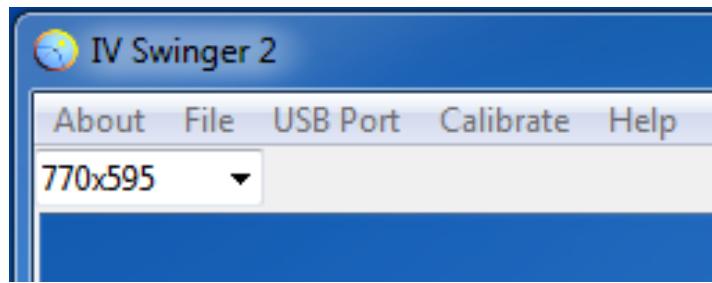

The Mac version puts the menus at the top of the screen when the application has focus (like all Mac applications):

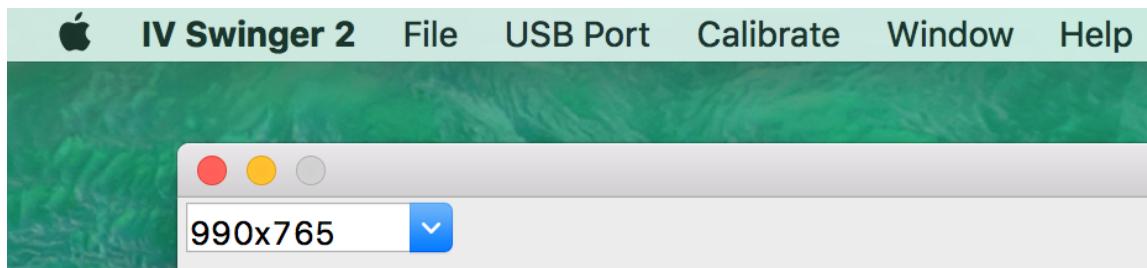

The one other minor difference is that the first menu is named “About” in the Windows version and is named “IV Swinger 2” in the Mac version. Otherwise they are identical.

4.3.1 About Menu (Windows)

This menu has only one item: “About IV Swinger 2”. This brings up a dialog with the version number, open source license info and copyright.

4.3.2 IV Swinger 2 Menu (Mac)

This menu is the typical Mac “application” menu:



The “About IV Swinger 2” item brings up a dialog with the version number, open source license info and copyright.

The others are standard for all Mac applications, but not necessarily useful. The Preferences item brings up the Preferences Dialog and is equivalent to pressing the Preferences button.

4.3.3 File Menu

The File menu currently has only one item: “View Log File”



This is not likely to be useful for general users. The log file contains debug information logged by the software.

4.3.4 USB Port Menu

The USB Port menu lists each USB port that is connected to a device. It can be used (if necessary) to tell the software what port the IV Swinger 2 is connected to.



Normally the software figures this out by itself and automatically selects the correct port, so you may never need to use this menu.


Note that if you unplug the IV Swinger 2 from one USB port and plug it into a different one while the application is running, it won't figure that out by itself and it won't list the new port in the menu list. In this case, just close the application and open it again.

4.3.5 Calibrate Menu


The Calibrate menu allows you to “correct” the open circuit voltage (Voc) and short circuit current (Isc) values of a given IV curve with values that are measured with a digital multimeter (DMM). The curve will be regenerated with Voc and Isc calibrated to the measured values, and future curves will be generated using the new calibration.

Note that IV Swinger 2 is not meant to be a precision instrument. Even when it is calibrated to measured values for a given IV curve, it may not be accurate for curves that have much higher or lower Voc and/or Isc values. Furthermore, the calibration may be affected by temperature and other factors. For the primary users of IV Swinger 2 (students learning about PV technology), a high degree of accuracy is not critical.

The calibration menu looks like this:

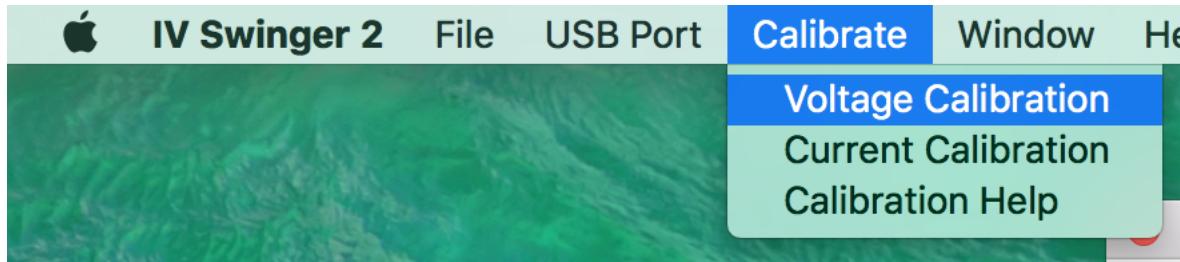

When the Voltage Calibration item is selected, the following dialog comes up:

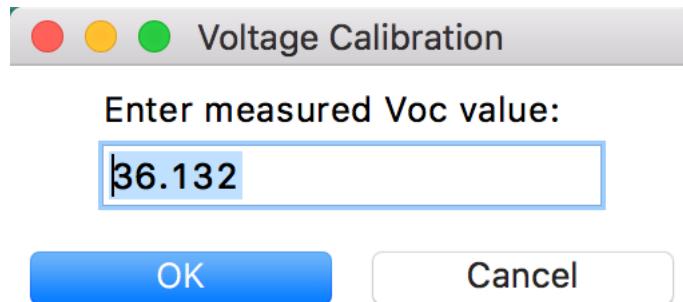

You then overtype the value with the measured value and press OK.


The Current Calibration dialog is very similar.

The Calibration Help item has detailed instructions on how to perform the calibrations with a DMM. Those instructions will not be repeated here, but are important to follow carefully.

Note that the calibration values are stored on the computer, not on the IV Swinger 2 device. So if you use the same IV Swinger 2 with more than one computer, they will all have to be calibrated². And if you use more than one IV Swinger 2 with the same computer, the calibration would have to be performed each time you switch from one to the other.

4.3.6 Help Menu

The Help menu currently has only one item: "IV Swinger 2 Help" which brings up a dialog with a very coarse overview of how to use the application.

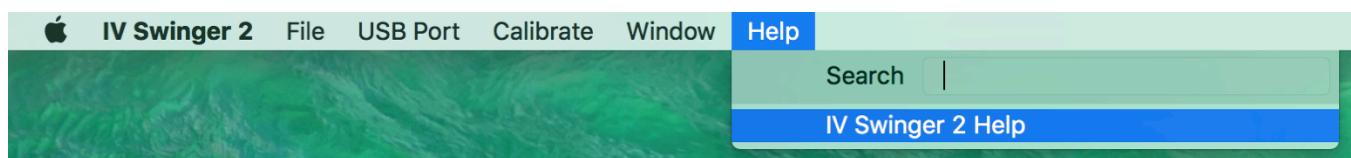

² It is possible to copy the configuration values from the IV_Swinger2.cfg file (see section 4.6.3.1 on page 39)

4.4 Results Wizard Dialog

The Results Wizard dialog is shown in Figure 4-3 below. It provides the tools for viewing results of previous runs, combining multiple curves on the same plot, modifying their title and appearance, copying them to a USB drive (or elsewhere), deleting them, etc.

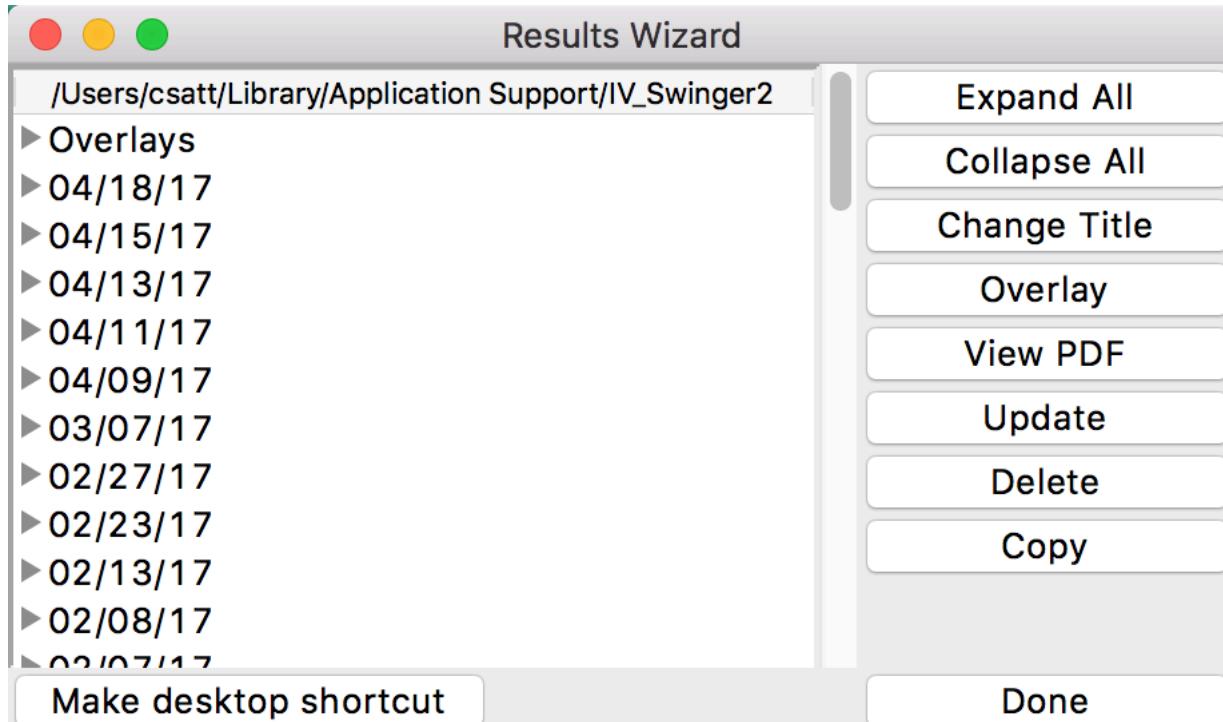


Figure 4-3: Results Wizard Dialog

4.4.1 Expanding and Collapsing Date Groups

The left hand side of the dialog is a “tree view” that groups results by the date they were captured. Each date group can be expanded or collapsed (by default all come up collapsed, as above). To expand a date group, click on the small triangle (plus sign in Windows) to its left, for example:

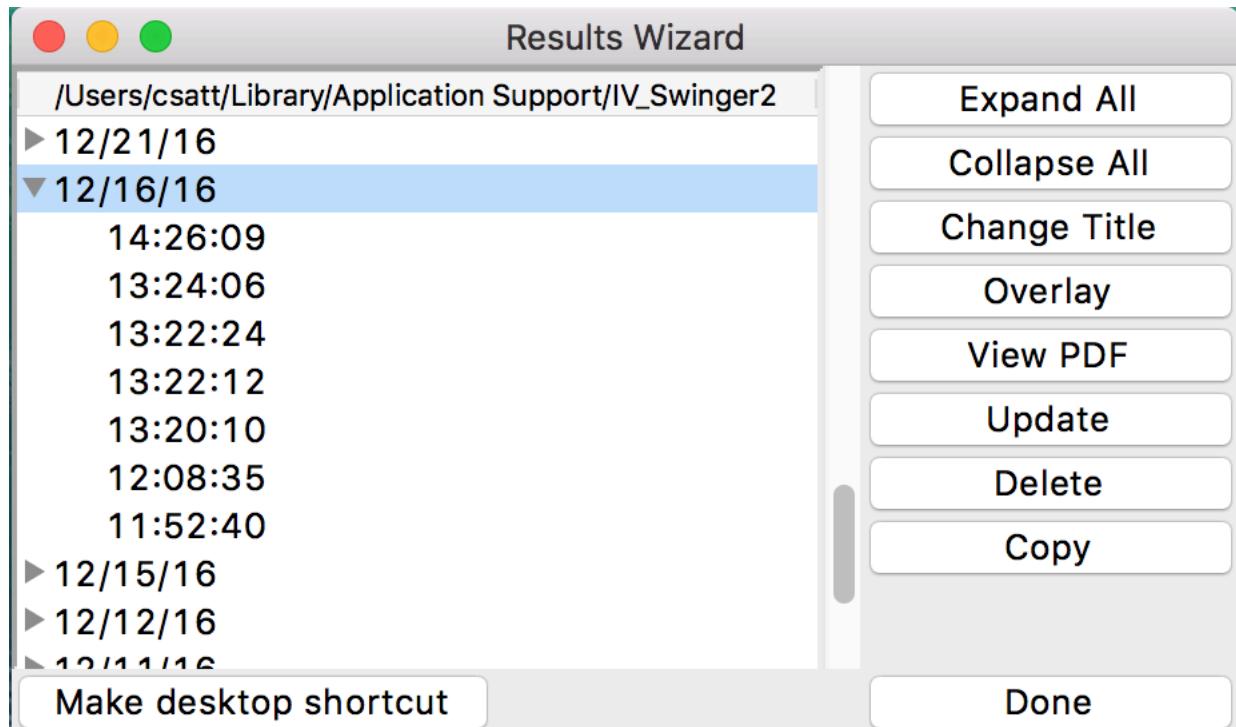


Figure 4-4: Expanding a Date Group

Within each date group are the runs that were captured on that date, labeled by the time that they were captured. Note that all runs (and date groups) are sorted from newest to oldest.

The Expand All and Collapse All buttons at the upper right expand and collapse all date groups at once.

4.4.2 Selecting Runs

Click on a single run to select it. The IV curve will be displayed in the main window:

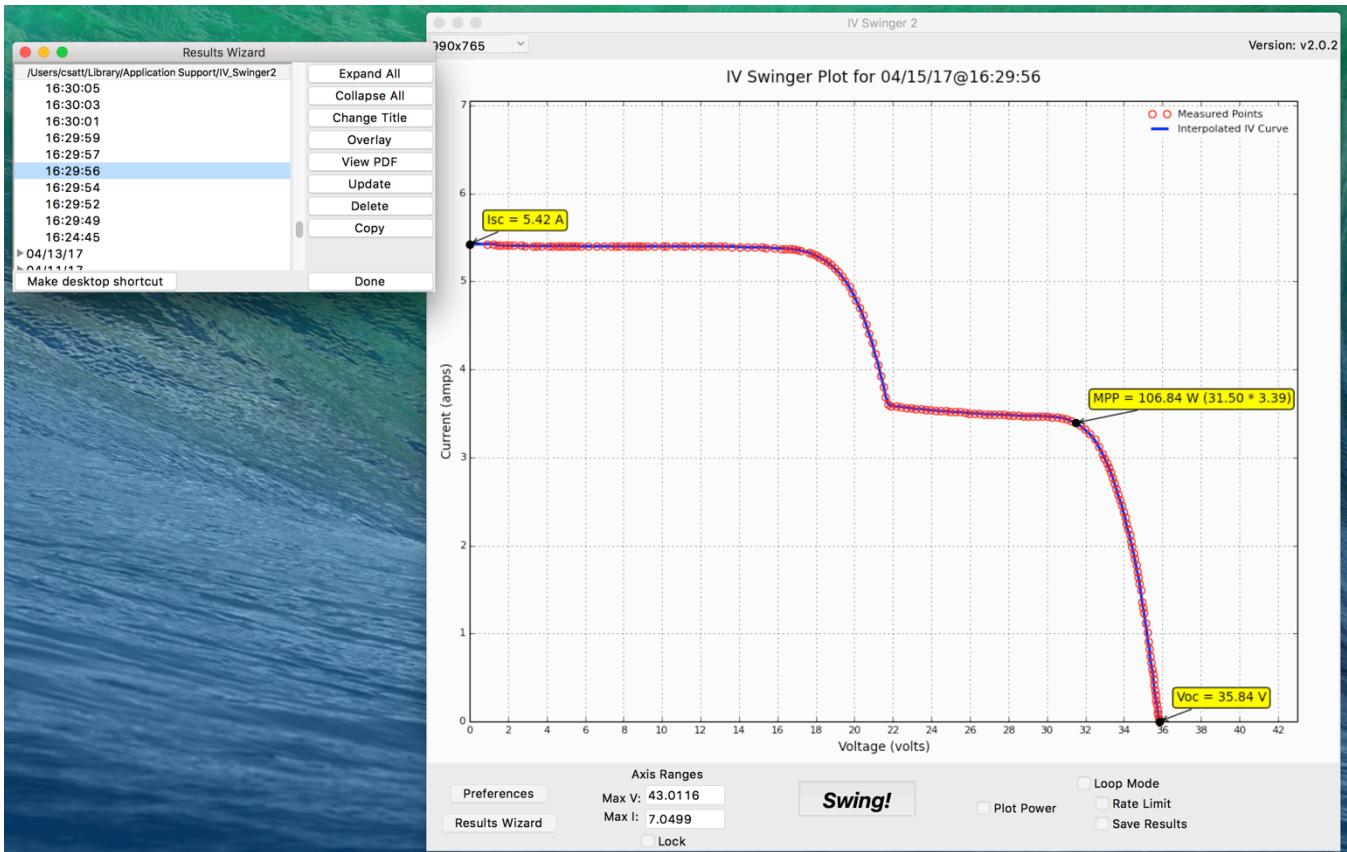


Figure 4-5: Selecting a Run

The up and down arrow keys can be used to move up and down the list. This can be very useful to quickly “flip through” the results. In fact it can be used to create a sort of “animation” if there’s a series of runs that were generated with the axes locked.

Some actions support multiple selected runs. Use “Shift-click” to select a contiguous range of runs and “Control-click” to select non-contiguous runs, just as you would in other Mac and Windows applications. Note that when multiple runs are selected, the oldest one is displayed.

4.4.3 Changing the Title

The default title at the top of each graph is “IV Swinger Plot for mm/dd/yy@hh:mm:ss”. This can be changed to something more descriptive. Select a single run and click the Change Title button. This opens a dialog where you can change the title. The new title is also listed in the tree view:

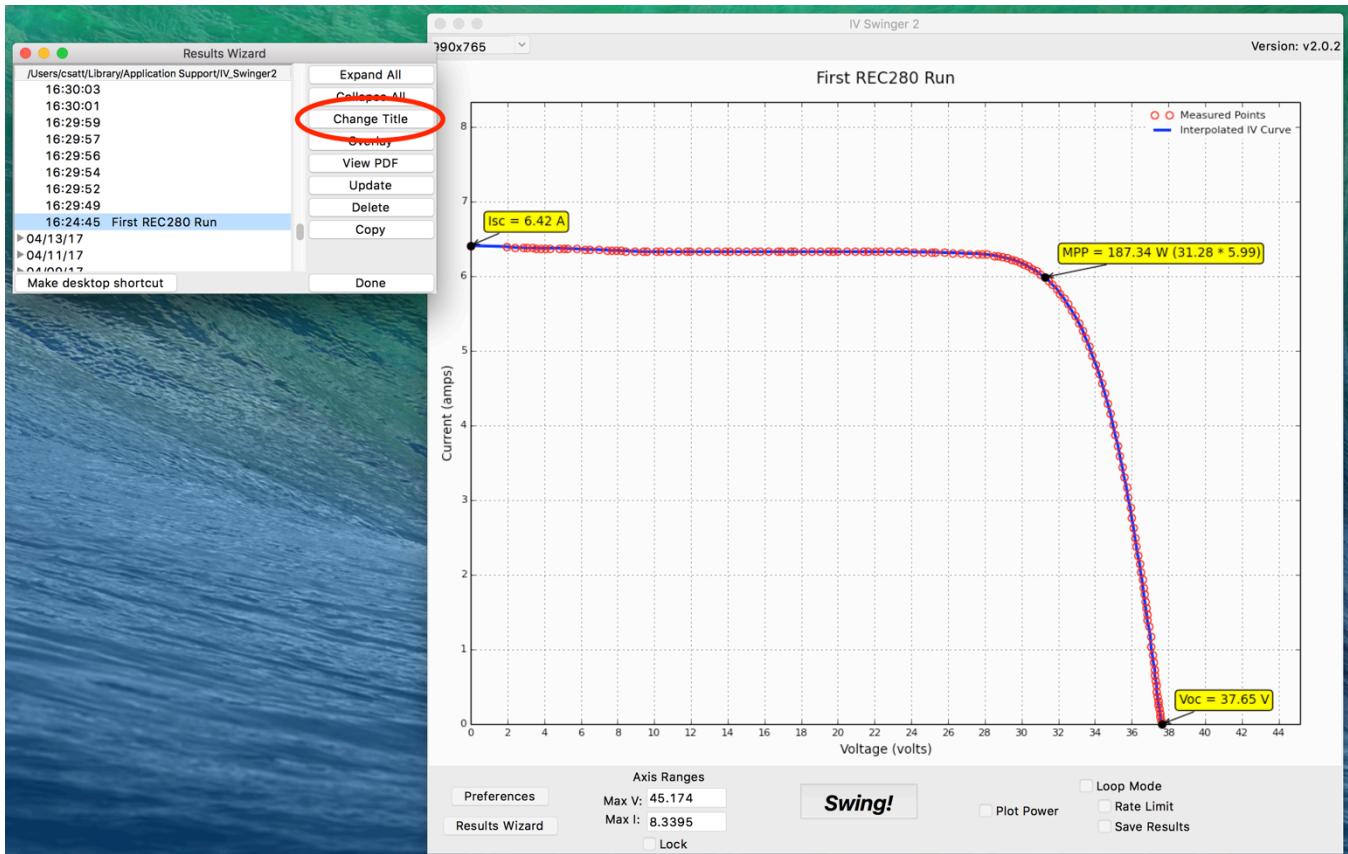


Figure 4-6: Changing the Title of a Run

4.4.4 Overlaying Multiple Runs

Combining multiple IV curves onto a single graph can be very useful for seeing their differences. The Results Wizard supports overlaying up to eight IV curves on the same graph.

The basic sequence for using this feature is:

1. Select up to 8 runs (using shift-click and/or control-click)
2. Click on the Overlay button
3. Change plotting options, if desired
4. Click the Finished button

These steps are illustrated in Figure 4-7 below. This screenshot was taken between step #3 and step #4. Notice that the dialog has now sprouted the section in the lower left corner containing a list of the overlay runs, some option check boxes, and Help, Cancel, and Finished buttons.

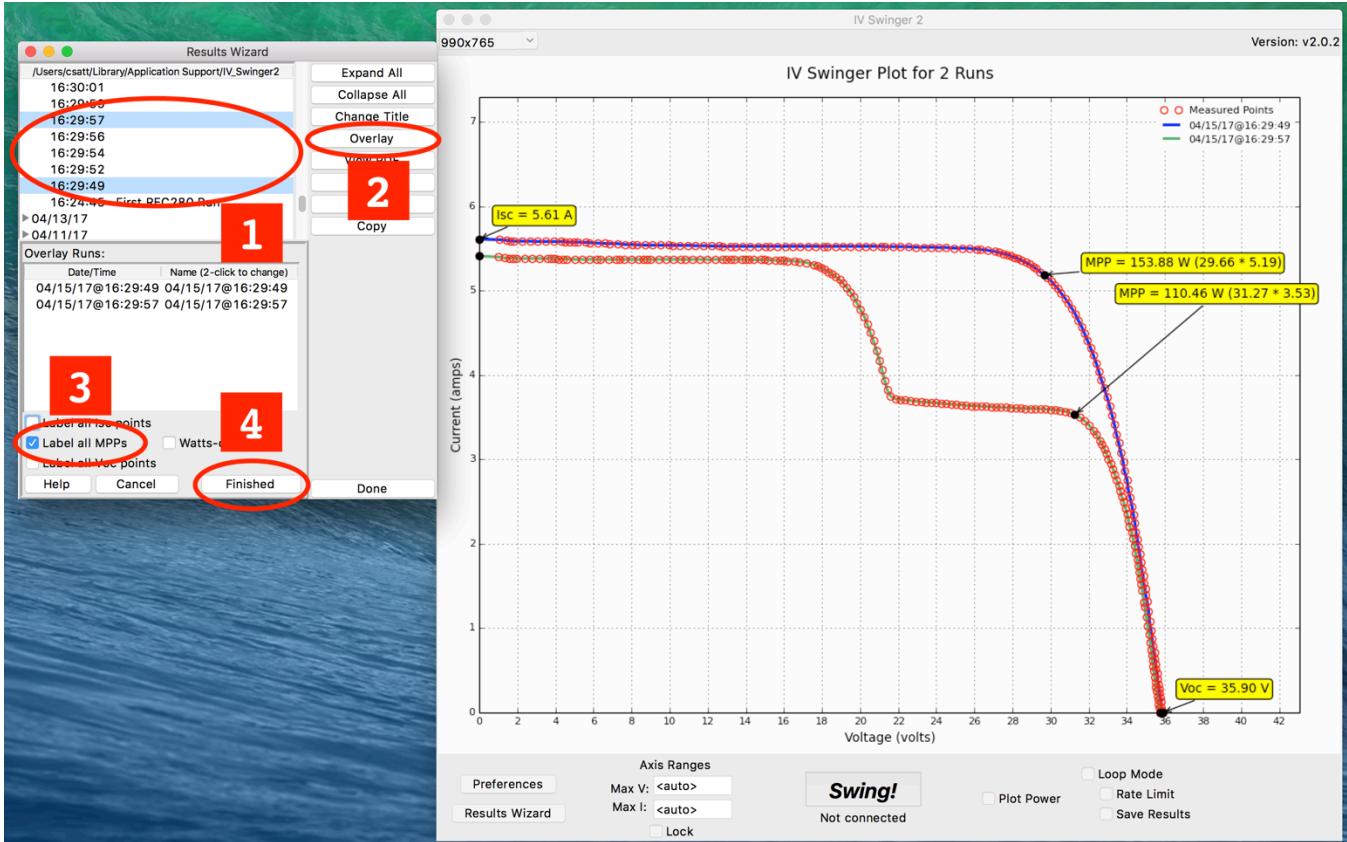


Figure 4-7: Creating an Overlay

4.4.4.1 Changing Overlay Plotting Options

The overlay example shown in Figure 4-7 shows one simple change to the plotting options made in step #3: the “Label all MPPs” box is checked. Many other changes may be made at this point (in addition to the other similar check boxes):

- The title can be changed by clicking on the Title button
- The order can be changed by dragging and dropping the runs listed in the “Overlay Runs” box (or by clicking on the Date/Time heading to sort chronologically)
- The names of the runs on the graph can be changed by double-clicking on them in the “Overlay Runs” box
- The Plot Power box (in the main window) can be checked or unchecked
- Any of the Plotting preferences in the Preferences Dialog (see section 4.5 on page 33) can be changed

4.4.4.2 Saving Overlays

When the Finished button is pressed, the overlay is saved. If the Cancel button is pressed, the overlay is discarded. The saved overlays are viewable in the “Overlays” group at the top of the tree view list in the Results Wizard.

IMPORTANT: Saved overlays are “final”. They cannot be “tweaked” later. Of course you can always recreate them from scratch.

4.4.5 Viewing the PDF

The graph shown in the main window is a GIF format image. A PDF of each graph is also generated for each run (or overlay), and this is much more suitable for printing. It is also possible to zoom into the PDF without the image becoming pixelated³. The View PDF button invokes the viewer that your computer is set up to use by default for PDF files (e.g. Preview on Mac and Acrobat Reader on Windows).

Once the PDF is open in the viewer, you can print it from there or do any of the other things that the viewer allows you to do (including saving it somewhere else).

4.4.6 Batch Updates


The Update button is used for updating a batch of runs to conform to the same set of plotting preferences. The sequence is as follows:

1. Select multiple runs
2. Change plotting option
3. Click Update button

The order of the first two steps is important.

For example, suppose you want to add the power curve to a batch of runs.

FIRST, you would select all of the desired runs (using shift-click and/or control-click):

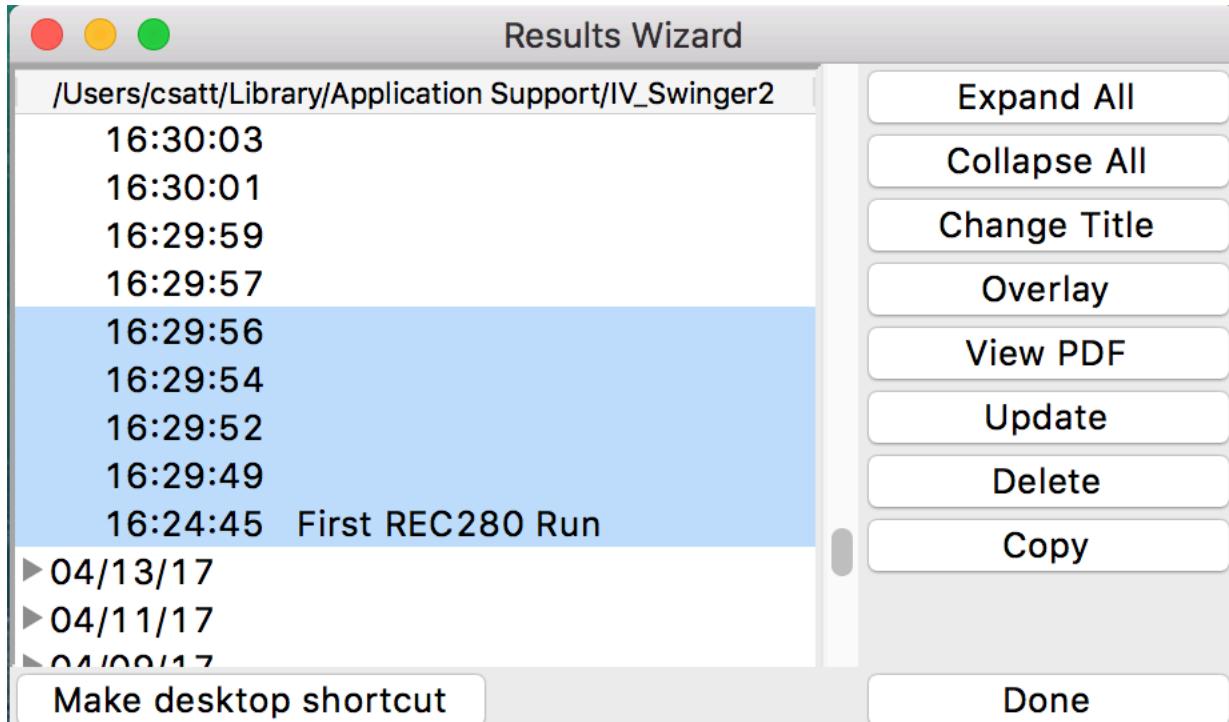


SECOND, you would check the Plot Power box:

³ Unfortunately, for technical reasons the PDF cannot be used in the image pane of the main window.



LAST, you would click the Update button:

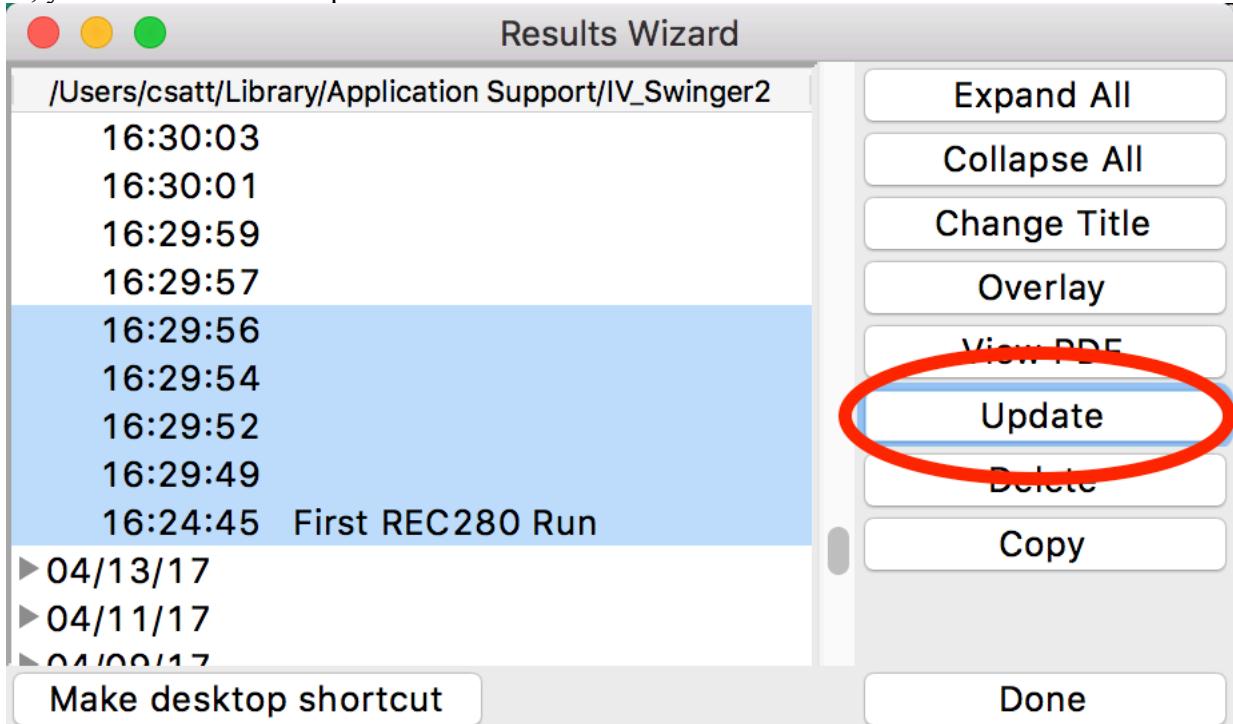


The batch update can also be used to redraw all of the selected runs using the same axis ranges. To do that, step #2 would be to check the Lock box in the Axis Ranges controls (and possibly type in the Max V and Max I values).

Similarly, the display image size can be updated for a batch of runs. To do that, step #2 would be to change the value in the Image Size control (see section 4.1.7 on page 16).

And finally, step #2 can be changing any of the Plotting preferences in the Preferences Dialog (see section 4.5 on page 33).

4.4.7 Deleting Runs

To delete runs (actually send them to the trash), select them and then click the Delete button. This will bring up a dialog asking for your OK to move it/them to the trash:

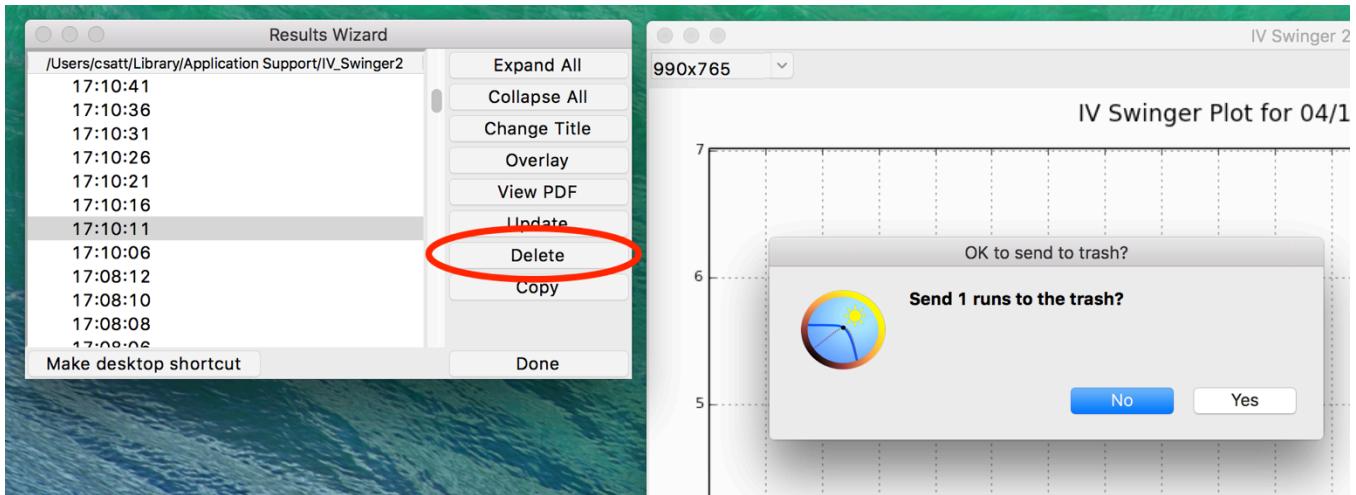


4.4.8 Copying Runs

To copy runs to a USB drive (or anywhere else), select them and then click the Copy button. This will bring up a standard Finder (Mac) or Explorer (Windows) dialog for you to select the destination for the copy. See Figure 4-8: Copying Runs to a USB Drive (Mac) and Figure 4-9: Copying Runs to a USB Drive (Windows) below for what this looks like on both platforms.

If it doesn't already exist, a folder named IV_Swinger2 will be created at the selected destination, and the selected run or runs will be copied under that folder. Each run consists of multiple files in a folder named for the date and time of the run (see section 4.6 on page 38). If the IV_Swinger2 folder already exists at the selected destination, the selected run or runs will be added to it.

Note that runs copied to a USB drive on a Mac may be viewed on a Windows machine and vice versa.

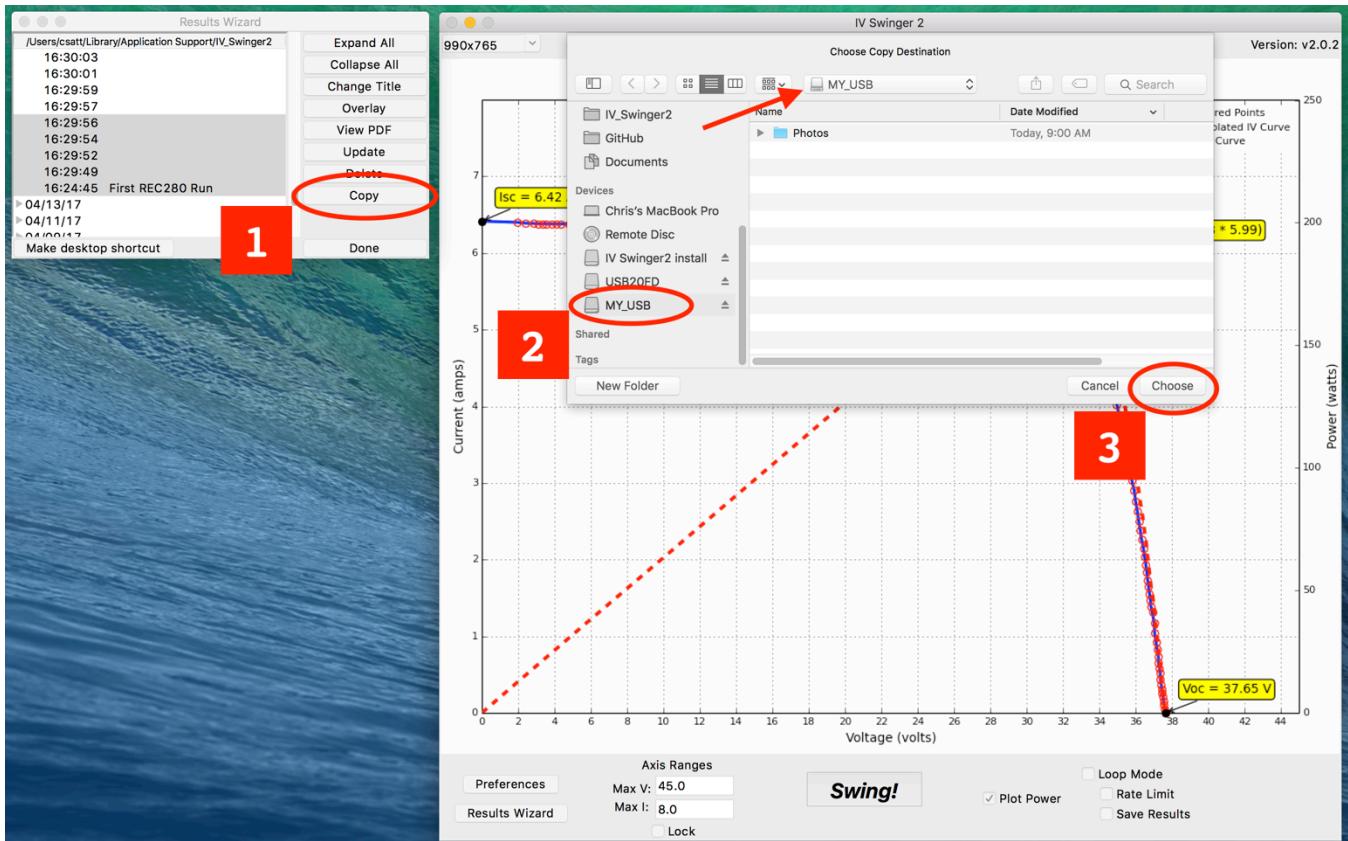

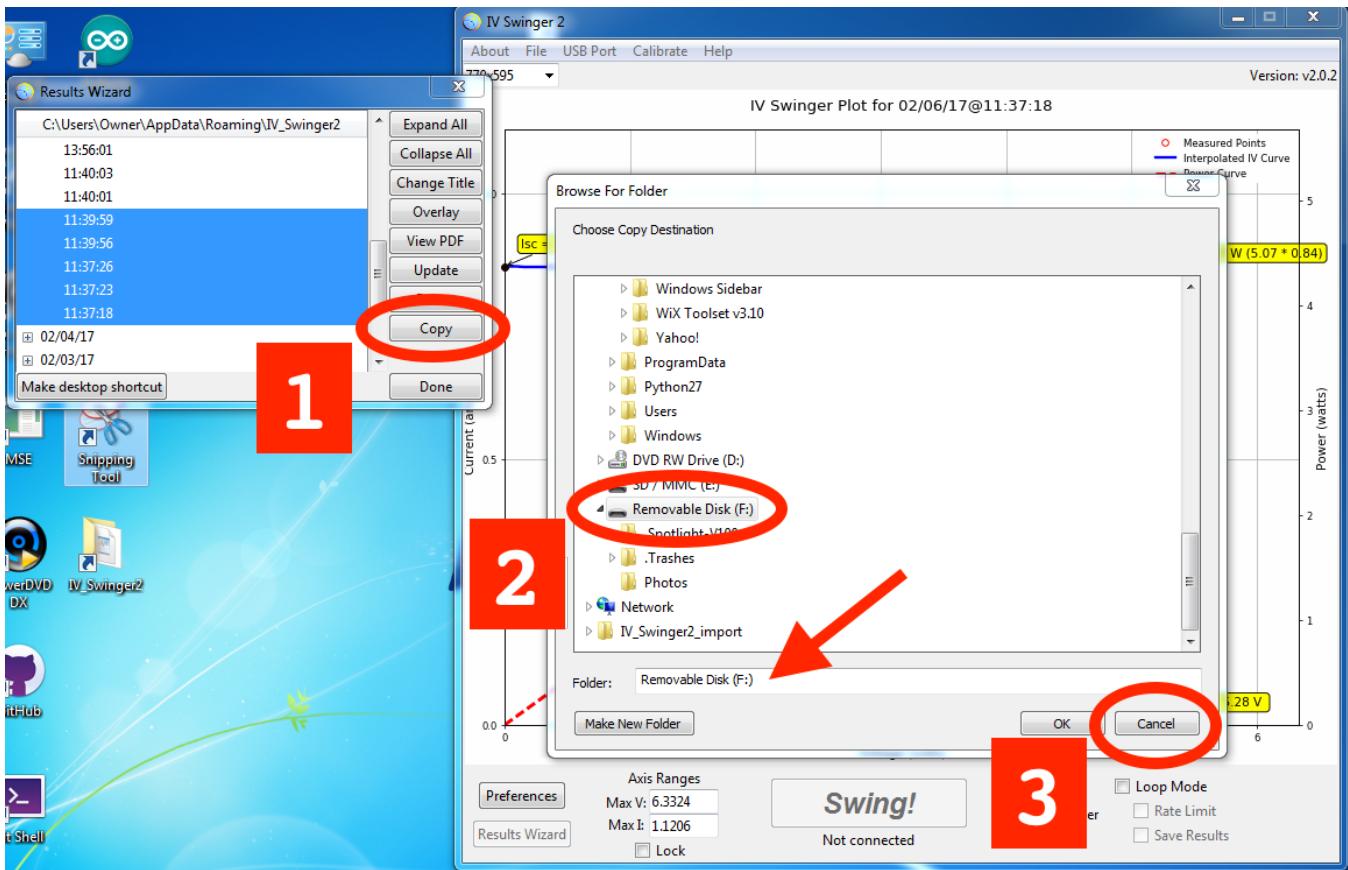


Figure 4-9: Copying Runs to a USB Drive (Windows)

4.4.9 Changing Where to Look for Runs

The runs are stored in a folder named IV_Swinger2 in a standard, but somewhat difficult-to-find location on your computer. This location may be different depending on the version of MacOS or Windows that you are running. When you open the Results Wizard, this location is listed at top of the tree view pane (see Figure 4-10 below).

If you want to use the Results Wizard to browse runs on a USB drive (e.g. copied from a different computer), you can point it to that new location by clicking on the path at the top of the tree view pane. This will bring up a standard Finder (Mac) or Explorer (Windows) dialog for you to select the location of the results.

Figure 4-11 shows this process on a Mac. Windows is very similar. Figure 4-12 shows what it looks like after the path has successfully been changed to point to the USB drive.

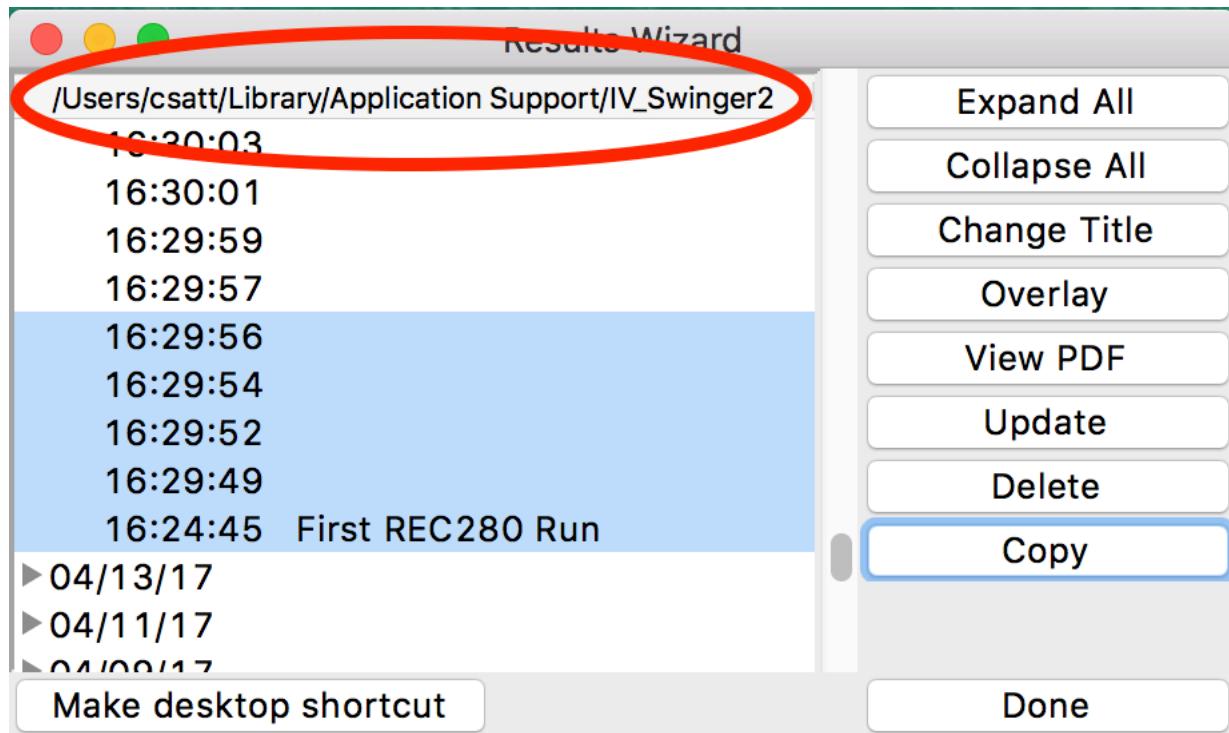


Figure 4-10: Path to Results Folder

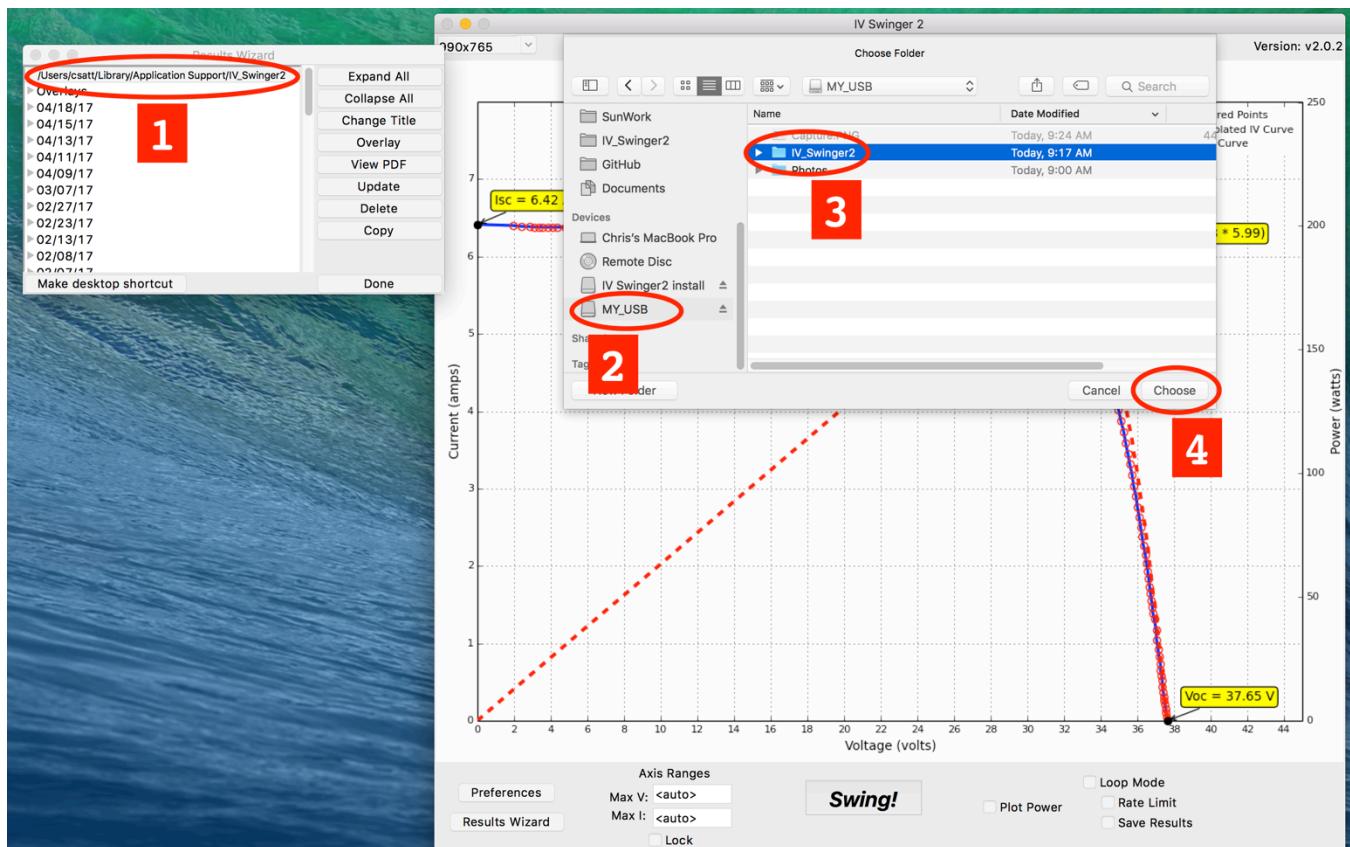


Figure 4-11: Changing the Path to a USB Drive

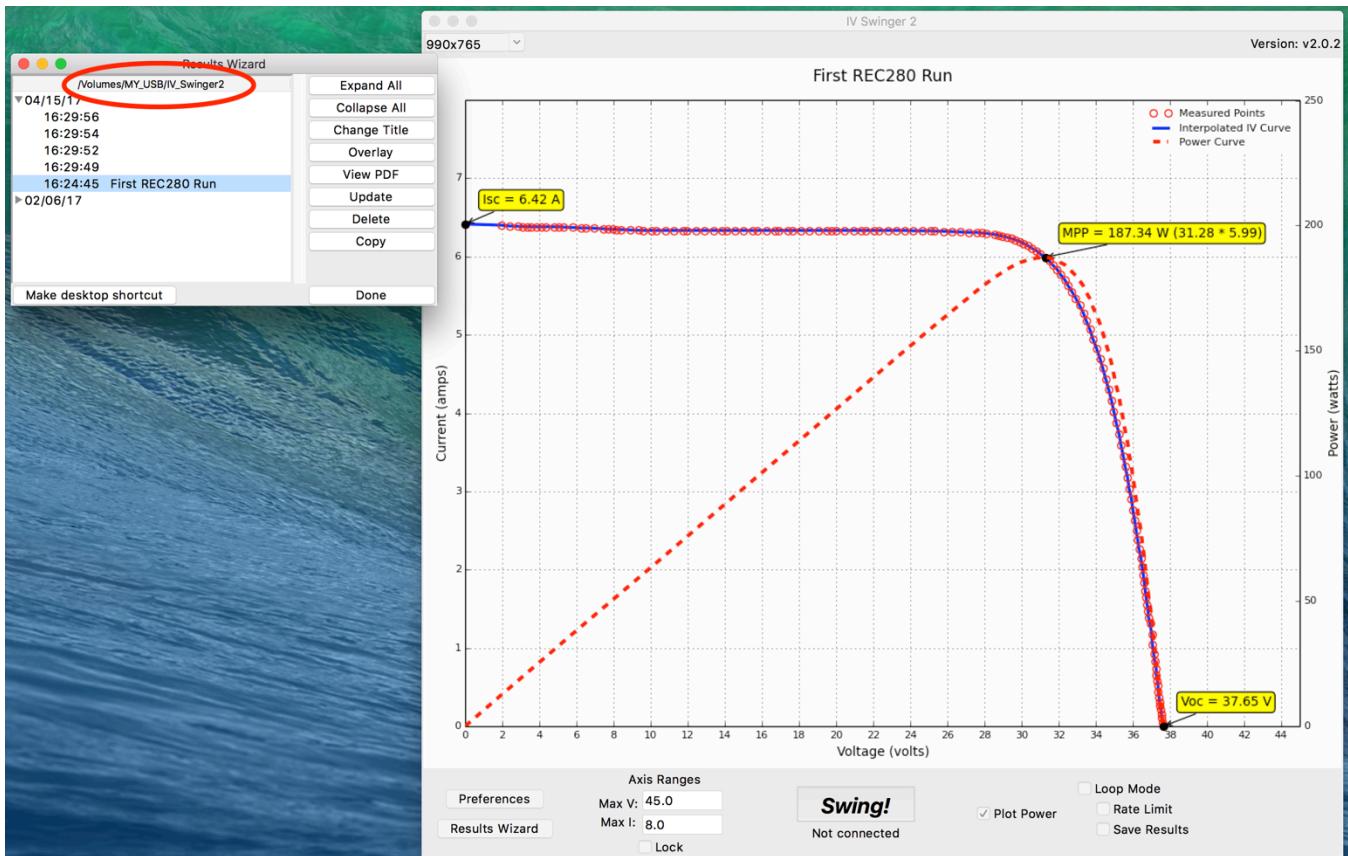


Figure 4-12: Path Successfully Changed to USB Drive

4.4.10 Creating a Desktop Shortcut to Runs Folder

The Results Wizard provides the tools necessary for most browsing, modifying, combining, printing, etc. It “hides” the details of what files are included in the results folders.

However, some users may want to directly access the raw results folders and their files. For example, you may want to open the CSV file(s) in a spreadsheet program. You might also want to know how much disk space is being used, etc. As described in the previous section, the path to the results folder is shown at the top of the Results Wizard tree view pane. But this may be a “hidden” folder that is difficult to navigate to in Finder/Explorer.

The Make Desktop Shortcut button at the bottom of the Results Wizard can be used to create a desktop shortcut to the results folder to make it easier to locate in Finder/Explorer. The shortcut will be named IV_Swinger2.

See section 4.6 on page 38 for a description of the files.

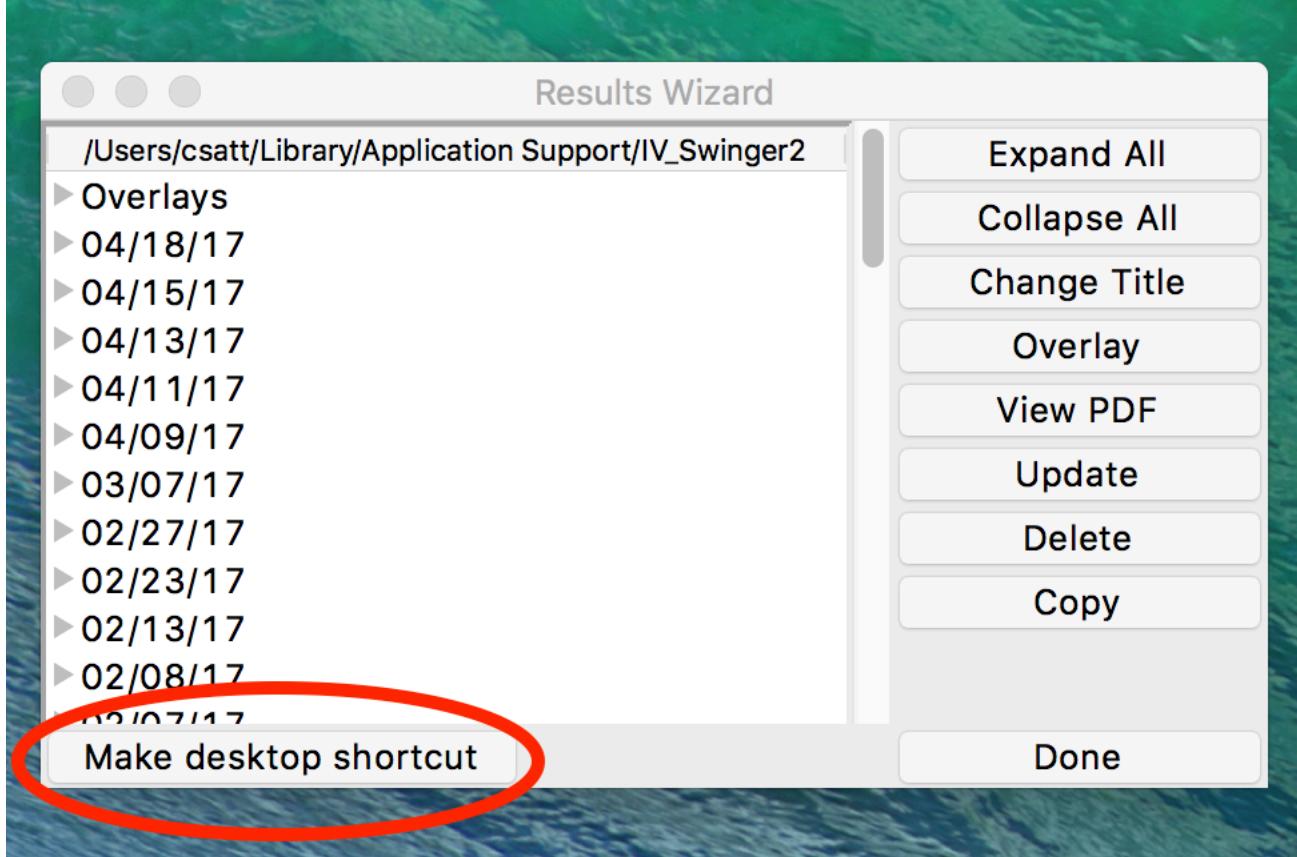


Figure 4-13: Making a Desktop Shortcut to Raw Results

4.5 Preferences Dialog

Figure 4-14 below shows the dialog that comes up when the Preferences button is pressed. This is the Mac version but the Windows version is very similar. At the top are three “tabs”: Plotting, Looping, and Arduino. The figure shows the Plotting tab selected.

Sections 4.5.1, 4.5.2, and 4.5.3 below discuss each tab.

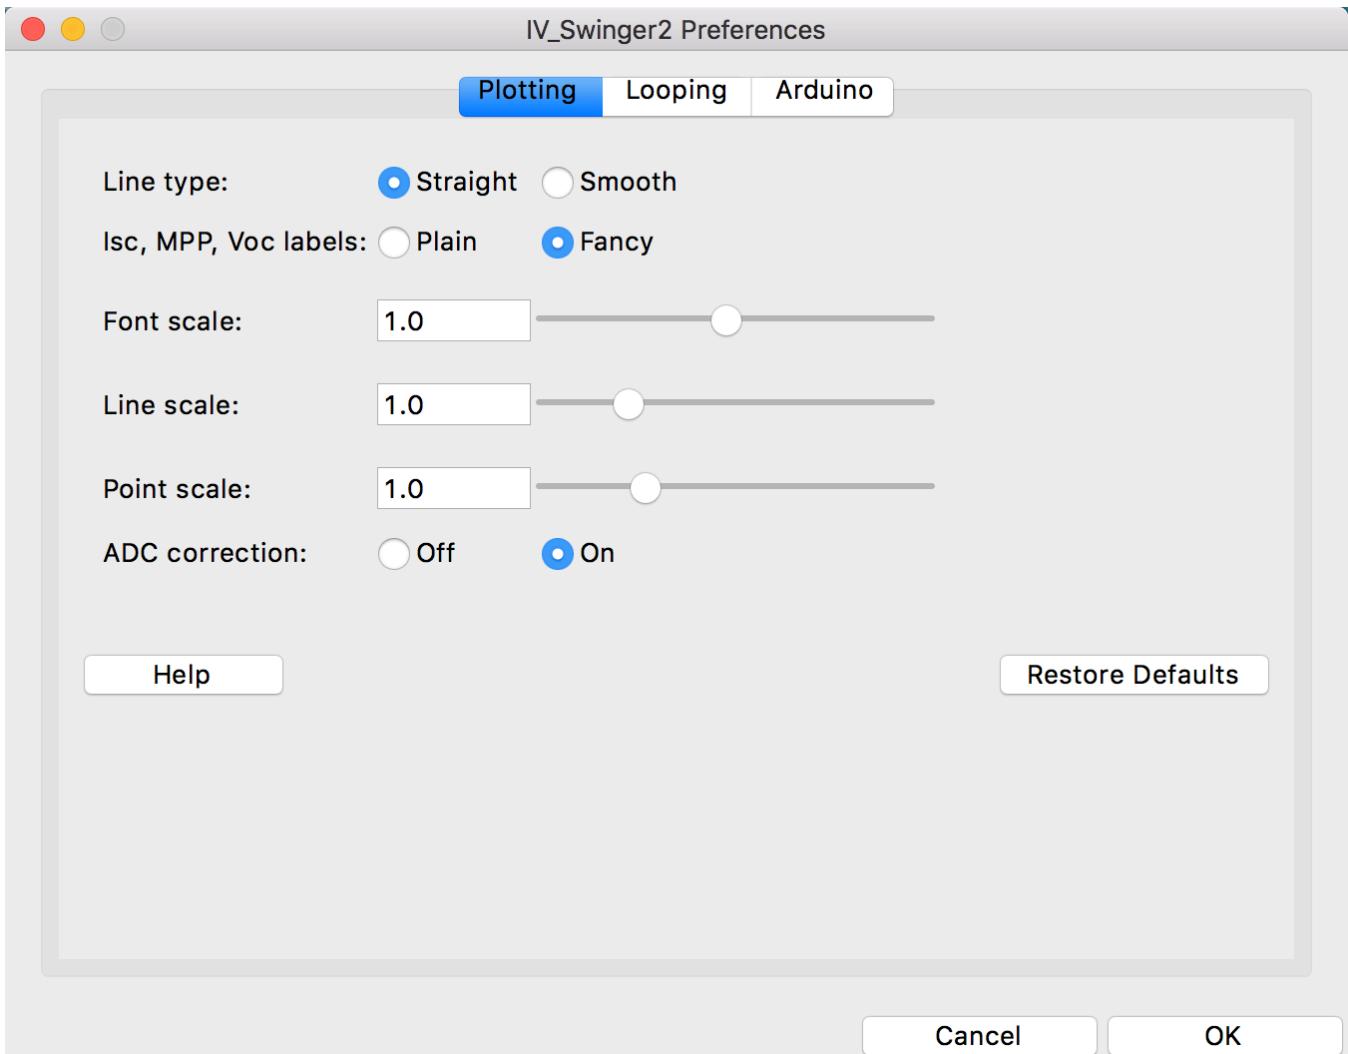


Figure 4-14: Preferences Dialog

4.5.1 Plotting Preferences Tab

Figure 4-14 above shows the Plotting tab.

The configuration options on the Plotting tab control the appearance of the IV curve plot, both on screen and in the generated PDF. Changes made to these options are applied immediately to the current plot (if there is one), so you can experiment and see the effect of your changes. Clicking OK will save the new values, and they will be used from that point forward. Clicking Cancel will revert to the previous values. Following are brief explanations of each option.

4.5.1.1 Line type

The curve interpolated between the measured points may either be "Straight" or "Smooth". The default is "Straight" because most IV Swinger 2 runs have so many points that there is virtually no advantage to a smooth curve, which takes longer to generate. When "Smooth" is selected, Catmull-Rom spline interpolation is used.

4.5.1.2 Isc, MPP, Voc labels

Two styles are available for the labels: "Plain" and "Fancy". Plain labels are text only. Fancy labels are enclosed in a box with a yellow background, and there are arrows indicating the point.

4.5.1.3 Font scale, Line scale, and Point scale

The default font size, line thickness, and size of the "dots" indicating the measured points are chosen automatically based on the size/resolution of the graph. These options allow the user to scale those up or down, according to taste. The sliders can be used, or the values can be typed in manually. If Line scale is set to 0.0, the interpolated curve is not plotted. If Point scale is set to 0.0, the measured points are not plotted.

4.5.1.4 ADC correction

By default, several "corrections" are made to the raw values read by the analog to digital converter (ADC) chip to correct for noise and other effects that affect the proper rendering of the IV curve and the calculation of the maximum power. If "Off" is selected, these corrections are not performed. Note that the values written to the ADC CSV file are the uncorrected values, regardless of this setting. Also note that the calibration settings are used regardless of this setting.

4.5.2 Looping Preferences Tab

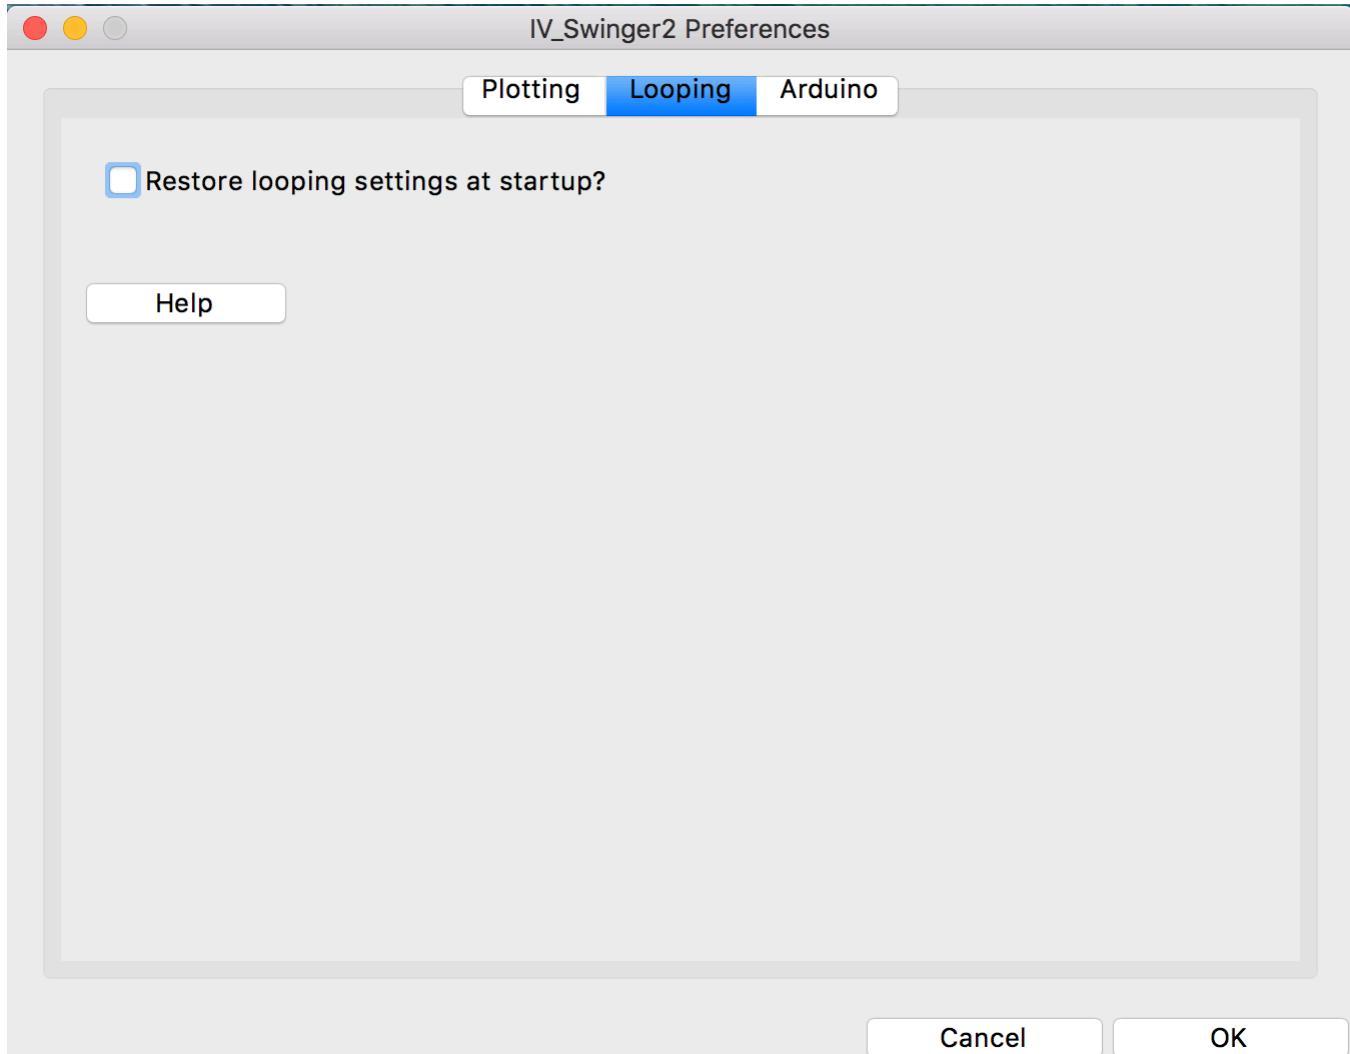


Figure 4-15: Preferences Looping Tab

There is currently only one option on the Preferences Looping tab. The main options controlling looping behavior are on the main IV Swinger 2 window to the right of the "Swing!" button (see section 4.1.5 on page 15). The lone Preferences option is to choose whether the settings on the main screen should be retained after the program is closed and restored the next time it is opened. If this box is not checked, the application always comes up with Loop Mode turned off.

4.5.3 Arduino Preferences Tab

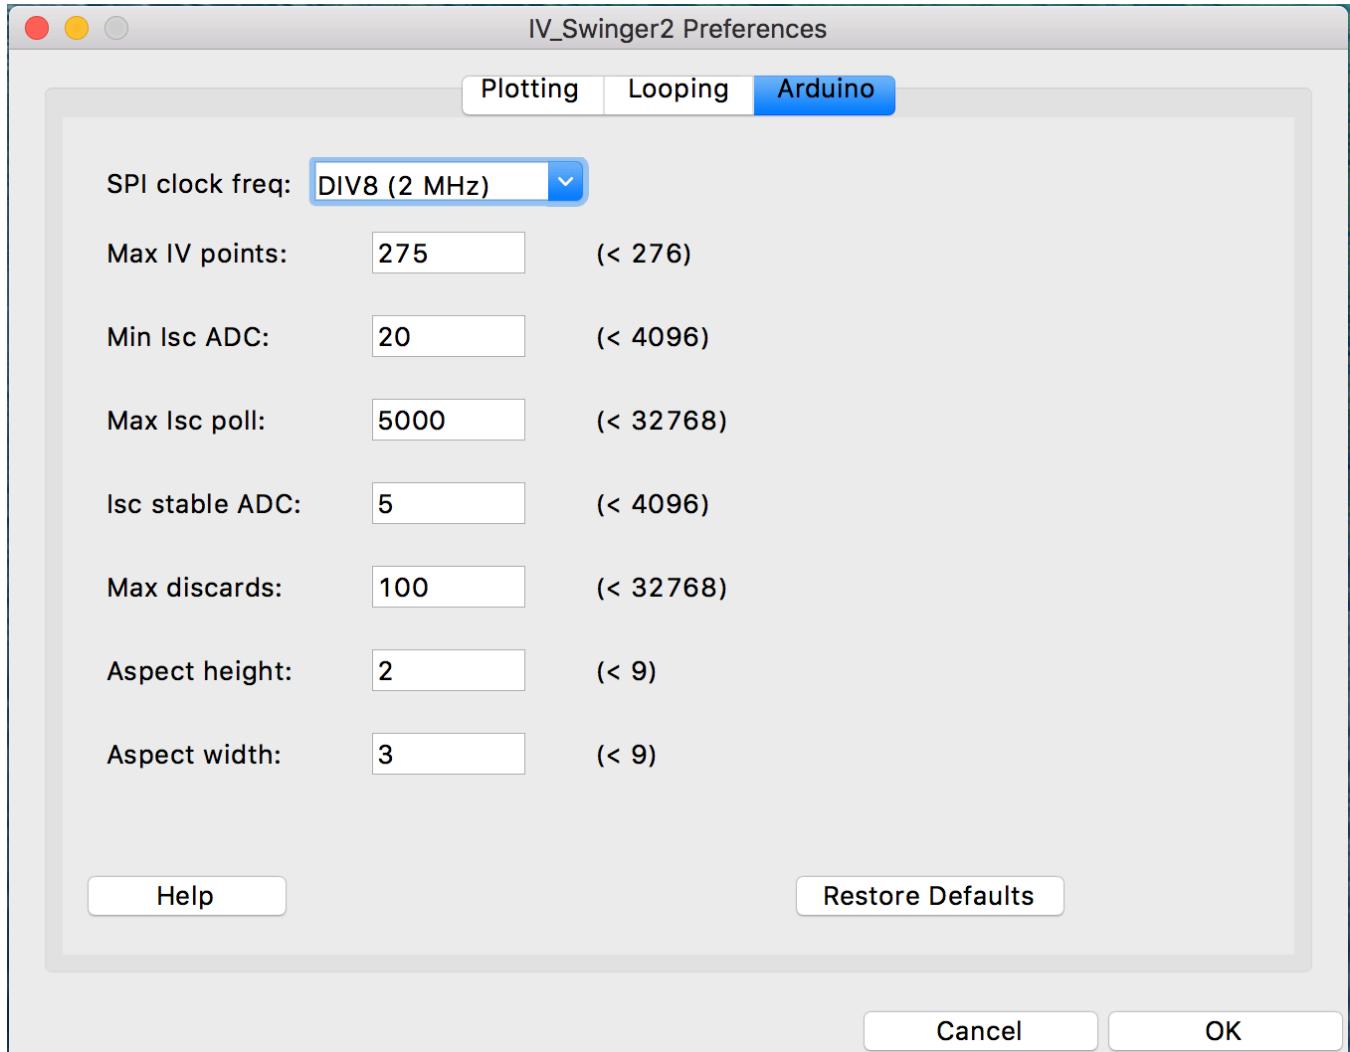


Figure 4-16: Preferences Arduino Tab

The configuration options on the Arduino tab are for advanced users who are familiar with the code that runs on the IV Swinger 2 Arduino microcontroller. Normally the default values should be used. Any changes made here are sent to the Arduino when the OK button is pressed and take effect starting with the next run. Following are very brief descriptions of each option.

4.5.3.1 SPI clock freq

Clock frequency of the SPI bus. The SPI bus is used to communicate with the MCP3202 ADC. At 5V, the MCP3202 is specified to work up to 1.8 MHz, but current parts have been shown to operate fine with faster clocks. A higher SPI clock frequency results in more closely spaced points on the IV curve. The default is 2 MHz.

4.5.3.2 Max IV points

Maximum number of I/V pairs to capture. The actual number will always be less (sometimes substantially less).

4.5.3.3 Min Isc ADC

Minimum ADC value the channel measuring current must reach before starting to poll for stable Isc.

4.5.3.4 Max Isc poll

Maximum number of loops waiting for Isc to stabilize before giving up.

4.5.3.5 Isc stable ADC

Three consecutive measurements must vary less than this amount for Isc to be considered stable.

4.5.3.6 Max discards

Maximum consecutive points that may be discarded because they are too close together before recording a point anyway.

4.5.3.7 Aspect height

Height of graph's aspect ratio (max 8). Used for "distance" calculation in the discard algorithm.

4.5.3.8 Aspect width

Width of graph's aspect ratio (max 8). Used for "distance" calculation in the discard algorithm.

4.6 Folders and Files

Most users should not need or want to access the raw folders files that are used by the IV Swinger 2 software application. For those who do, this section describes them.

The top-level folder is named IV_Swinger2 and, as described earlier, is in a standard, but somewhat difficult-to-find location on your computer. This location may be different depending on the version of MacOS or Windows that you are running. When you open the Results Wizard, this location is listed at top of the tree view pane. The “Make desktop shortcut” button can be used to make it easier to navigate to.

The IV_Swinger2 folder contains the following:

- A file named IV_Swinger2.cfg
- A folder named “Logs”
- A folder for each run named for the date and time of the run
- A folder named “Overlays” (after at least one overlay is created)

4.6.1 IV_Swinger.cfg file

This file saves all configuration values such as image size, calibration, and all of the preferences from the Preferences Dialog. These values are restored from this file the next time the application is started. It should not be edited unless you know what you are doing.

4.6.2 Logs folder

This folder contains one file for each session that the application is run (possibly spanning many runs). This is not likely to be useful for general users. The log file contains debug information logged by the software.

4.6.3 Run folders and files

Each run generates its own folder with a name like 170415_16_24_45 (yymmdd hh_mm_ss).

▼	170415_16_24_45	Today, 8:54 AM	--
	IV_Swinger2.cfg	Today, 11:01 AM	612 bytes
	iv_swinger2_170415_16_24_45.pdf	Today, 8:54 AM	20 KB
	iv_swinger2_170415_16_24_45.gif	Today, 8:54 AM	152 KB
	iv_swinger2_170415_16_24_45.csv	Yesterday, 11:09 PM	4 KB
	adc_pairs_170415_16_24_45.csv	Apr 15, 2017, 4:24 PM	1 KB

Figure 4-17: Run folder contents

The files in the run folder are the following:

4.6.3.1 IV_Swinger.cfg

This is a copy of the IV_Swinger.cfg file (see section 4.6.1 above) as it existed when the run was performed OR when modifications were made using the Results Wizard.

4.6.3.2 iv_swinger2_yymmdd_hh_mm_ss.pdf

This is the PDF of the graph.

4.6.3.3 iv_swinger2_yymmdd_hh_mm_ss.gif

This is the GIF of the graph (used for the on-screen display).

4.6.3.4 iv_swinger2_yymmdd_hh_mm_ss.csv

This is the CSV file containing the voltage, current, power, and load resistance of each point on the curve. It is in exactly the same format as the original IV Swinger CSV files. It may be read into Excel or another spreadsheet program if desired. Since it is a text file, it can also be easily read by any other program that an advanced user might want to write for the purpose of analyzing the data.

4.6.3.5 adc_pairs_yymmdd_hh_mm_ss.csv

This is the CSV file that contains the raw values from the Analog to Digital Converter (ADC). These values are converted to the voltage and current values in the iv_swinger2_yymmdd_hh_mm_ss.csv file based on the resistor values in the voltmeter and ammeter circuitry and on the calibration values. They are also “corrected” to remove some other artifacts. It is unlikely that this file would be useful to the end user.

4.6.4 Overlays folder

This folder contains one sub-folder for each overlay that has been created using the Results Wizard. The sub-folders are named with the same yymmdd_hh_mm_ss format as the run folders, but the time refers to the time that the overlay was created, not the time of any of its runs. There are only two files in each sub-folder. Note that these are only the image files; no information about how the overlay was constructed is saved. This is why overlays cannot be “tweaked” after they are finalized.

4.6.4.1 overlaid_yymmdd_hh_mm_ss.pdf

This is the PDF of the overlay graph.


4.6.4.2 overlaid_yymmdd_hh_mm_ss.gif

This is the GIF of the overlay graph (used for the on-screen display).

5 Known Bugs


This section describes bugs that have not yet been understood and/or fixed.

5.1 Gap between second and third points

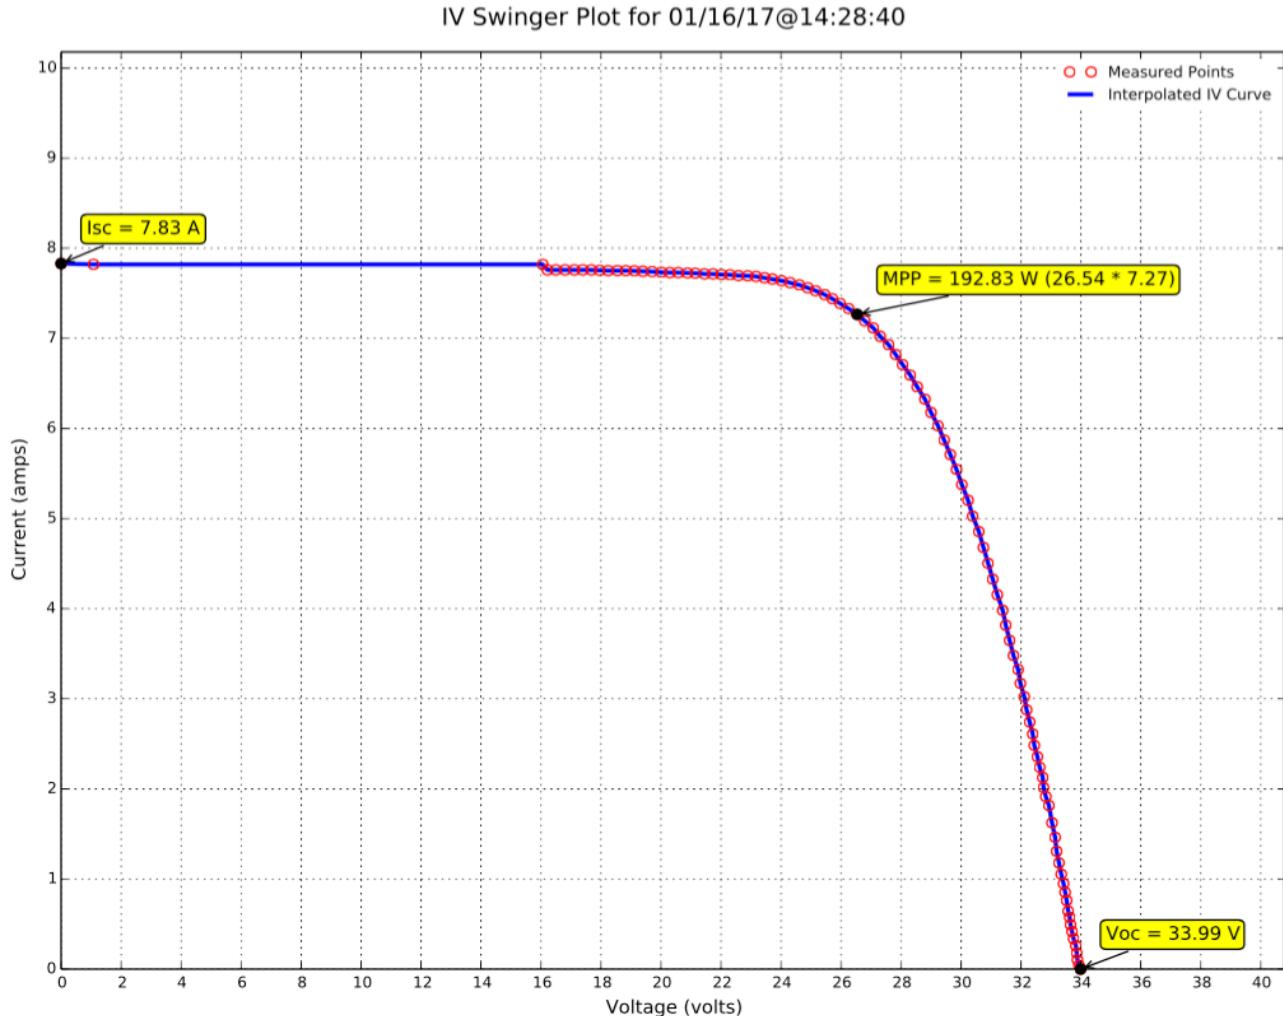

Occasionally a graph looks like the one above. It is not yet understood what causes this. You should just swing another curve and discard the bad one.

5.2 Tail of curve only

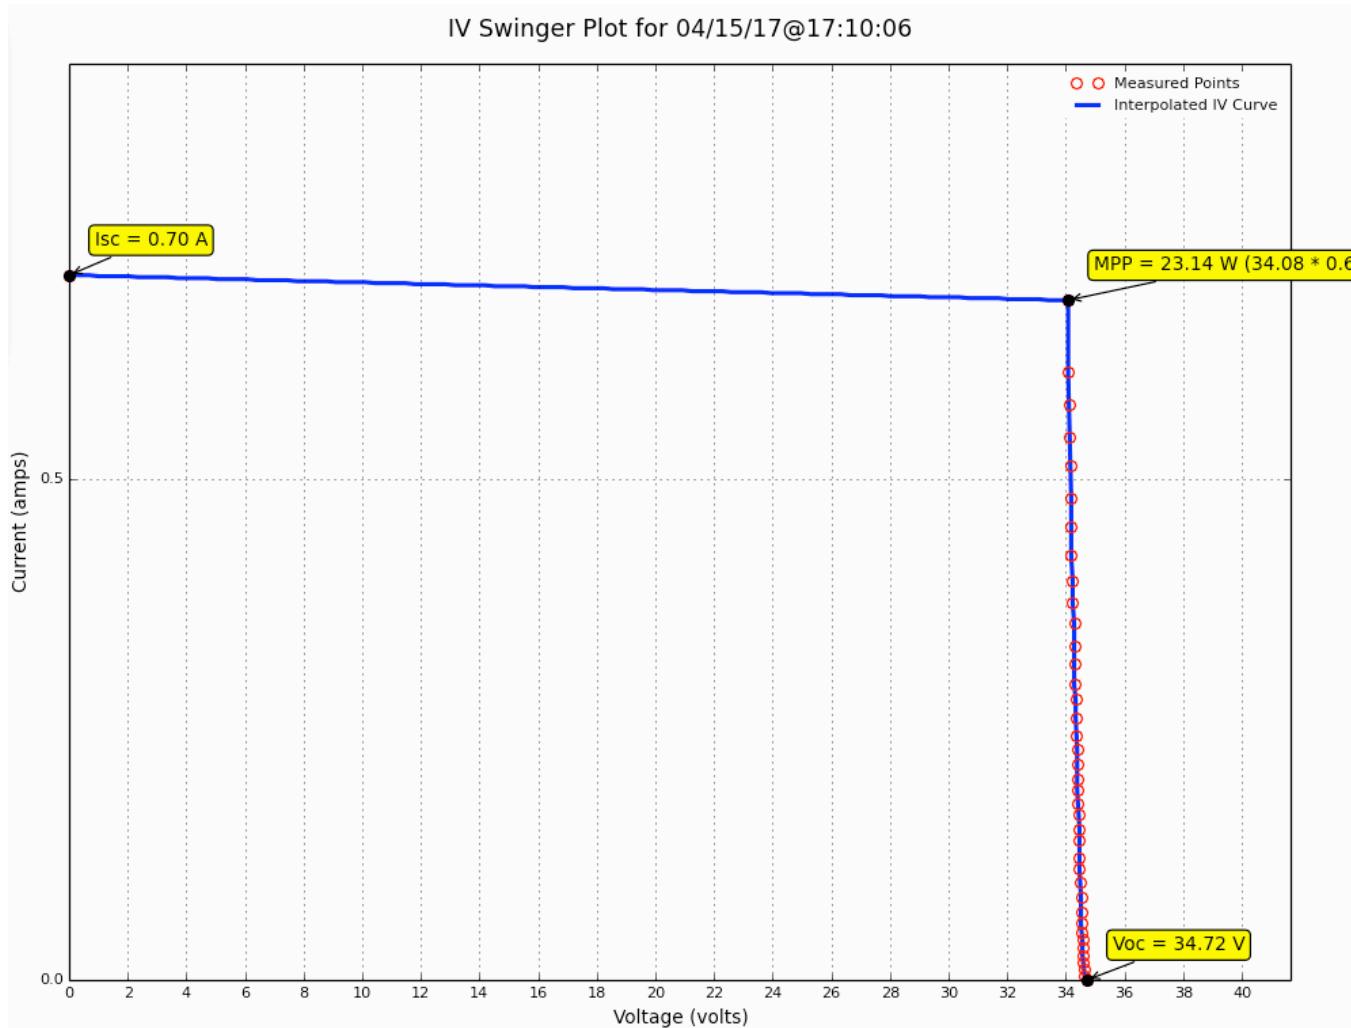

In some cases, the first actual point recorded (not counting the I_{sc} point, which is extrapolated) is already near the end of where the curve should be. A theory on the cause of this is a relay that is wearing out. If the capacitor is not drained of all charge between runs, the first measurement would already be at a low current and a high voltage.

6 Ratings and Limitations

1. Number of times the IV Swinger 2 can be dropped and survive: **ZERO**

IV Swinger 2 is a lot more likely to survive a drop than the original IV Swinger. But it's still an acrylic case, and there are connections that are not soldered. So still – don't drop it.

2. Maximum rated PV panel Isc: **10A**

It is not recommended to connect the IV Swinger 2 to two or more PV panels in parallel. But if you do, remember that the currents of parallel PV panels ADD, so make sure the sum of their rated Isc values is less than 10A.

3. Maximum rated PV panel Voc: **80V**

It is not recommended to connect the IV Swinger 2 to two or more PV panels in series. But if you do, remember that the voltages of series PV panels ADD, so make sure the sum of their rated Voc values is less than 80V.

4. Maximum temperature: **unknown**

This is much less likely to be an issue for IV Swinger 2 than it was for the original IV Swinger since swinging the curve doesn't generate any appreciable heat. Also, the Arduino should be able to run at a higher temperature than the Raspberry Pi.

5. Lifetime (number of IV traces until it dies): **unknown**

The IV Swinger 2 should be much longer lived than the original IV Swinger. The one relay is much less stressed when it switches. On the other hand, it is so easy and quick to swing an IV curve now (especially with loop mode) that the additional longevity may be outweighed by the number of curves attempted. Fortunately, the relay is easy and inexpensive to replace. Nothing else should wear out.

6. Number of times you can take the IV Swinger 2 to an airport and not get arrested: **ZERO**

OK, it's much less scary looking than the original. But you still might have some explaining to do.

7 Laptop Software Installation

The IV Swinger 2 application runs on either Mac or Windows

7.1 Mac

7.1.1 IV Swinger 2 application (Mac)

Requirement: MacOS version 10.10 (Yosemite) or higher

Download latest release from:

https://github.com/csatt/IV_Swinger/releases/latest

Under “Downloads” click on the link that starts with “iv_swinger2” and ends with “_mac.dmg”. Open it and follow the instructions on the screen.

7.2 Windows

7.2.1 IV Swinger 2 application (Windows)

Requirement: Windows 7 or higher

Download latest release from:

https://github.com/csatt/IV_Swinger/releases/latest

Under “Downloads” click on the link that starts with “iv_swinger2” and ends with “_win.msi”. Open it and follow the instructions on the screen.

7.2.2 Arduino driver (Windows)

This is only necessary if you are actually connecting to the IV Swinger 2 hardware. If you are just using the software to look at the results from a different computer, you don’t need this.

Download and install latest release from:

<https://www.arduino.cc/en/Main/Software> (under “Download the Arduino IDE”)

You can choose to install the whole application or only the driver. All you need is the driver (but feel free to install everything).