

Thrustmaster T.16000M Camera Control Guide

Training reference for operating room cameras with the joystick. The setup starts in right-handed mode, and buttons 1 through 4 are treated as matching the left-hand map per the corrected reference.

3

LEFT
HANDED

RIGHT
HANDED

Y Axis

0

X Axis

16383

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

0+

255-

Slider0 Axis

RZ Axis

●

 Main/live control

●

 Camera select

●

 Motion/swap

●

 Preview control

●

 Selfview

●

 Cisco Desk Cam 4K

Training Flow

1

Choose the target bus.

5

 controls Main/live.

10

 controls Preview.

2

Choose the camera.

12

 Quad Camera

11

 RVPTZ Left

15

 RVPTZ Right

16

 Desk Cam 4K

3

Move the selected camera.

Main stick tilts, stick twist pans, center mini pitch zooms. Slider0 is not used.

4

Use precision and swap.

1

 held gives finer movement.

3

 or

4

 swaps Main and Preview.

DESK CAM 4K

Button 16 selects Cisco Desk Cam 4K.

Use this as the fourth camera selection alongside the Quad Camera and RVPTZ cameras.

STICK BUTTONS

Buttons 3 and 4 are the swap controls.


Either button swaps the live camera with the preview camera, so the operator can prepare a camera in Preview and then take it live quickly.

Enable Joystick Controls on the Touch Panel

Enable the controls and match the on-screen handedness to the physical switch before using the joystick.

1. On the touch panel, open **Joystick Controls**.
2. Under Joystick controls, tap **Enabled**.
3. Select **Left-handed** or **Right-handed** to match the LEFT or RIGHT switch on the bottom of the joystick.
4. Confirm the selected buttons are highlighted, then use the joystick controls described in this guide.

Tracking note: Enabling joystick control sets SpeakerTrack to Manual and turns off tracking modes. Disabling joystick control later does not restore those modes.

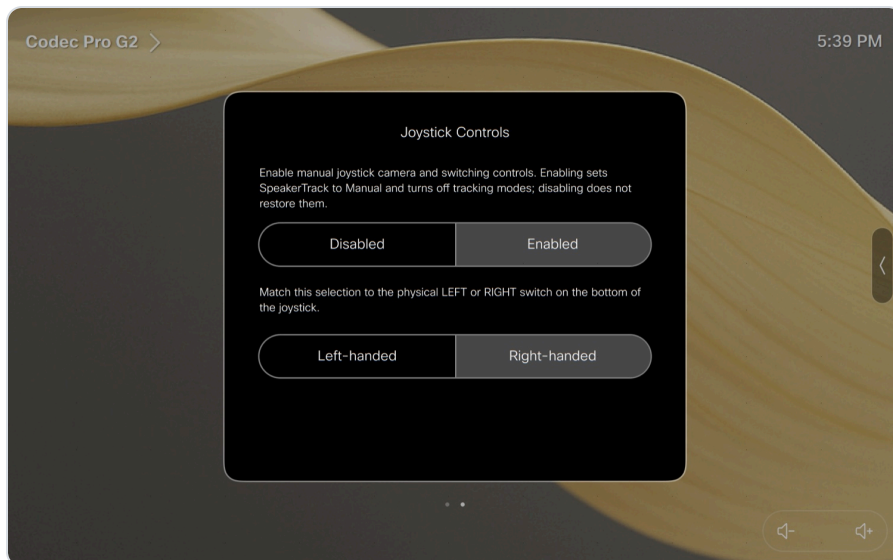

Joystick Controls panel shown with the controls enabled and handedness set to match the joystick's physical switch.

Operating Workflow

Use Preview as the staging area whenever possible. The safest habit is to prepare the next camera in Preview, take it live with a swap, then prepare the next shot.

10 Prepare Preview
Press Preview before choosing a camera when you want to set up the next shot without changing what the room sees live.

12 11 15 16 Pick Camera
Choose Quad Camera, RVPTZ Left, RVPTZ Right, or Cisco Desk Cam 4K.

3 4 Take Live
After the Preview camera is framed, press either swap button. The prepared Preview camera becomes Main/live.

STANDARD OPERATING LOOP

- 1. Press Preview** with **10** so the next camera can be prepared safely.
- 2. Select the camera** with **12** Quad, **11** RVPTZ Left, **15** RVPTZ Right, or **16** Desk Cam 4K.
- 3. Frame the shot** with the stick: push/pull to tilt, twist to pan, and use the center mini pitch circle to zoom.
- 4. Fine tune** by holding **1** while moving the camera slowly.
- 5. Take it live** with **3** or **4**.
- 6. Repeat** by returning to Preview, choosing the next camera, positioning it, and swapping when ready.

WHEN TO CONTROL MAIN

- Use **5** only when the live camera needs immediate correction.
- Remember that Main movement is visible to the room.
- Return to Preview with **10** before preparing the next shot.
- Slider0 is not used in this workflow.

Operator Button Reference

IMAGE BUTTON	CONTROL	OPERATOR LABEL	WHAT IT DOES
1	Trigger	Precision / slow mode	Hold while moving the camera for finer, slower positioning.
2	Lower center stick button	Unused	No operator action is assigned.
3	Left stick-side button	Swap Main and Preview	Swaps the live camera with the preview camera.
4	Right stick-side button	Swap Main and Preview	Swaps the live camera with the preview camera.
5	Left base top button	Control Main/live	Joystick movement controls the camera currently assigned to Main/live.
6	Left base upper middle button	Selfview on, windowed	Turns selfview on, not fullscreen, on the first monitor.
7	Left base middle button	Selfview fullscreen	Turns selfview on fullscreen on the first monitor.
8	Left base lower button	Unused	No operator action is assigned.
9	Left base lower middle button	Selfview off	Turns selfview off.
10	Left base inner button	Control Preview	Joystick movement controls the camera currently assigned to Preview.
11	Right base top button	RVPTZ Left	Selects the RVPTZ Left camera for the active Main or Preview target.
12	Right base upper middle button	Quad Camera	Selects the Quad Camera for the active Main or Preview target.
13	Right base inner top button	Unused	No operator action is assigned.
14	Right base inner lower button	Unused	No operator action is assigned.
15	Right base lower middle button	RVPTZ Right	Selects the RVPTZ Right camera for the active Main or Preview target.
16	Right base lower button	Cisco Desk Cam 4K	Selects the Cisco Desk Cam 4K for the active Main or Preview target.