

Executive Broadcast Center

Production Studio A


HANDEDNESS

Right-handed

PREVIEW

On - output 2

JOYSTICK MAP

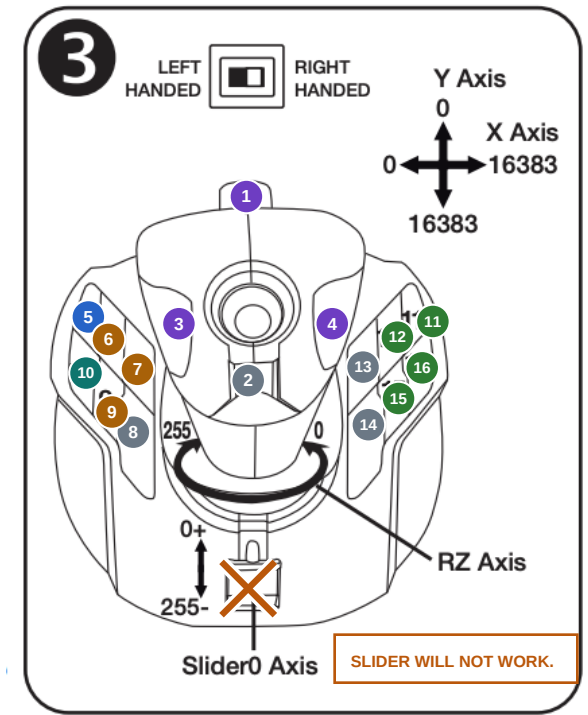

PAN
Twist stick

TILT
Move stick forward / b...

ZOOM
Move mini-stick forwa...

- Main
- Preview
- Camera
- Motion / swap
- Selfview
- No action


CONFIGURED MOTION

Pan / tilt speed 12 Zoom speed 12

Precision divides movement speed by 2.

Thrustmaster T.16000M button and axis reference

ENABLE JOYSTICK CONTROLS

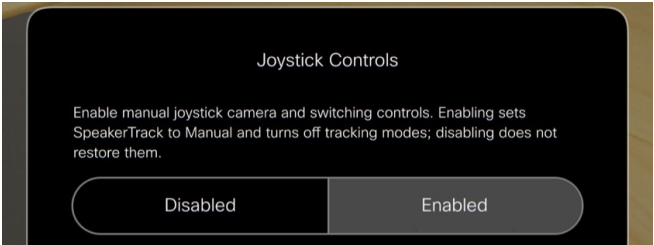

RoomOS location example - Enabled control only

- 1 Open Joystick Controls.
- 2 Select Enabled.
- 3 Match the on-screen handedness to the switch under the joystick.

TRACKING WARNING

Enabling manual control disables tracking modes. Disabling it does not automatically restore them.

OPERATING WORKFLOW

1. Choose Main or Preview as the target.
2. Choose a camera.
3. Frame with pan, tilt, and zoom.
4. Hold Precision mode for fine movement.
5. Use Swap Main and Preview when ready.

SCAN FOR GITHUB REPO

Right-handed room. Enabling selects Room Wide on Main.



ALL 16 BUTTON ASSIGNMENTS

BUTTONS 1-8

- 1 Precision mode
- 2 No action
- 3 Swap Main and Preview
- 4 Swap Main and Preview
- 5 Control Main
- 6 Selfview windowed
- 7 Selfview fullscreen
- 8 No action

BUTTONS 9-16

- 9 Selfview off
- 10 Control Preview
- 11 Presenter Closeup
- 12 Room Wide
- 13 No action
- 14 No action
- 15 Audience Reverse
- 16 Document Camera

CONFIGURED CAMERAS

Room Wide (default)	Button 12
Presenter Closeup	Button 11
Audience Reverse	Button 15
Document Camera	Button 16

Keep this guide in the room for operators.