


Wiring Diagram for the Flight Logger

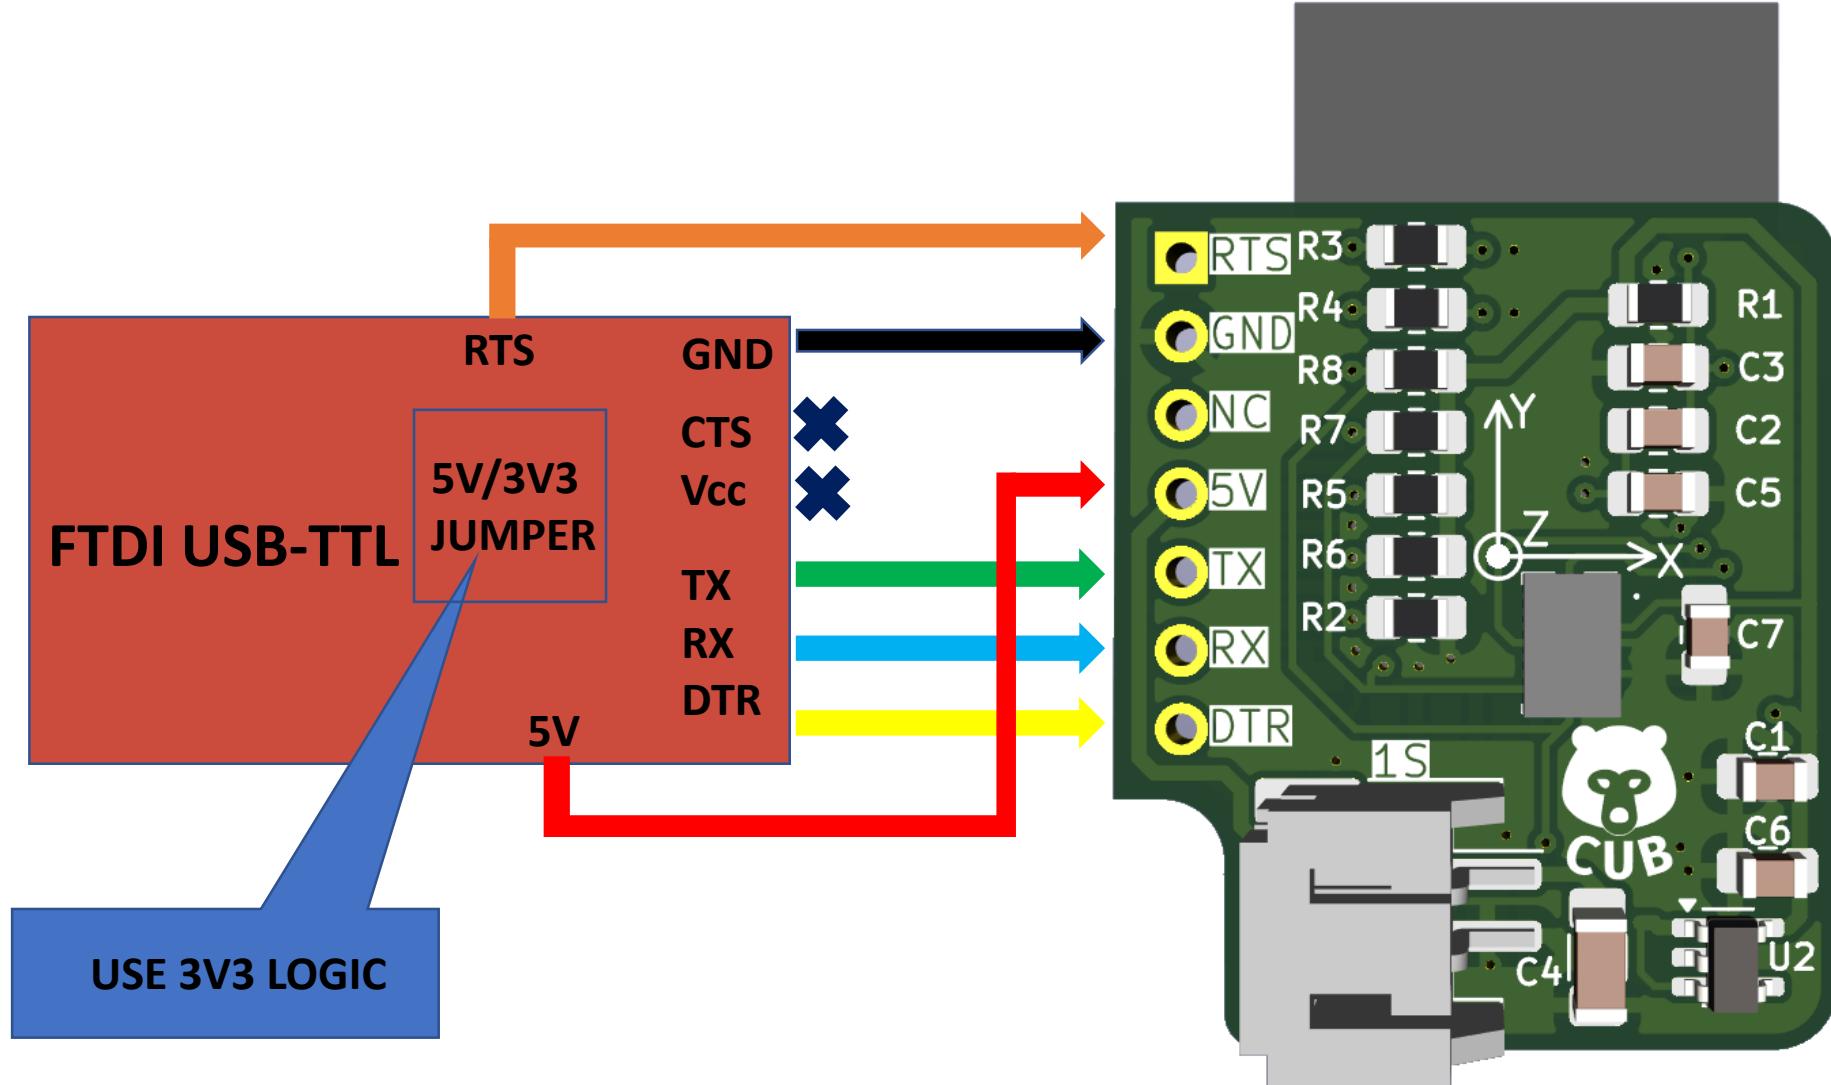

I2C Adresses:
Acc 0x19
Gyr 0x69

Keep battery unplugged
when powering from the programmer