Slat control and monitoring system

SCO content — component identification

Object code	DMC-MRDX-A-27-81-00-00A-A20A-A-T7BA	**Issue**	001-00 (new)
Issue date	2026-02-11	**Language**	en-GB
Responsible partner	AERALIS S.A.S. (U8025)	**Originator**	AERALIS S.A.S. — Training Centre Valmont (U8025)
Security	01 — Unclassified	**Quality assurance**	Unverified
Applicability	MRDX-42 and MRDX-46, all aircraft		


1 Component identification

This sharable content object teaches the location of the slat system components on the aircraft. It is used in the line maintenance familiarization course and takes about ten minutes to complete.

1.1 Belly fairing components

The power control unit is installed between frame C41 and frame C44, on the left hand side of the centre line, and is reached through access panel 196AB.

SLAT CONTROL AND MONITORING SYSTEM — COMPONENT LOCATION (LH WING)

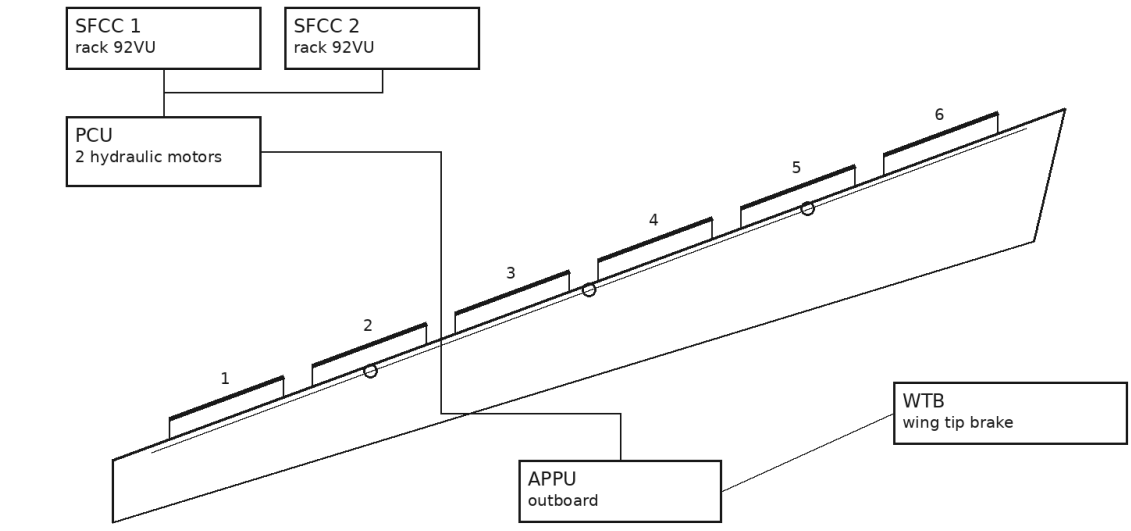

1 to 6 slat panels SFCC slat flap control computer PCU power control unit

Slat system — component location — Figure 1

LEARNING EVENT — A

On the illustration, select the power control unit. The learner has three attempts before the answer is shown.

1.2 Wing components

The asymmetry position pick-off unit is at the outboard end of the transmission, at rib 14. It is reached only with the slats fully retracted and both hydraulic systems depressurized.

LEARNING EVENT — B

Order the four steps required to gain access to the asymmetry position pick-off unit. The learner may not continue until the order is correct.