


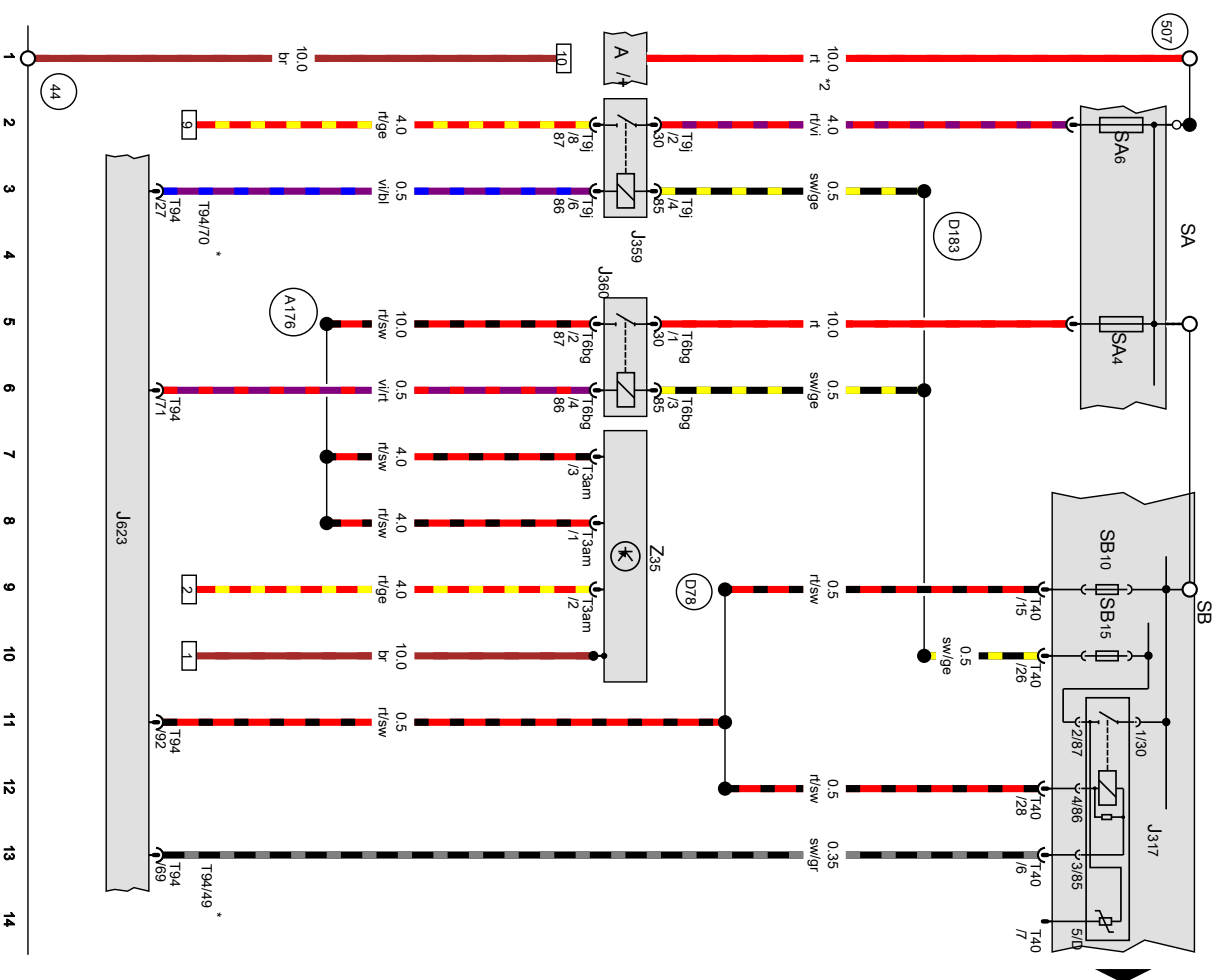

Terminal 30 power supply relay, Low heat output relay, High heat output relay, Fuse panel A, Fuse panel B, Auxiliary heater heating element

- A Battery
- J317 Terminal 30 power supply relay
- J359 Low heat output relay
- J360 High heat output relay
- J623 Engine control module
- SA Fuse panel A
- SA4 Fuse 4 (on fuse panel A)
- SA6 Fuse 6 (on fuse panel A)
- SB Fuse panel B
- SB10 Fuse 10 (on fuse panel B)
- SB15 Fuse 15 (on fuse panel B)
- T3am 3-pin connector
- T6bg 6-pin connector
- T9j 9-pin connector
- T40 40-pin connector
- T94 94-pin connector
- Z35 Auxiliary heater heating element
- 44 Ground connection on A-pillar, lower left
- 507 Terminal 30 threaded connection (on battery fuse holder)
- A176 Auxiliary heater connection (in instrument panel wiring harness)
- D78 Positive connection 1 (30a) (in engine compartment wiring harness)
- D183 Connection 4 (87a) (in engine compartment wiring harness)
- * Refer to applicable engine wiring diagram
- *2 16.0 diameter possible

WS = white
 SW = black
 RO = red
 RT = red
 BR = brown
 GN = green
 BL = blue
 GR = grey
 IL = lilac
 VI = yellow
 GE = orange
 TS = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.