
Position of Parts in Engine Compartment

[RHD: 2JZ-GE]

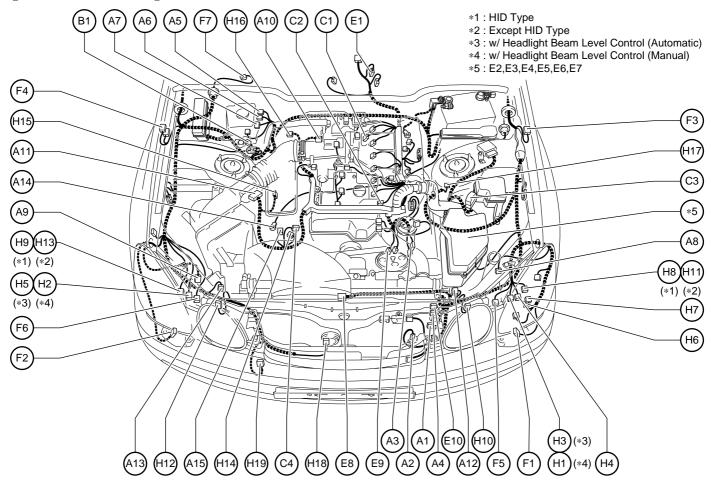

- A/C Ambient Temp. Sensor
- 2 A/C Condenser Fan Motor
- A 2 A/C Condenser Fan Motor
 A 3 A/C Magnetic Clutch and Lock Sensor
 A 4 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 5 ABS & TRC & VSC Actuator
 A 6 ABS & TRC & VSC Actuator
 A 7 ABS & TRC & VSC Actuator
 A 8 ABS Speed Sensor Front LH
 A 9 ABS Speed Sensor Front RH
 A 10 Accel Position Sensor

- A10 Accel Position Sensor
- A 11 Air Flow Meter
- A12 Airbag Sensor Front LH A13 Airbag Sensor Front RH
- A14 Alternator
- A15 Alternator
- B 1 Brake Fluid Level Warning SW
- Camshaft Position Sensor Camshaft Timing Oil Control Valve C
- Check Connector
- Crankshaft Position Sensor
- ECT Solenoid
- E
- 2 Engine and ECT ECU
 3 Engine and ECT ECU
 4 Engine and ECT ECU
 5 Engine and ECT ECU
 6 Engine and ECT ECU
 7 Engine and ECT ECU EEE

- Engine Hood Courtesy SW
- E 9 Engine Oil Level Sensor
- E10 Exhaust Gas Sensor
- Front Fog Light LH
- Front Fog Light RH
- 3 Front Side Turn Signal Light LH
- 4 Front Side Turn Signal Light RH
 5 Front Turn Signal and Clearance Light LH Front Turn Signal and Clearance Light RH
- Front Wiper Motor
- H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Beam Level Control ECU
 H 4 Headlight Beam Level Control ECU

- H 4 Headlight Beam Level Control ECU
 H 5 Headlight Beam Level Control Motor
 H 6 Headlight Cleaner Control Relay
 H 7 Headlight Cleaner Motor
 H 8 Headlight Control ECU LH
 H 9 Headlight Control ECU RH
 H10 Headlight LH (High)
 H11 Headlight LH (Low)
 H12 Headlight RH (High)
 H13 Headlight RH (Low)
 H14 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H15 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H16 Height Control Sensor (Front)
 H18 Horn LH
- H18 Horn LH
- H19 Horn RH