
DI271\_03

## **CRUISE MAIN Indicator Light Circuit**

## **CIRCUIT DESCRIPTION**

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.

## **WIRING DIAGRAM**

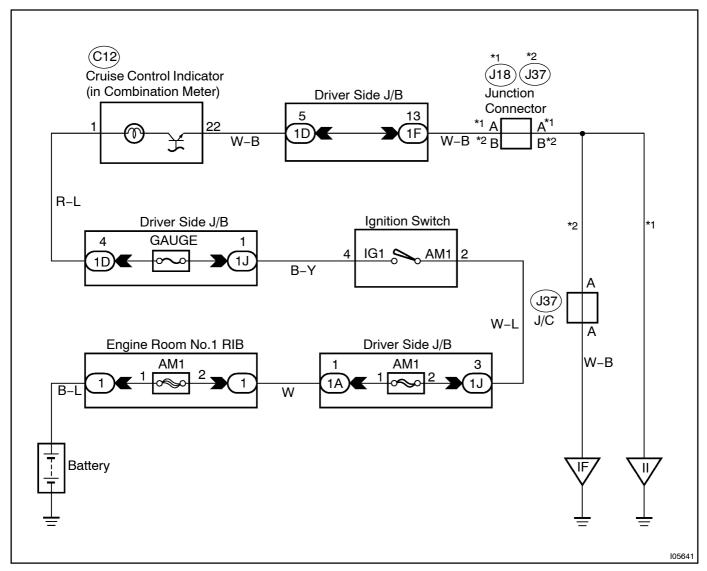

## **INSPECTION** PROCEDURE

1 Check combination meter See page DI-584).

NG

Replace combination meter.

OK

 $\label{lem:check_and_replace} Check \cite{Land_replace} \cie{Land_replace} \cite{Land_replace} \cite{Land_replace} \cite{Lan$