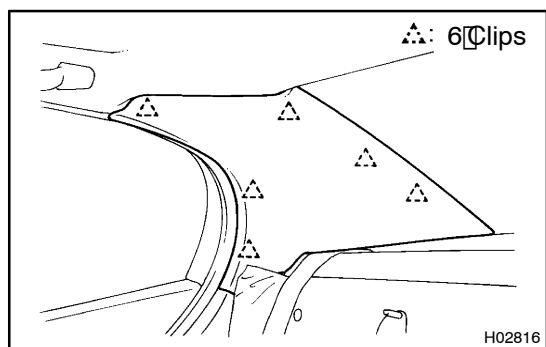BO0V6–02

REMOVAL
1. **REMOVE REAR SEAT**
   (See page BO–117)
2. **REMOVE THESE PARTS:**
(a) Rear door inside scuff plates
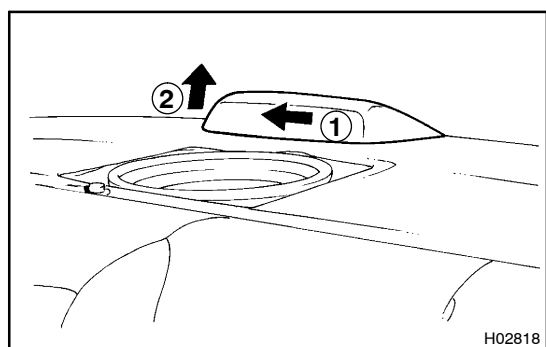(b) Rear door opening trims
(c) Rear seat side garnishes

3. **REMOVE ROOF SIDE INNER GARNISH**
Insert a screwdriver between the roof side inner garnish and body.
HINT:
• Tape the screwdriver tip before use.
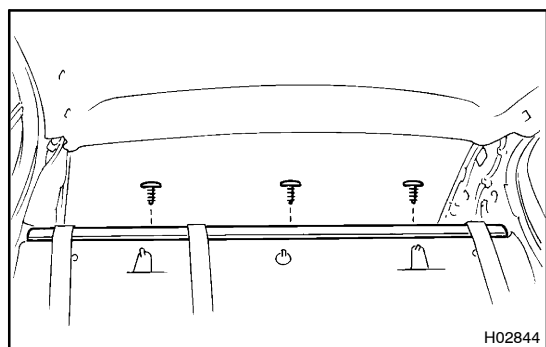• Do the same for LH and RH.
4. **REMOVE SPEAKER GRILLE**

5. **w/ High–mounted Stop Light:**
   REMOVE HIGH–MOUNTED STOP LIGHT
Remove the high–mounted stop light, as shown in the illustration.

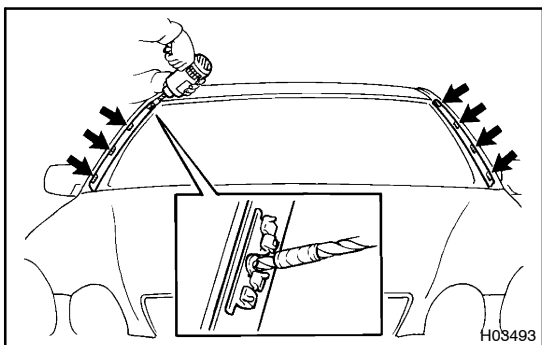

6. **REMOVE PACKAGE TRAY TRIM**
Using a clip remover, remove the 3 clips and package tray trim.
7. **REMOVE ROOM PARTITION TRIM**
Remove the 8 clips and room partition trim.
8. **REMOVE ROOF DRIP SIDE FINISH CENTER MOULD-
   ING**
   (See page BO–52)

9.   REMOVE BACK WINDOW OUTSIDE MOULDING CLIP
Using a drill of less than ø 5 mm (0.20 in.), drill out the rivet heads as shown in the illustration.
CAUTION:
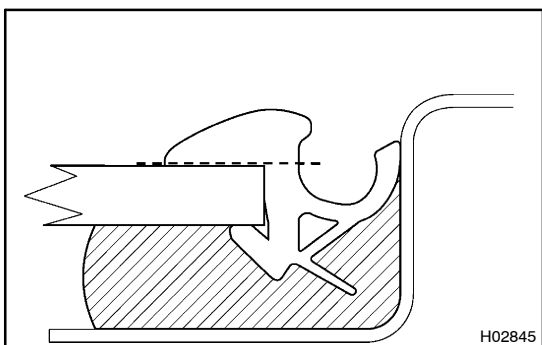**The cut rivet and rivet cutter will be not, avoid touching them.**
NOTICE:
Do not jiggle the rivet cutter while cutting, otherwise you may enlarge the rivet hole or damage the the rivet cutter.
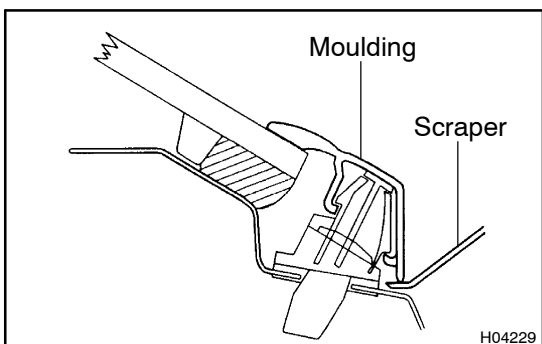HINT:
Do not drill the body.

10.   REMOVE BACK WINDOW OUTSIDE UPPER MOULD-ING
Using a knife, cut off the moulding as shown in the illustration.
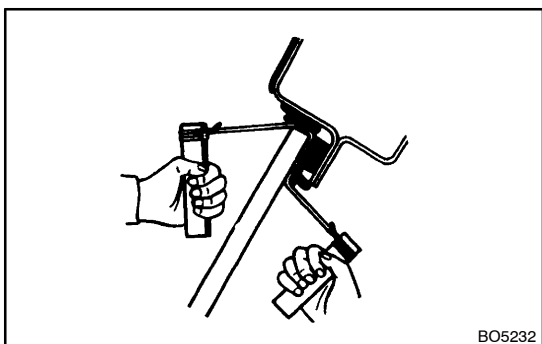**NOTICE:**
Do not damage the body with the knife.

11.   REMOVE BACK WINDOW OUTSIDE LOWER MOULD-ING
Using a scraper, remove the back window outside lower moulding.
HINT:
Tape the scraper tip before use.

12.   REMOVE WINDSHIELD GLASS
(a)   Disconnect the connector.
(b)   Push piano wire through between the body and glass from the interior.
(c)   Tie both wire ends to a wooden block or similar object.
HINT:
Apply adhesive tape to the outer surface to keep the surface from being scratched.
(d)   Cut the adhesive by pulling the piano wire around it.

(e)   Remove the glass.
NOTICE:
Leave as much of the adhesive on the body as possible when cutting off the glass.