STARTER

COMPONENTS

ST0MF–01

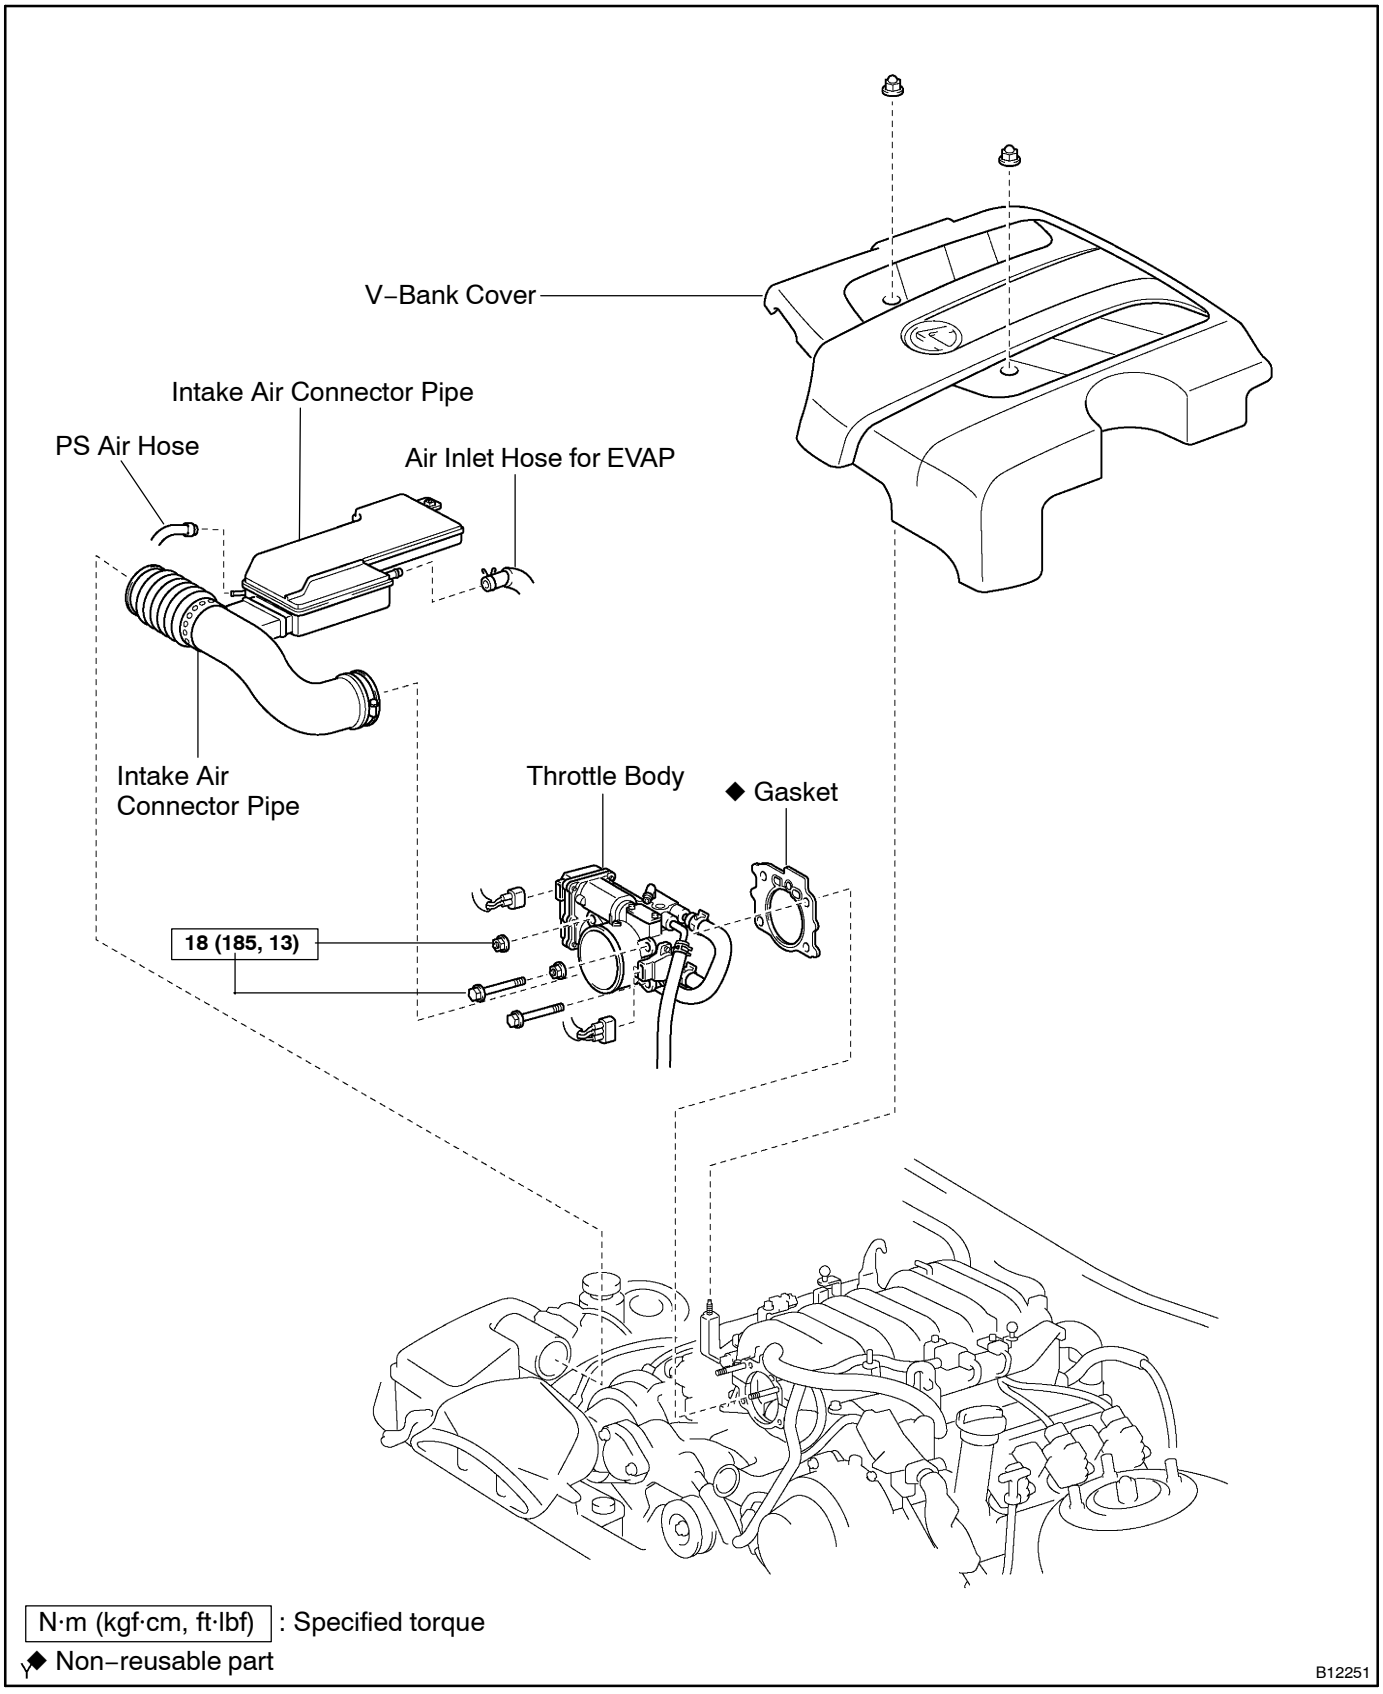

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

B12251

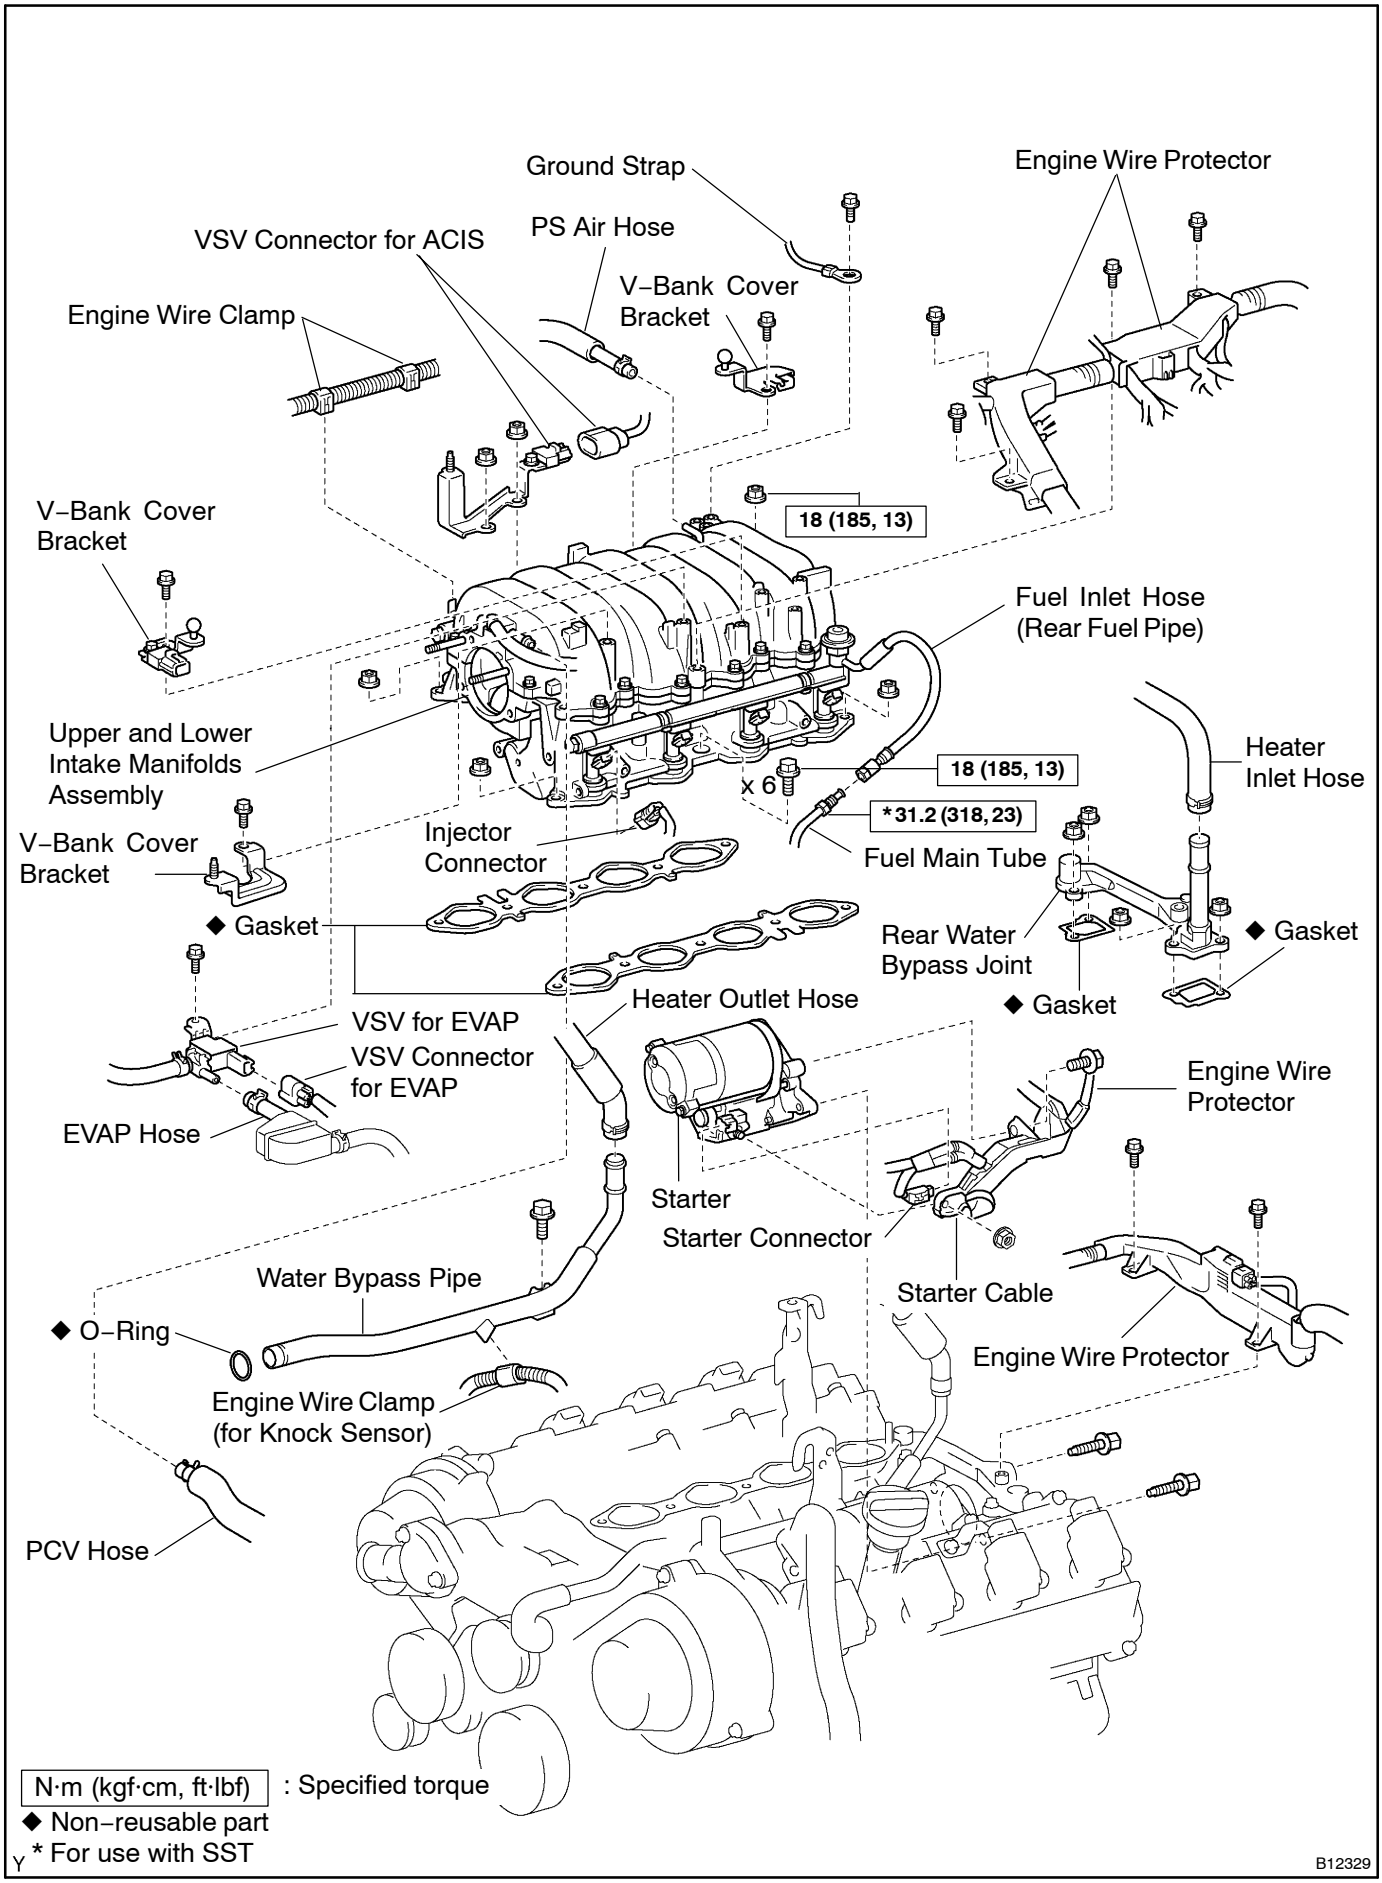
Ground Strap
Engine Wire Protector
VSV Connector for ACIS
PS Air Hose
V–Bank Cover Bracket
Engine Wire Clamp
V–Bank Cover Bracket
18 (185, 13)
Fuel Inlet Hose (Rear Fuel Pipe)
Upper and Lower Intake Manifolds Assembly
x 6
18 (185, 13)
*31.2 (318, 23)
Fuel Main Tube
Heater Inlet Hose
V–Bank Cover Bracket
Injector Connector
◆ Gasket
Rear Water Bypass Joint
◆ Gasket
◆ Gasket
Heater Outlet Hose
VSV for EVAP
VSV Connector for EVAP
EVAP Hose
Engine Wire Protector
Starter
Starter Connector
Starter Cable
Water Bypass Pipe
◆ O–Ring
Engine Wire Clamp (for Knock Sensor)
Engine Wire Protector
PCV Hose
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
* For use with SST
B12329

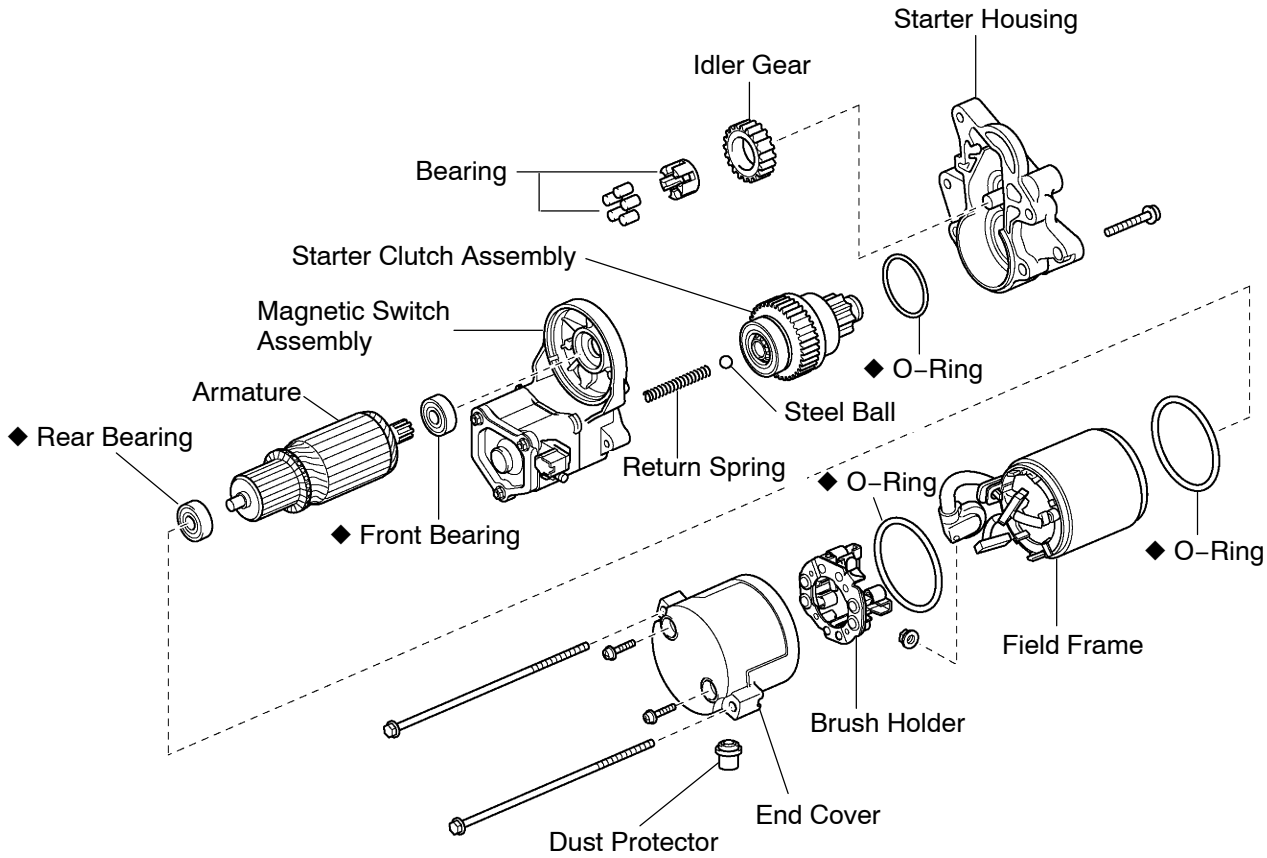

Magnetic Switch Assembly

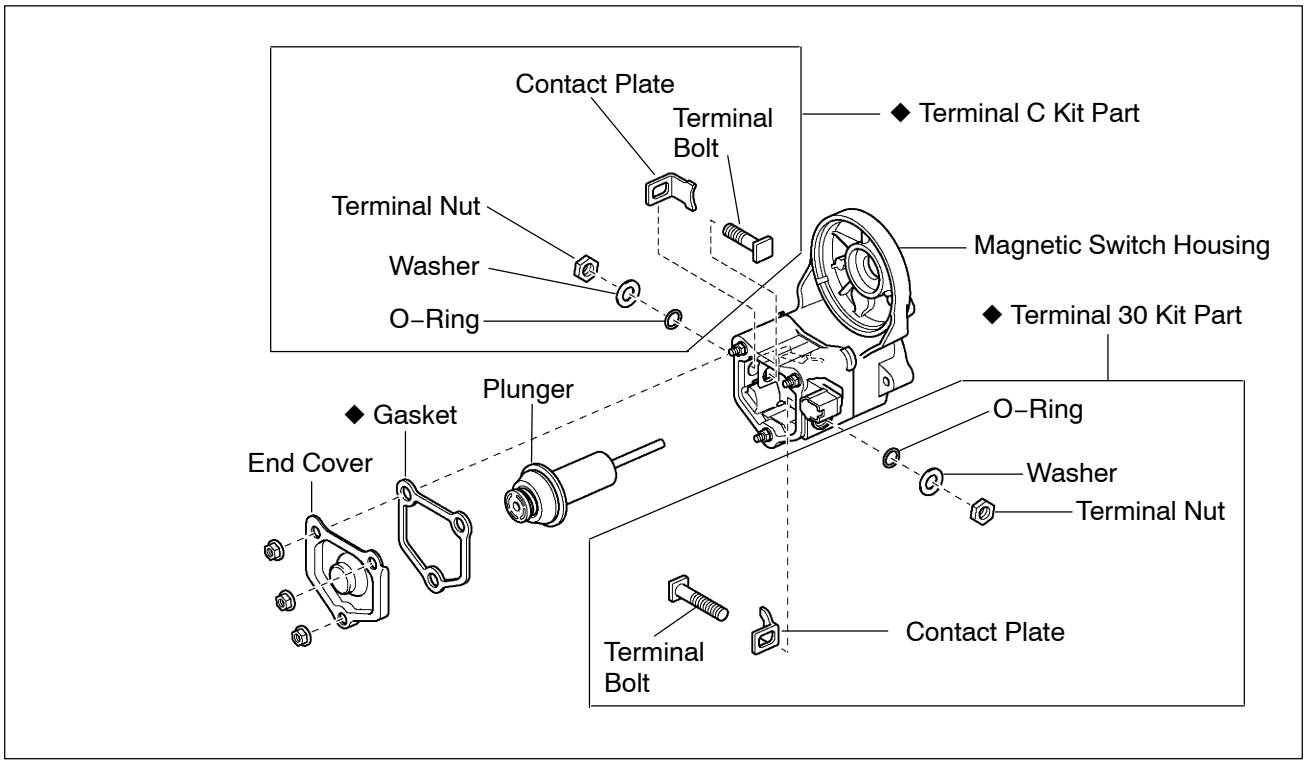

◆ Non–reusable part

B12317