
DI2BV-02

Mirror motor circuit

WIRING DIAGRAM

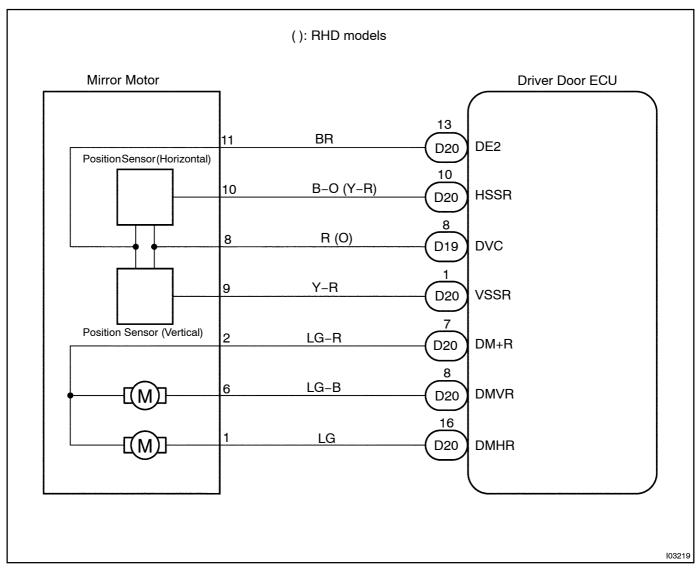

INSPECTION PROCEDURE

HINT:

Incase of using the LEXUS hand-held tester, start the inspection from step to and incase of thot using the LEXUS hand-held tester, start from step 2.

1 Check mirror motor using LEXUS hand-held tester.

PREPARATION:

Connect[]he[]LEXUS[]hand-held[]ester[]lo[]he[]DLC[]3.

CHECK:

Check@hat@he@mirror@motor@an@perate@n@an@ACTIVE@TEST.

OK[]

Proceed_to_next_circuit_inspection_shown_on problem_symptoms_table._(See_page_DI-706)

NG

2 | Check[mirror[motor.[See[page[BE-192)]

NG□

Replace the mirror motor.

OK

3 | Check wireharness and connector between mirror motor and driver door ECU.

NG□

Repair or replace wireharness or connector.

OK

Proceed lo next circuit inspection shown on problem symptoms table. (See page DI-706)