
16 PRIUS (Cont. next page) * 1 :w/ Safety Connect SRS * 5 :Before Aug. 2019 Production * 6 :From Aug. 2019 Production 1 2 3 4 M7 Front Seat Outer Belt Assembly LH M49 Front Seat Outer Belt Assembly RH M17 Curtain Shield Airbag Assembly RH s1 Front Seat Cushion Airbag Assembly RH F23 No. 1 Instrument Panel Airbag Assembly Lower Pretensioner ICR-ICR+ DK+ DK-FCP+ FCP-2 Ms1 1 Ms1 PL+ F56(A),F122(D),M1(B),M45(C),M100(E),M101(F) Airbag ECU Assembly +SR E1 E2 D2+ D2-LBE+ - 30 (A) -- 28 (A) ------- 29 (A) -- 27 (A) - 30 (D) -- 31 (D) ------ 29 (D) -- 28 (D) W-B 2 AF5 4 AF5 3 AF5 45 (3A) 1 AF5 1 🙀 2 FX1 3 FX1 D2+ +SL +SR Front Seat Inner Belt Assembly LH z15(C),z16(D) Driver Side Squib Circuit (Horn Button Assembly) X1(A),X2(B)
Instrument Panel Passenger Airbag without Door Assembly A8 Front Airbag Sensor LH A35 Front Airbag Sensor RH

16 PRIUS (Cont'd) (Cont. next page)

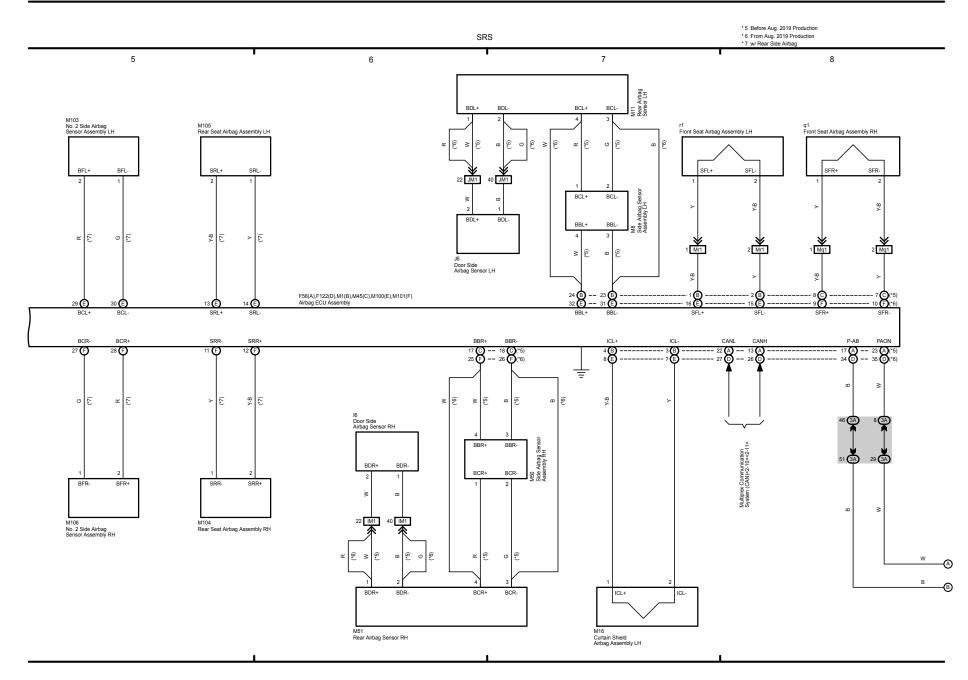

16 PRIUS (Cont'd) (Cont. next page)

