SERVICE HINTS _

FOG RELAY

3–5 : Closed with light control SW at **TAIL** or **HEAD** position and front fog light SW at **ON** position

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
B6	А	72 (LHD)	F1		82 (RHD)	J18		74 (LHD)
50		86 (RHD)	F2		68 (LHD)	J29		84 (RHD)
	А	72 (LHD)			82 (RHD)	J32		88 (RHD)
C13		86 (RHD)	J8		74 (LHD)	J37		88 (RHD)
	В	86 (RHD)	J1	10	74 (LHD)	J41	В	88 (RHD)
F1		68 (LHD)	J15	Α	74 (LHD)	J∠	12	88 (RHD)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)	
1B	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)	
''	58 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)	
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)	
"	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)	
1G	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)	
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)	
1H	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)	
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)	


: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

	Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
I	114	100 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)

: GROUND POINTS

Code	See Page	Ground Points Location	
EA	96 (LHD)	Right Fender	
EB	96 (LHD)	- Left Fender	
"	106 (RHD)		
EE	106 (RHD)	Under the ABS & TRC & VSC Actuator	
IF	98 (LHD)	Left Kick Panel	
"	108 (RHD)		
II	98 (LHD)	Right Side of the Cowl Panel	
	108 (RHD)	Cowl Side Panel RH	

(Hint: See Page 7, 23, 39)

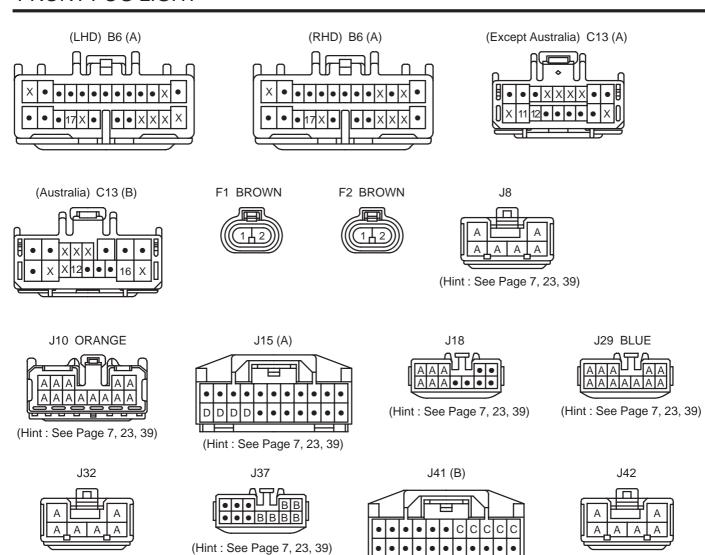

(Hint : See Page 7, 23, 39)

(Hint: See Page 7, 23, 39)