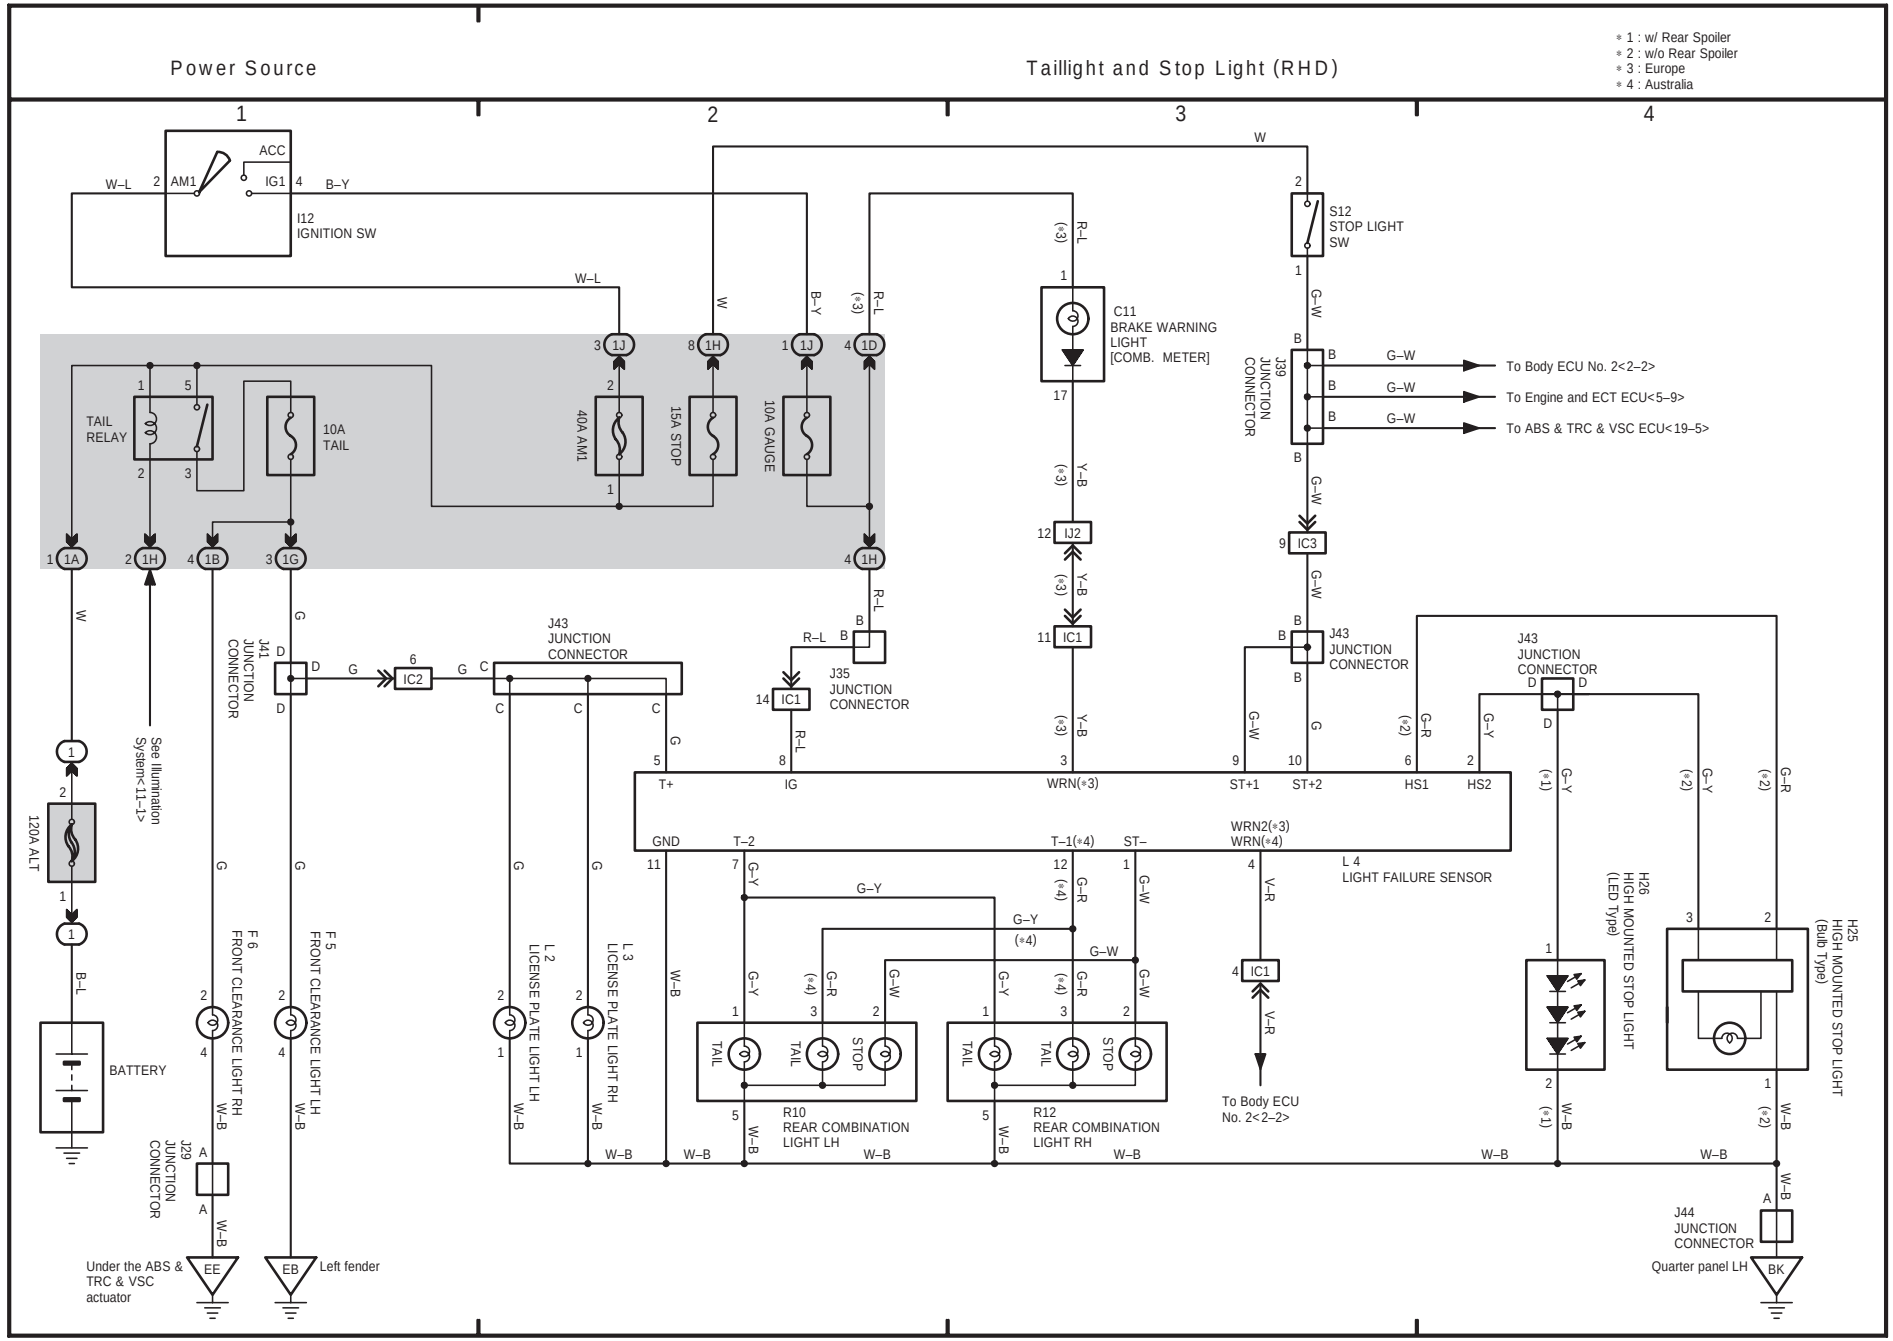
Power Source
Taillight and Stop Light (RHD)
* 1 : w/ Rear Spoiler
* 2 : w/o Rear Spoiler
* 3 : Europe
* 4 : Australia
I12 IGNITION SW
ACC
AM1
IG1
TAIL RELAY
10A TAIL
40A AM1
15A STOP
10A GAUGE
C11 BRAKE WARNING LIGHT [COMB. METER]
S12 STOP LIGHT SW
J39 JUNCTION CONNECTOR
To Body ECU No. 2<2–2>
To Engine and ECT ECU<5–9>
To ABS & TRC & VSC ECU<19–5>
J43 JUNCTION CONNECTOR
J35 JUNCTION CONNECTOR
J41 JUNCTION CONNECTOR
See Illumination System<11–1>
120A ALT
BATTERY
F 6 FRONT CLEARANCE LIGHT RH
F 5 FRONT CLEARANCE LIGHT LH
L 2 LICENSE PLATE LIGHT LH
L 3 LICENSE PLATE LIGHT RH
R10 REAR COMBINATION LIGHT LH
R12 REAR COMBINATION LIGHT RH
L 4 LIGHT FAILURE SENSOR
To Body ECU No. 2<2–2>
H26 HIGH MOUNTED STOP LIGHT (LED Type)
H25 HIGH MOUNTED STOP LIGHT (Bulb Type)
J29 JUNCTION CONNECTOR
J44 JUNCTION CONNECTOR
Under the ABS & TRC & VSC actuator
Left fender
Quarter panel LH