
DI1AR-05

DTC B2791/99 Key Unlock Warning SW OFF Malfunction

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
B2791/99	Open circuit in key unlock warning switch circuit.	Key unlock warning switch
	Key unlock warning switch adheres to OFF position.	Wire harness

WIRING DIAGRAM

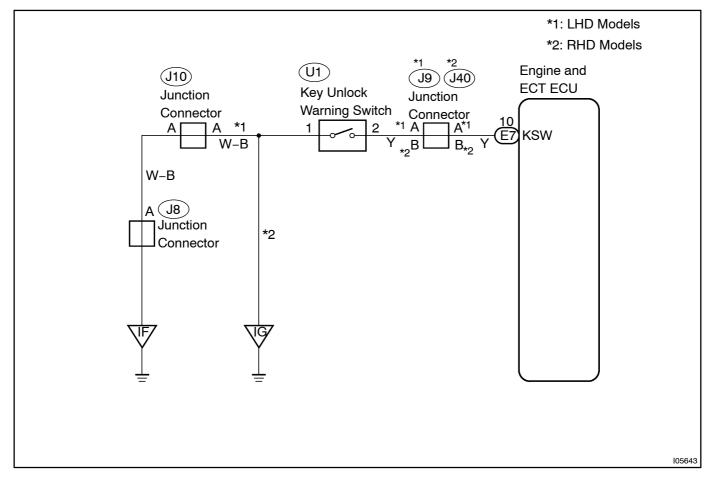

INSPECTION PROCEDURE

1[]	Check[key[unlock[warning[switch[(See[page[BE-31).	
	NG Replace key unlock warning switch.	
ОК		
2	Check harness and connector between key unlock warning switch and ECU.	
	NG Repair or replace the harness or connector.	

OK

Replace ECU.