
AT05W-02

OPERATION

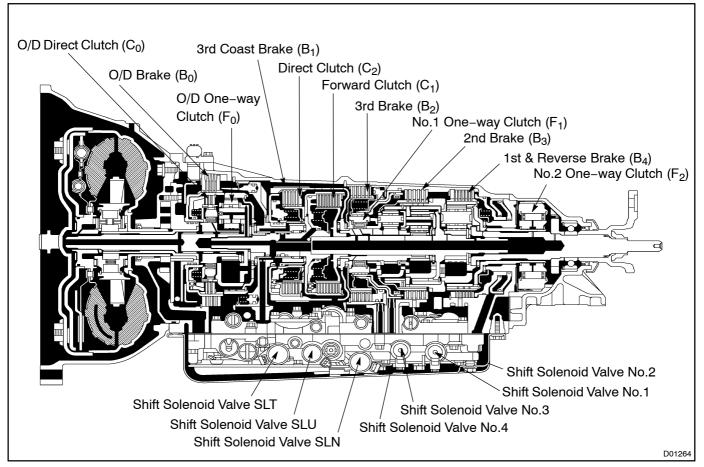

Shift Lever Position	Gear Position	S1	S2	S3	S4	C ₀	C ₁	C ₂	B ₀	B ₁	B ₂	В3	B ₄	F ₀	F ₁	F ₂
Р	Park	ON	OFF	ON	OFF	0										
R	Reverse	ON	OFF	OFF	OFF			0	0				0			
N	Neutral	ON	OFF	ON	OFF	0										
D	1st	ON	OFF	OFF	OFF	0	0							0		0
	2nd	ON	ON	OFF	OFF	0	0					0		0		
	3rd	OFF	ON	OFF	OFF	0	0				0			0	0	
	4th	OFF	OFF	ON	OFF	0	0	0			0			0		
	5th	OFF	OFF	OFF	ON		0	0	0		0					
4	1st	ON	OFF	OFF	OFF	0	0							0		0
	2nd	ON	ON	OFF	OFF	0	0					0		0		
	3rd	OFF	ON	OFF	OFF	0	0				0			0	0	
	4th	OFF	OFF	ON	OFF	0	0	0			0			0		
3	1st	ON	OFF	OFF	OFF	0	0							0		0
	2nd	ON	ON	OFF	OFF	0	0					0		0		
	3rd	OFF	ON	ON	OFF	0	0			0	0			0	0	
2	1st	ON	OFF	ON	OFF	0	0							0		0
	2nd	ON	ON	OFF	OFF	0	0					0		0		
L	1st	ON	OFF	OFF	OFF	0	0						0	0		0

○ : Operating