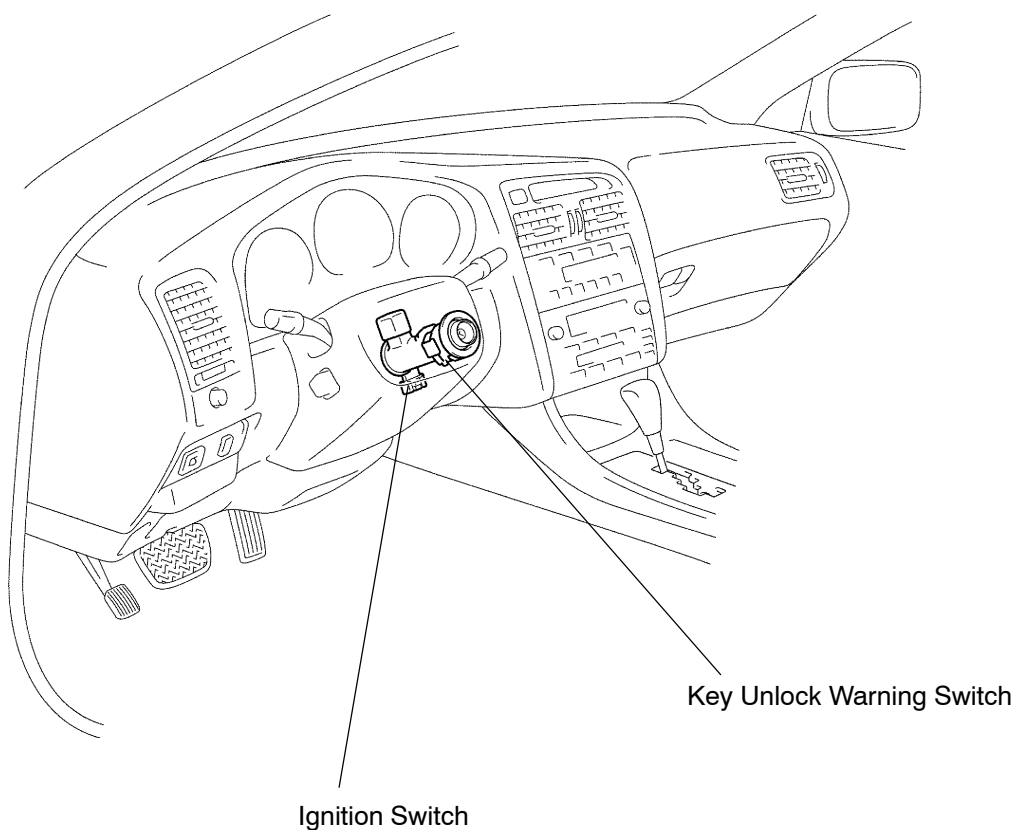# IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH
LOCATION

BE01L–03

Key Unlock Warning Switch

Ignition Switch

I05297