

RS07F-01

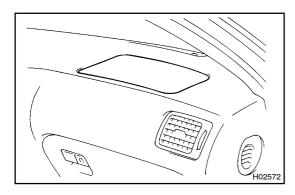

INSPECTION

- 1. VEHICLE NOT NVOLVED N COLLISION
- (a) Do a diagnostic system check. (See page DI-386)
- (b) Doalvisualcheckwhichincludesthefollowingitemswith thefrontpassengerairbagassemblyinstalledinthevehicle.

Check@uts,@ninute@racks@r@narked@iscoloration@n@netforntpassenger@irbag@assembly@and@nstrument@panel.

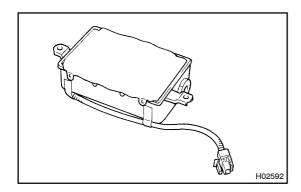

2. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS NOT DEPLOYED


- (a) Doatiagnostic system check. (See page DI-386)
- (b) Do@visual@heck@which@ncludes@heffollowing@tems@with thefront_passenger@airbag@assembly@removed@from@the vehicle.
 - Check tuts minute tracks or marked discoloration on the front passenger airbag assembly.
 - Check@uts@and@racks@n@vire@arness,@and@or@hipping in connectors.

CAUTION:

For removal and installation of the front passenger airbag assembly, see page RS-28 and RS-38, and be sure to follow the correct procedure.

3. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS DEPLOYED

- (a) Doatdiagnostic system check. (See page DI-386)
- (b) Do a visual check which includes the following items with the front passenger airbag assembly removed from the vehicle.
 - Check the deformation or cracks on the instrument panel and instrument panel reinforcement.
 - Check the damage on the connector and wire harness.

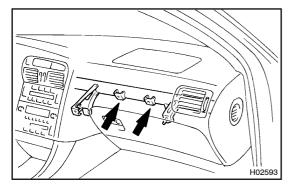

HINT:

If the instrument panel or instrument panel reinforcement is deformed or cracked, never repair it. Always replace it with a new one.