VVT SENSOR

COMPONENTS

FI0X3–01

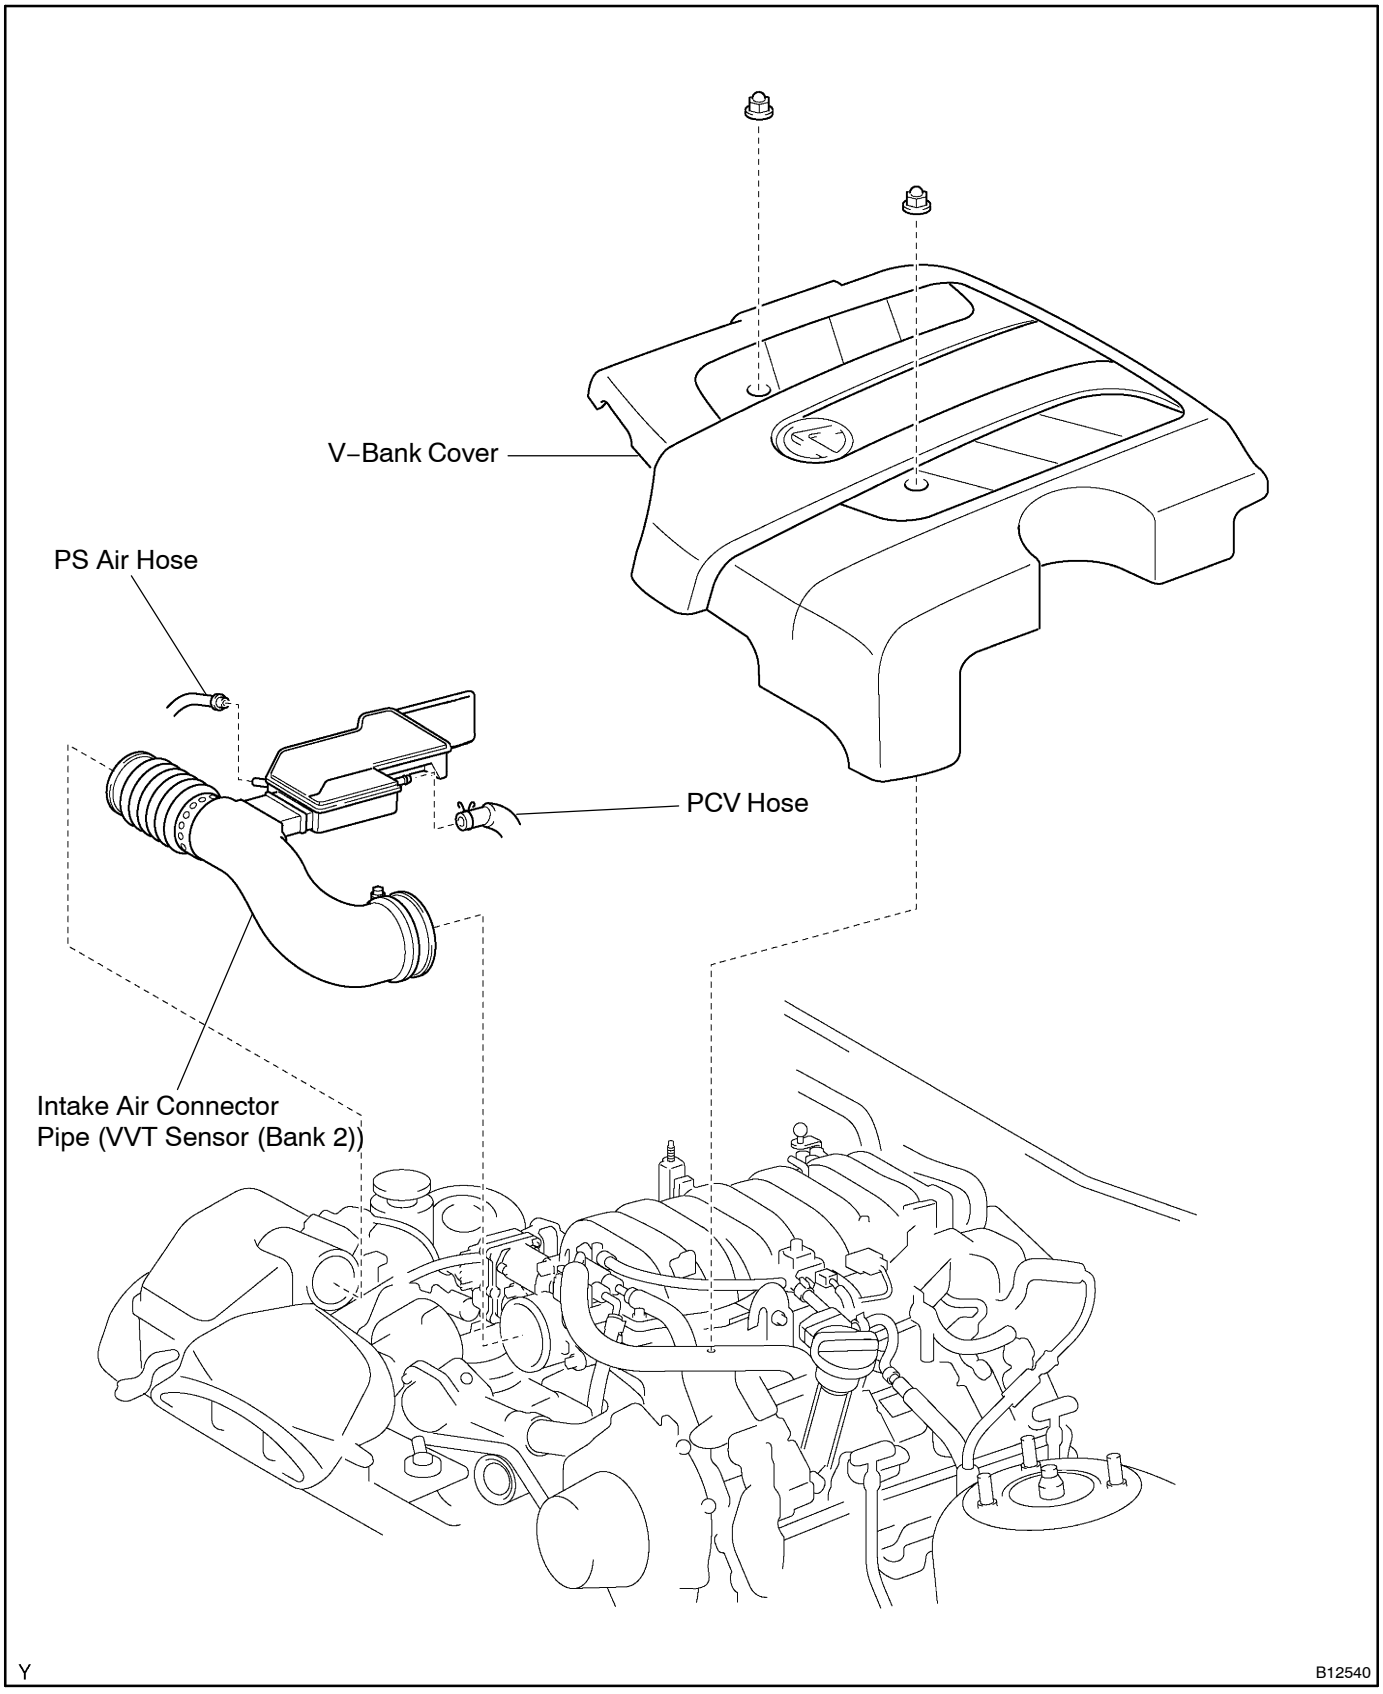

VVT Sensor (Bank 1)

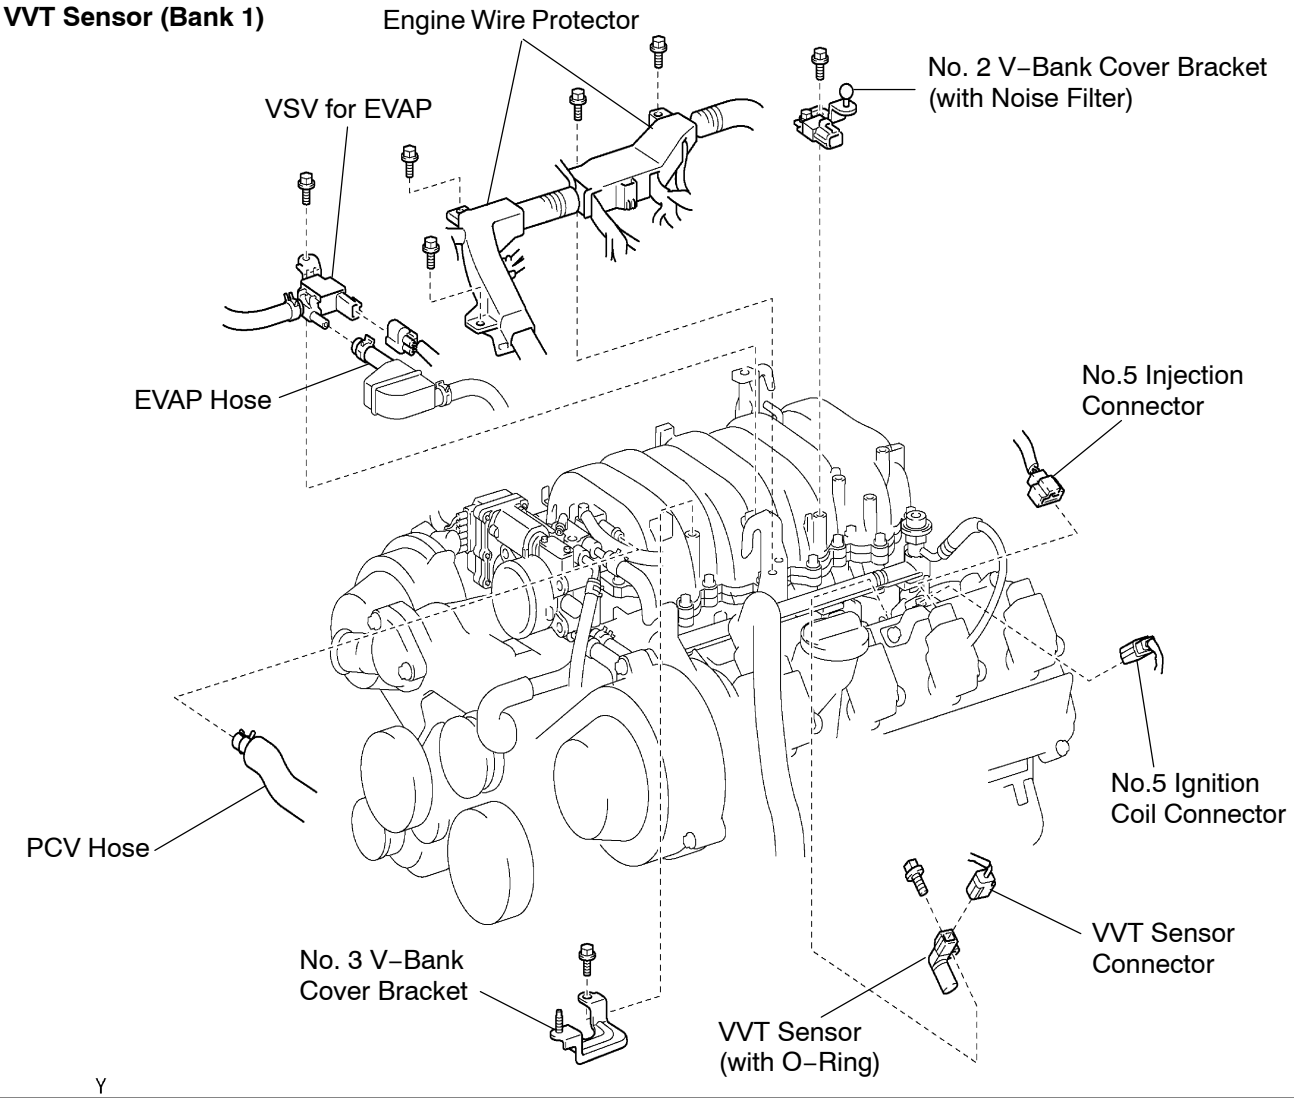
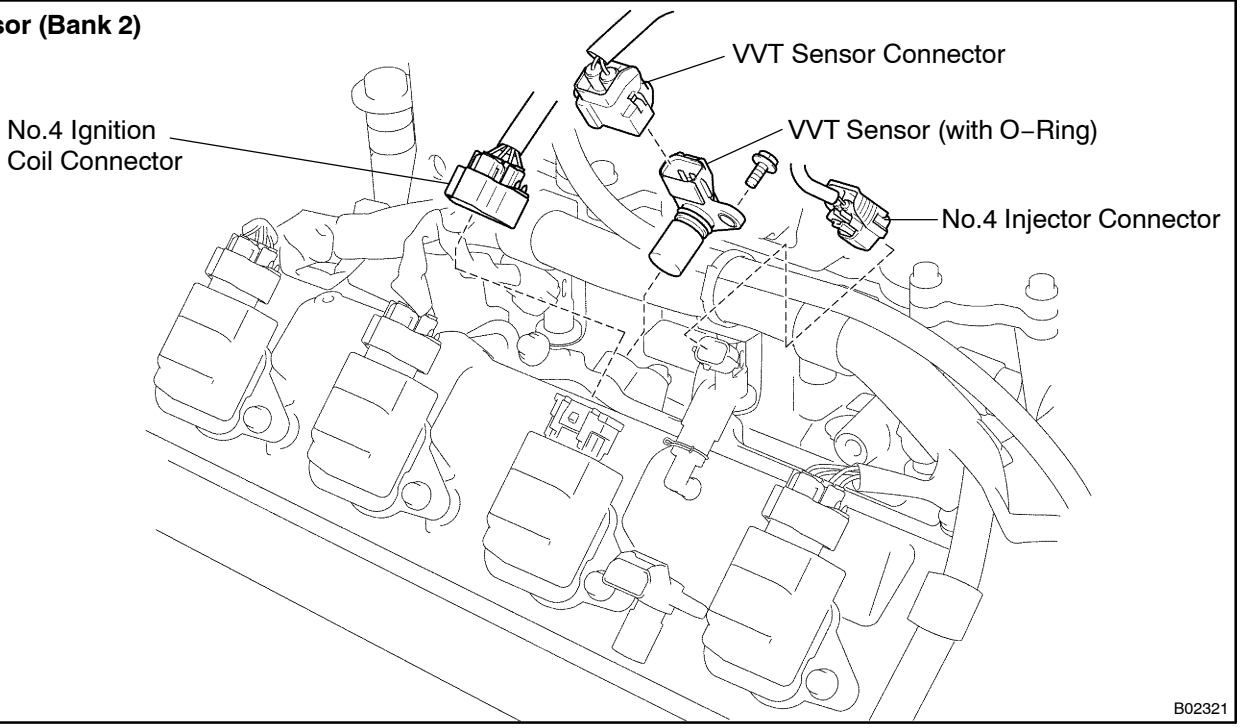
VVT Sensor (Bank 2)