
10 PRIUS (Cont. next page) Adaptive Front-Lighting System, Headlight Beam Level Control *16 :w/ Headlight Beam Level Control *17 :w/o Headlight Beam Level Control *18 :Before Jul. 2020 Production Headlight *19 :From Jul. 2020 Production 2 3 4 10A H-LP LH (*17) 20A H-LP LH (*16) 7.5A ECU-IG1 NO.3 M21 Rear Height Control Sensor Sub-Assembly LH SHRL 5 (1A) G (*16) 9 AM1 8 AM1 GR (*16) A65 No. 1 Headlight ECU Sub-Assembly LH A66 No. 1 Headlight ECU Sub-Assembly RH 2 (1B) 1 (1B) (*18) 2 (1E) 1 (1E) (*19) SGR SHRL -(A) (*17) CANL CANH GND ECUB LCL LCH LINS LINL LINL LINS LCH LCL GND ECUB G (*16) 12 20 20 W-B (*16) BE *16) -® (*16) L(*16) BE(*17) W-B(*16) G(*16)

10 PRIUS (Cont'd) (Cont. next page)

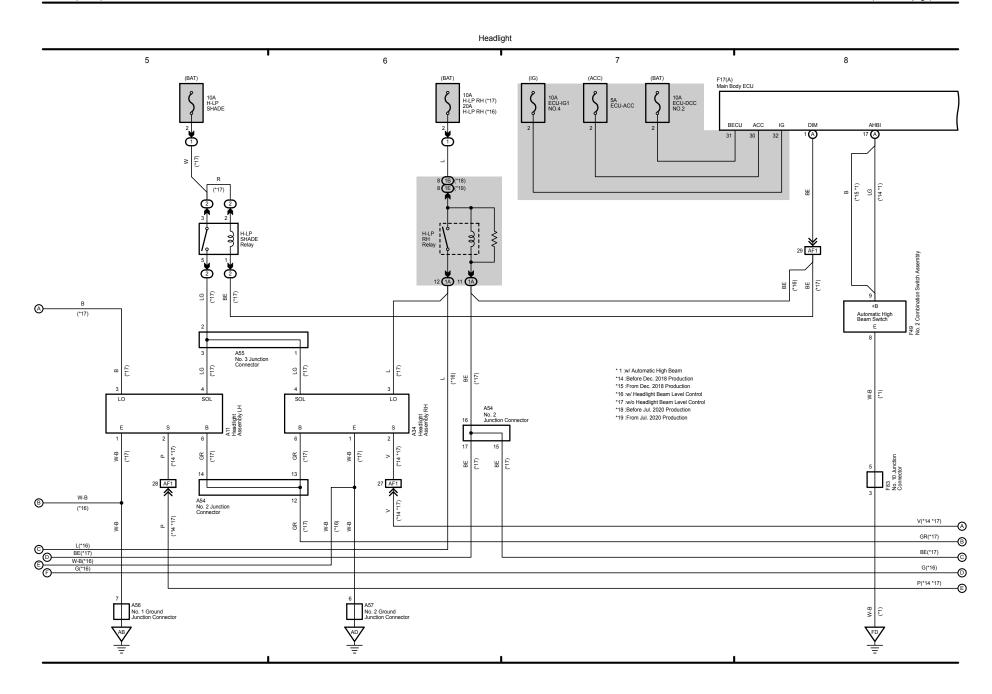


10 PRIUS (Cont'd) (Cont. next page) Headlight Automatic Light Control, Light Auto Turn Off System 9 10 11 12 F17(A) Main Body ECU RLEW HRLY CANL HEAD FFOG CLTS CLTE 24 (A) 10 (A) 22 **(A)** 12 **(**A**)** 26 (A) 3**(**A) 19 (A) 20 (A) 21 (A) <u>ي</u> س ω <u>ξ</u> 28 **3**F 5 GF1 6 GF1 14 GF1 W (*15) 88 .6 6 Multiplex Communication System (CAN)<2-16> Taillight S GR (*17) BE (*17) G (*16) رِجَ لــ (2 α <u>ξ</u> ω <u>ξ</u> CLTB CLTS CLTE G1 Automatic Light Control Sensor Taillight System BFG HF BFG LFG HU OFF (*13) Off (*11) OFF (*10) DRL OFF (*12) Off (*11) Flash Light Control Switch Low •— Front •— AUTO (*2) DRL (*10) **—** • High • Tail Head LFG F64 Headlight Dimmer Switch Assembly V(*14 *17) (*6) GR(*17) BE(*17) ©-* 2 :w/ Automatic Light Control * 6 :w/ Front Fog Light *10 :w/o Automatic Light Control *11 :Canada G(*16) **D**-P(*14 *17) **(E)**-*12 :w/ Automatic Light Control Except Canada *13 :Except Canada


*14 :Before Dec. 2018 Production
*15 :From Dec. 2018 Production
*16 :w/ Headlight Beam Level Control
*17 :w/o Headlight Beam Level Control

10 PRIUS (Cont'd) (Cont. next page) * 6 :w/ Front Fog Light *14 :Before Dec. 2018 Production *15 :From Dec. 2018 Production Front Fog Light 13 14 15 16 F17(A) Main Body ECU TRLY FFGO 10A FOG FR 52 (3A) 12 AF1 A54 No. 2 Junction Connector 4 4 4 BE *14 *6) 11 AF1 (g) W-B W-B (*15 *6) A57
No. 2 Ground
Junction
Connector A56 No. 1 Ground Junction Connector

10 PRIUS (Cont'd) (Cont. next page)

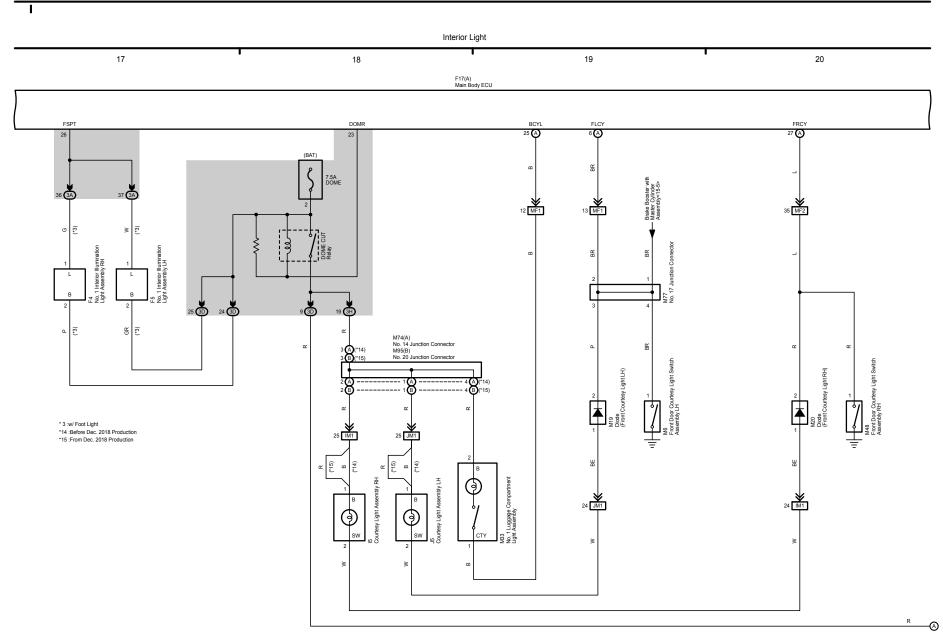

10 PRIUS (Cont. next page) (Cont. next page)

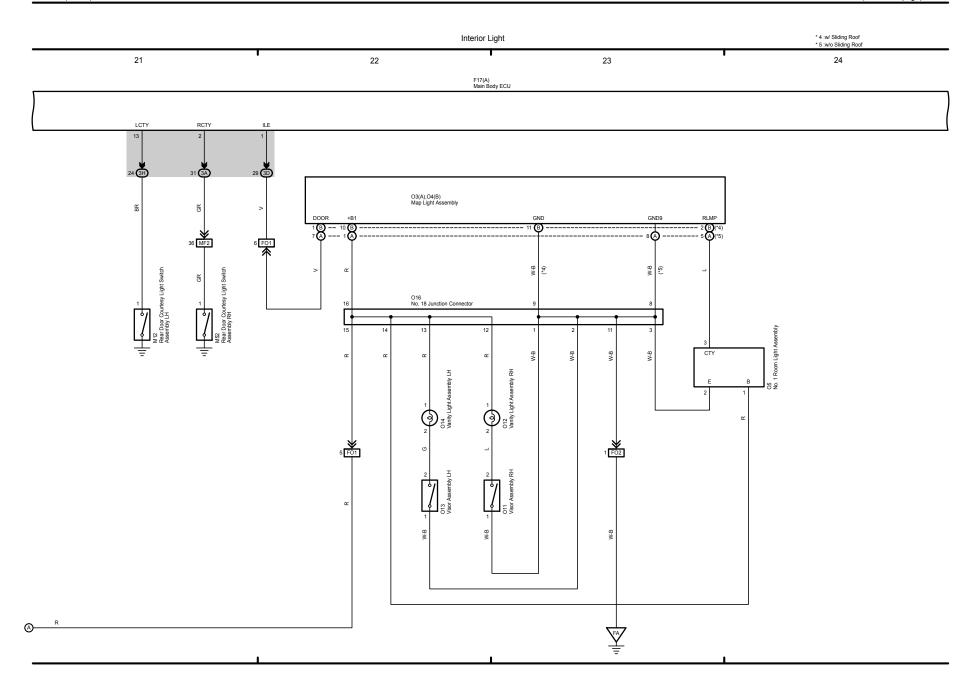

10 PRIUS (Cont'd) (Cont. next page) Back Door Opener Door Lock Control 25 26 27 28 F17(A) Main Body ECU GND1 BCTY LSFR LSR 18 (A) 7.5A DOOR BACK 34 (3H) 12 (3D) 18 (3H) 9 (3H) 30 MF1 17 QM1 57 MF2 ≯ 17 QR1 12 KM1 2 KM1 3 KM1 1 IM1 2 IM1 16 IM1 12 LM1 2 LM1 (3) LSSR LSSR LSSR UL UL UL * 7 :Driver's Door Only Smart Key System *14 :Before Dec. 2018 Production *15 :From Dec. 2018 Production K1 Rear Door Lock with Motor Assembly RH Front Door Lock with Motor Assembly RH Rear Door Lock with Motor Assembly LH 2 QR2 23 KM1 23 LM1 2 QM2 8-M W-B W-B

10 PRIUS (Cont'd) (Cont. next page)

