

# CHAPTER 18

## Tailscale


### 18.1 Overview

The Zyxel Device supports Tailscale, a site-to-site mesh VPN (Virtual Private Network) service that connects client devices (computer, smartphone, router, firewall) across different networks.

By default, Tailscale only routes traffic between client devices running Tailscale and does not protect public Internet traffic. However, there may be times when you want to route traffic from the Tailscale VPN to the public Internet, such as when you need access to an online service only available in another country.

In the following figure, the Tailscale server (**TS**) creates a mesh network, allowing each client device to connect directly with others, resulting in lower latency. The Zyxel Device act as the exit node (**E**) to route the VPN traffic to the public Internet.

**Figure 86** Tailscale Example Topology

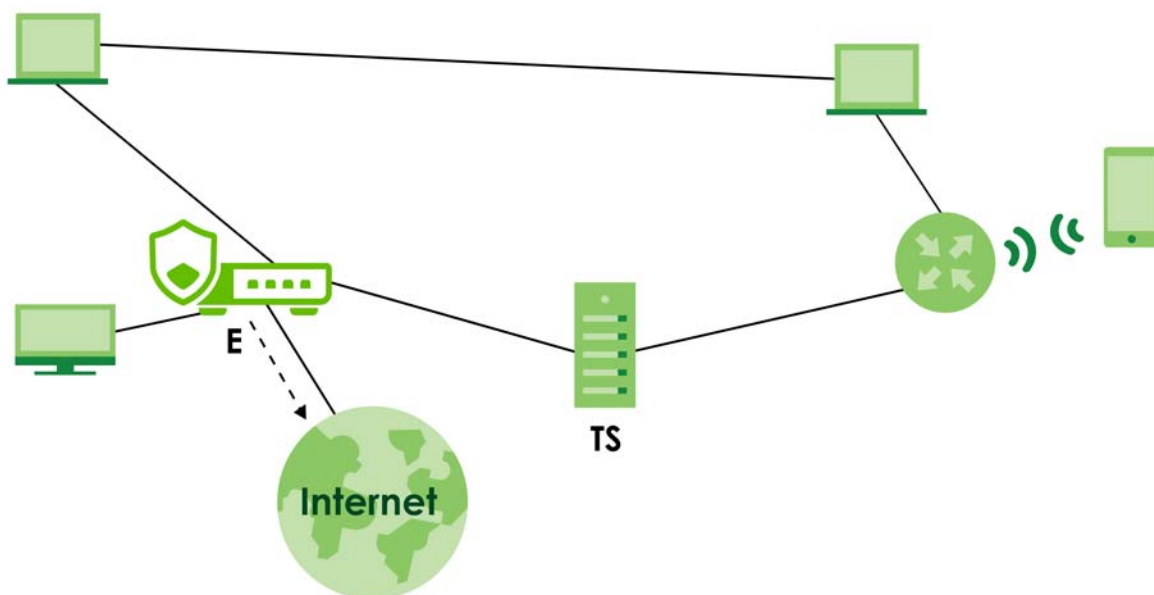

## 18.1.1 Tailscale Commands

This table lists the commands for Tailscale. You must use the `edit running` command to enter the configuration mode before you can use these commands.

Table 63 Tailscale Commands

| COMMAND                                                              | DESCRIPTION                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>vrf main tailscale enabled {true   false}</code>               | Sets Tailscale to run on the Zyxel Device so that VPN clients with Tailscale software can establish a VPN connection.                                                                                                                                                                                                                                                                           |
| <code>vrf main tailscale auth-key-shadow &lt;auth-key&gt;</code>     | Inputs the authentication key from the Tailscale admin console on the Zyxel Device                                                                                                                                                                                                                                                                                                              |
| <code>vrf main tailscale port &lt;num&gt;</code>                     | Sets the port number for the Tailscale service. The default port number is 41641.                                                                                                                                                                                                                                                                                                               |
| <code>vrf main tailscale exit-node {true   false}</code>             | By default, Tailscale only routes VPN traffic between running client devices, but does not route VPN traffic to the Internet. Enable this if you want Tailscale to route the client devices' Internet traffic through the Zyxel Device. This must also be enabled on the Tailscale admin console.                                                                                               |
| <code>vrf main tailscale accept-subnet-routes</code>                 | Accepts advertised routes from other Tailscale VPN nodes. If you disable this, the Zyxel Device can only access peer VPN nodes, but not the advertised routes of those nodes.                                                                                                                                                                                                                   |
| <code>vrf main tailscale default-snat</code>                         | Sets the IP address of the outgoing interface on the Zyxel Device as the source IP address of the packets it sends out through its WAN trunk interfaces. The Zyxel Device automatically adds local source IP addresses for traffic it routes from internal interfaces to external interfaces.                                                                                                   |
| <code>vrf main tailscale advertise-routes &lt;addr-object&gt;</code> | Select an address object of host or subnet type if you want to share them with other Tailscale VPN nodes. The selected subnets are open for access by the Tailscale network. Other client devices in the Tailscale network that accept advertised routes can access these resources through the Zyxel Device. This must also be configured on the Tailscale admin console.                      |
| <code>cmd tailscale status</code>                                    | Displays Zyxel Device Tailscale status. <ul style="list-style-type: none"> <li><code>active</code>: The VPN connection is established and data is being transmitted.</li> <li><code>idle</code>: The VPN connection is established and ready to be used, but no data is being transmitted.</li> <li><code>-</code>: No data has ever been sent to or received from the Zyxel Device.</li> </ul> |
| <code>cmd tailscale show auth-key</code>                             | Displays the plain-text authentication key.                                                                                                                                                                                                                                                                                                                                                     |
| <code>cmd tailscale ip</code>                                        | Displays the IP address assigned to the Zyxel Device by the Tailscale server.                                                                                                                                                                                                                                                                                                                   |
| <code>cmd tailscale interface</code>                                 | Displays the interface used on the Zyxel Device by the Tailscale server.                                                                                                                                                                                                                                                                                                                        |
| <code>cmd tailscale ping &lt;hostname   ip-address&gt;</code>        | Pings a host name or IP address from the Zyxel Device through the Tailscale VPN.                                                                                                                                                                                                                                                                                                                |
| <code>cmd tailscale netcheck</code>                                  | Displays the status of the network connection to the Tailscale server when Tailscale is enabled.                                                                                                                                                                                                                                                                                                |