

CHAPTER 1

Zyxel One App

1.1 Overview

The Zyxel One app is used to manage your Mesh network, Router, and Extender, providing a simple interface for network setup and monitoring.

1.1.1 Device Names and Roles

The following table lists the names of the network devices and their roles.

Table 8 Device Names and Roles

NAME	ROLE
Controller	Refers to: • A Zyxel Mesh Router (R), or • A Zyxel Mesh Extender (EX-1) connected to a non-Mesh Router. The Controller manages and coordinates Wi-Fi activity in a network.
Router	Refers to a Zyxel Mesh Router (R) and a non-Mesh Router (NR).
Extender (EX)	Refers to a Zyxel Mesh Extender. An Extender is the agent of the Mesh network.
Extender-1 (EX-1)	Refers to a Zyxel Mesh Extender connected to the a non-Mesh Router, which acts as the controller of the network.
Extender-2 (EX-2)	Refers to a Zyxel Mesh Extender connected to the Extender-1.

1.2 List of Tutorials

Mesh network Setup:

- [Setting Up a Mesh Router with an Extender](#)

Network Management:

- [Viewing Controller Status](#)
- [Viewing the Connected Client Devices](#)
- [Checking Your Network Topology](#)
- [Enabling Mesh](#)

Wi-Fi Network Setup:

- [Changing the Wi-Fi Network Name and Password](#)

- [Joining a Wi-Fi Network Using a QR Code](#)
- [Blocking Wi-Fi Clients from Connecting to Each other](#)

Device Management:

- [Checking the Power Consumption](#)
- [Turning Off the LEDs of the Controller](#)
- [Viewing and Changing the Router and Extender's Information](#)
- [Changing the Name of a Client Device](#)
- [Setting Up a Parental Control Profile](#)
- [Help Menu](#)

Help Menu:

- [Rebooting the Router or Extender](#)
- [Gateway Detail](#)
- [Contacting Customer Support](#)

Advanced Scenarios:

- [Setting Up a Non-Mesh Router with Two Extenders](#)
- [Adding Extenders to Form a Daisy Chain](#)

1.3 Mesh Network Setup

There are several ways to set up your Mesh network. You can:

- Set a Mesh Router using a wired or Wi-Fi connection to one or more extenders.
- Or, set a non-Mesh Router with a wired connection to two or more extenders.

This section shows you how to manage, set up the Router and the Extender and get help through the app. The Controller synchronizes the configuration of all the Wi-Fi devices, including APs and Extenders (Agents) in the Mesh Wi-Fi network.

You can set up the Mesh network of the Router and the Extender with the Zyxel One app with either Wi-Fi or wired connection.


Table 9 Network Setup Scenario

SCENARIO	MESH ROUTER	NON-MESH ROUTER
Wired Connection to Extender(s)	Yes	Yes (see Section 1.9 on page 36)
Wi-Fi Connection to Extender(s)	Yes (see Section 1.10 on page 43)	No

1.4 Setting Up a Mesh Router with an Extender

This scenario describes the process of creating a Mesh network. In this example, you have a Router (**R**) that supports Mesh acting as the controller, and the Extender (**EX**).

In the figure below, the Mesh Router (**R**) is in room 1 (**R1**), and the Extender (**EX**) and the client devices (**C**) in the Wi-Fi dead zone are in room 2 (**R2**)

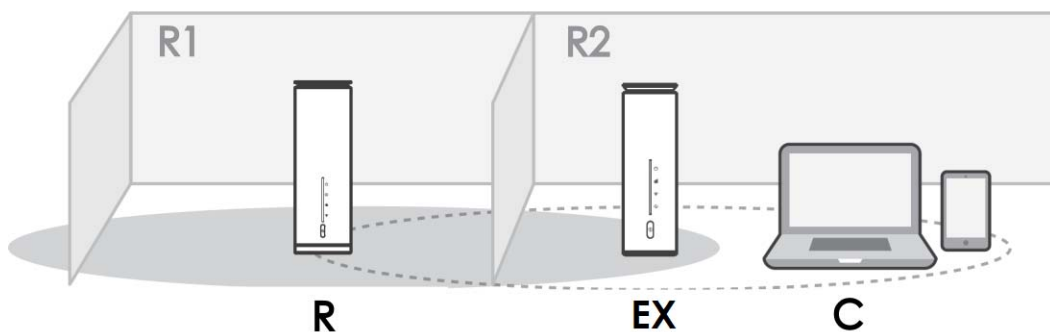

1.4.1 Download the Zyxel One App

Download the Zyxel One app from the Google Play Store or Apple App Store. Make sure your mobile operating system version meets the following requirements to download the Zyxel One app.

- Android - version 11 or later.
- iOS - version 15 or later.

Check for Updates

To ensure you have the latest version of the Zyxel One app, go to the Google Play Store or Apple App Store. Updating to the newest version is important as it includes bug fixes, new features, and support for new models.

App Version


To see your current Zyxel One app version, tap **More > About** in the app.

Supported Models

For a list of models and firmware versions compatible with the Zyxel One app, please refer to the Zyxel One app website.

1.4.2 Router Hardware Setup


Plug in the power adapter and turn on the Router. Wait for about 2 minutes. The **POWER** LED lights up steady green.

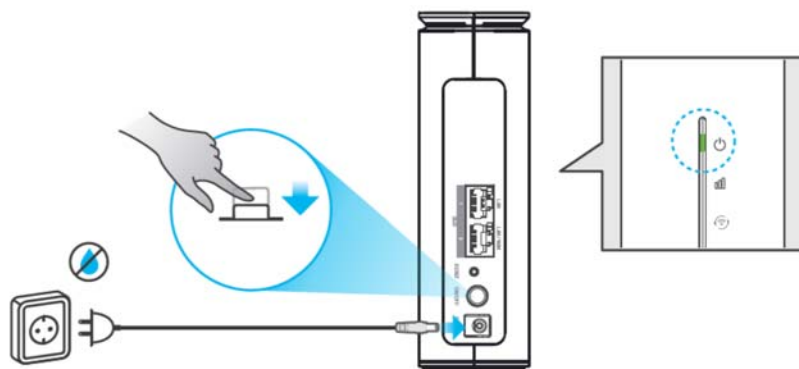

Note: The power adapter is not waterproof, avoid contact with liquid. Handle the Power Supply with care; do not pry open, nor pull or press the pins on it.

1.4.3 Adding the Router to the Zyxel One App


- 1 To connect the Zyxel One app to the Mesh Router, open the app, tap **Set up new device**. If it is not your first login, tap **Login to existing device**.

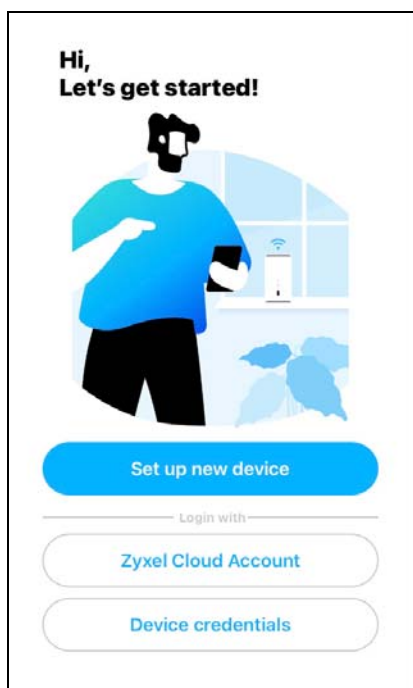

- 2 Select **Scan the QR code** or **Set up manually** to add your Mesh Router to the Zyxel One app.


Scan the QR Code

Scan the QR code on the device label (L) of your Mesh Router.

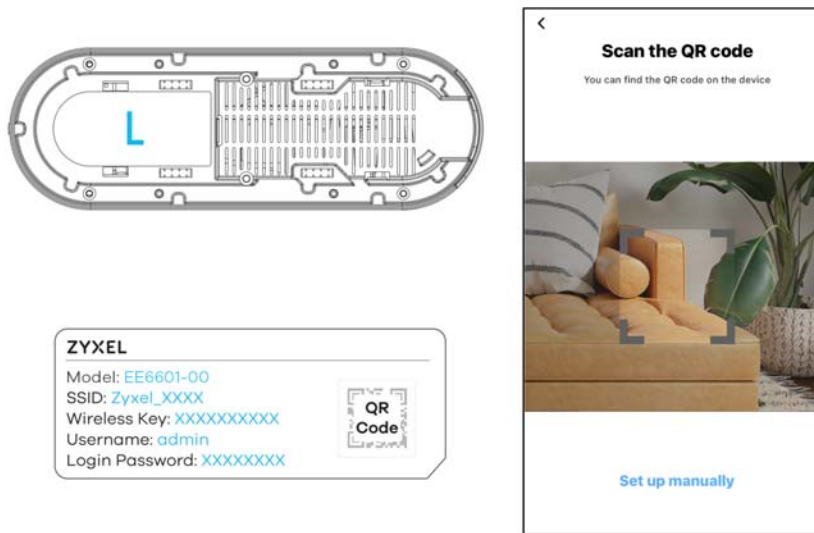


Set Up Manually

(1) Tap **Set up manually** to enter the **Model number** of your Mesh Router. For example, EE6601-00. The model number is on the box or on the Mesh Router device label. Tap **Next** to go to the **Device login** screen.

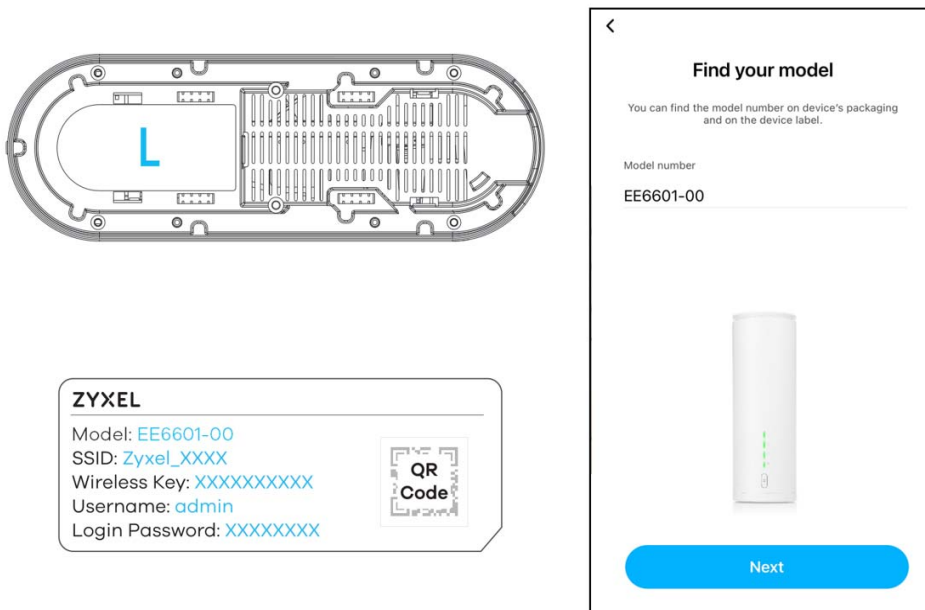


(2) In the **Device login** screen, enter the **User Name** and **Login Password** found on the device label of your Mesh Router. Then, tap **Next** to go to the **WiFi login** screen, enter the **SSID** and the **Wireless Key** found on the device label of your Mesh Router. Tap **Next**, the **Set up your new router** appears. Tap **Start** to process to the next step.

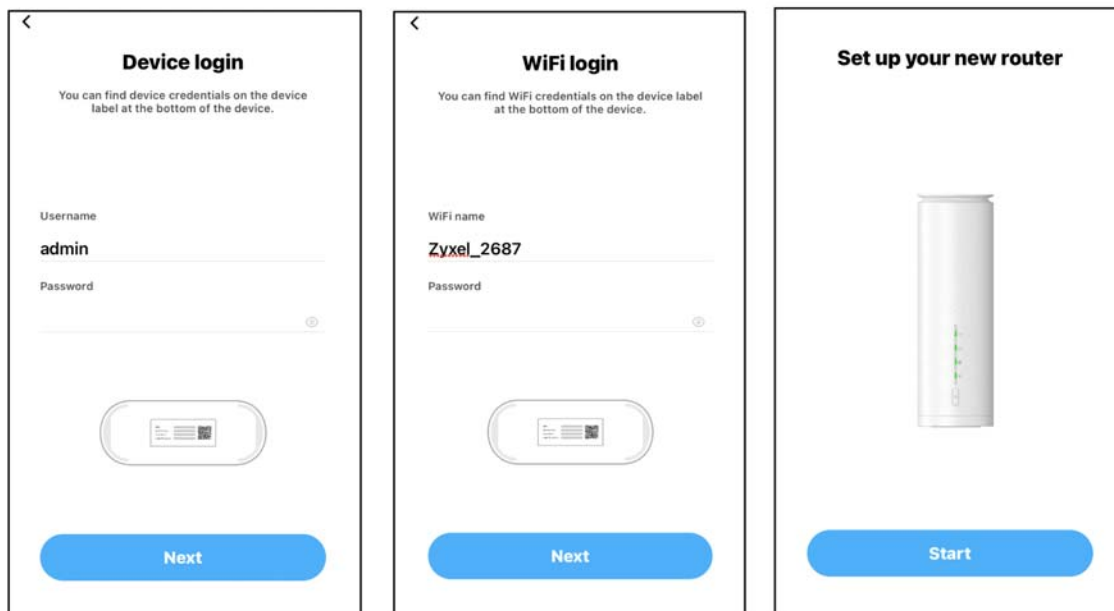


- 3 If your mobile device has an existing Wi-Fi connection, go to the Wi-Fi settings. Long tap your existing Wi-Fi connection. Tap **Forget network** to remove your existing Wi-Fi connection.



- 4 Connect your mobile device to the Wi-Fi network of the Mesh Router (R). On your mobile device, open the Wi-Fi screen in the Settings application. Find this **WiFi Name** on your mobile device, and enter the **Password** to connect to your Mesh Router (R). Tap **Join** when prompted by the notification to connect to the Mesh Router (R) Wi-Fi network. See [I cannot install the app on my phone/tablet](#). if you cannot connect your mobile device to the Mesh Router's Wi-Fi network.

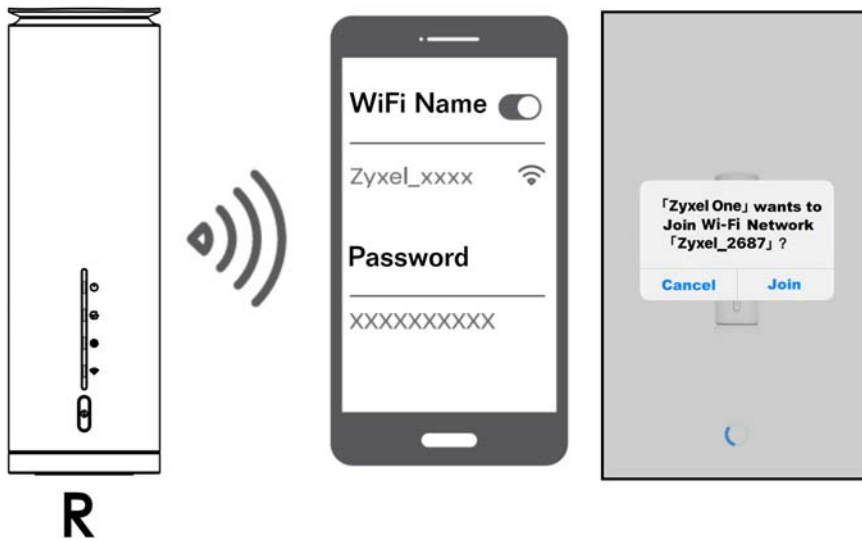


- 5 The Mesh Router will start checking the network connection. Tap **Finish installation** to complete setting up the Mesh Router.

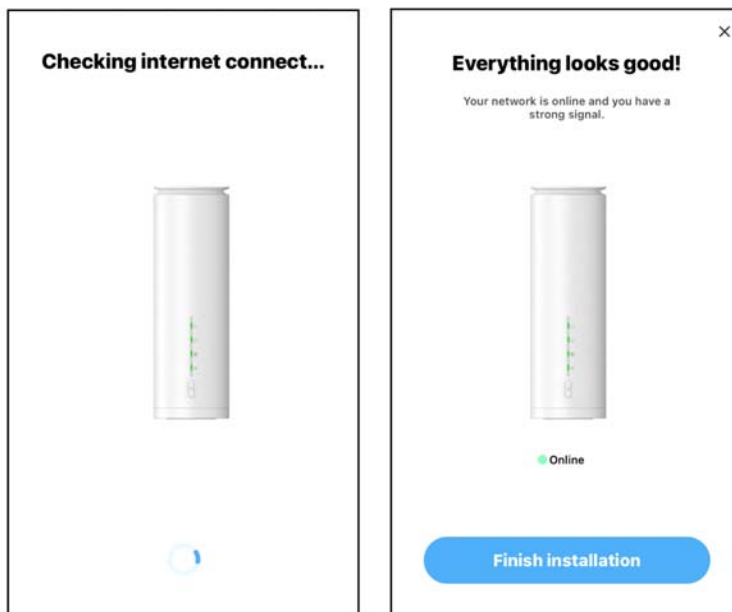

1.4.4 Pairing the Extender with the Router

- 1 Plug in the power adapter and turn on the Extender. Wait for about 2 minutes. The **POWER** LED lights up steady green.

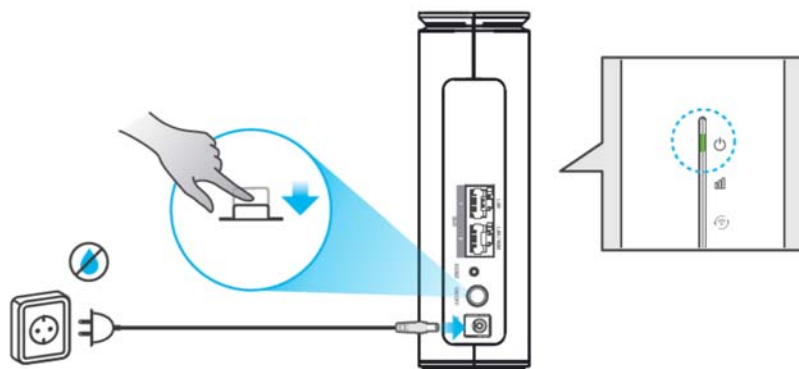


Make sure the Mesh feature is enabled on both the Router and the Extender before establishing a Mesh network. If not, tap **More** > **Settings** in the navigation panel, and tap **Enable Mesh** to the right.


- 2 Select **Using an Ethernet Cable** or **Using WPS** to pair the Extender with the Router.

Using an Ethernet Cable

(1) Use the included Ethernet cable to connect the Extender (**EX**) **LAN** port to the Mesh Router (**R**) **LAN** port. Wait until the **POWER** and **LINK** LEDs on the Extender are steady green.

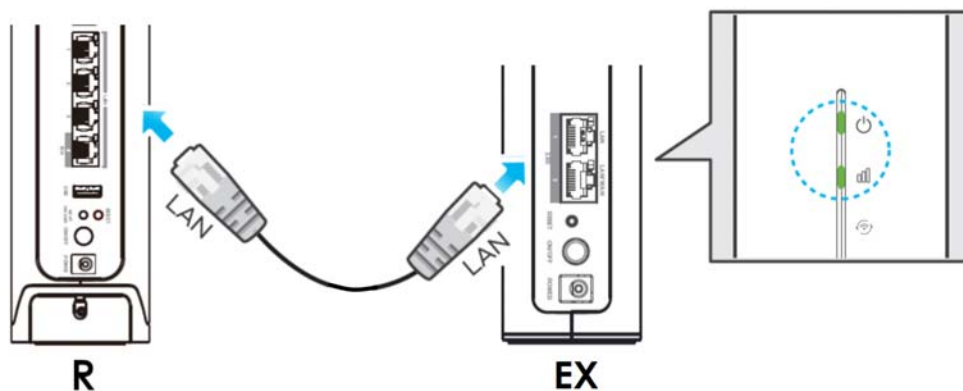


(2) Unplug the Ethernet and power cable (**P**) from the Extender (**EX**).

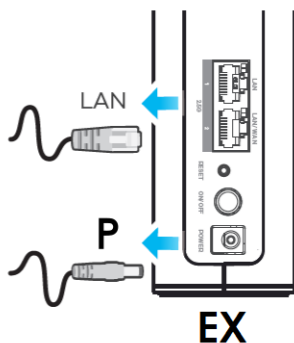

Using WPS

You can use WPS to pair the Extender with the Router if the Ethernet port is unavailable.

(1) In the Zyxel One app **Home** screen, tap **Extend network**. Follow the instructions to start pairing the Mesh Router with the Extender. Once the pairing starts, a 2-minute countdown timer will begin.

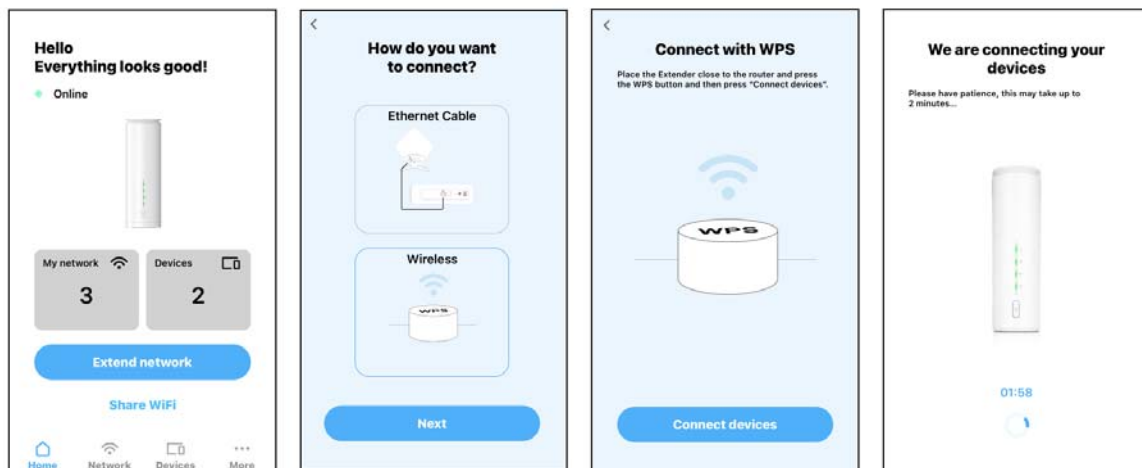

(2) Within 2 minutes, press the WPS button once on the Extender for less than 3 seconds.

Note: You do not need to press the WPS button on the Mesh Router.


(3) After the **Wi-Fi** LED turns steady green or fast blinking, wait for up to 2 minutes. The **POWER** LED should start blinking. The **POWER** and **LINK** LEDs will turn steady green if the pairing process is successful. You can also check the result on the app screen.

(4) Click **Finish installation** to finish the pairing process. The Mesh Router will undergo an auto-configuration after a Mesh network is established. Check the status of your Mesh network on the **Home** screen.




1.4.5 Placing the Extender

- 1 To see if the location of the Extender is appropriate, tap **More > Help > Placement Tips** in the app navigation panel, and tap the  icon next to the Extender to perform a signal detection. After viewing the tips, tap **Start**.
- 2 Take your mobile device with you to test the signal strength from the Router. Place the Extender when the app shows a green circle as shown below.

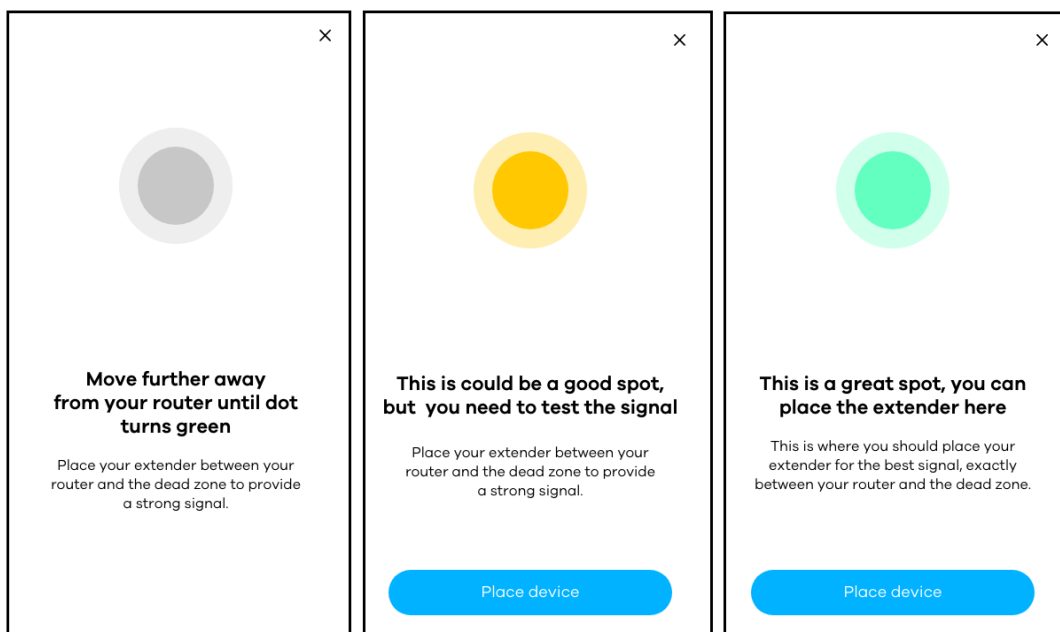

Place the Extender in the area closest to the Wi-Fi dead zone that has the best signal from the Router as indicated by the app on your mobile device. Here are some placing tips:

- **Placement tips:** To ensure the dead zone in your environment receives a strong signal, set up your Extender midway between the controller (the Router or the Extender-1) and the dead zone. The dead zone is the area where the mobile devices have difficulty receiving a strong signal.
 - **Avoid obstructions:** Obstacles, building materials, and electronic devices can all affect the Wi-Fi signal.
 - **Elevated position:** Set up your Extender in a location higher than the surrounding environment such as a high bookshelf. This helps improve the signal of the Extender and reduces the interference from other devices.
- 3 Plug in the power adapter of the Extender. Make sure the **LINK** LED is steady green. If the **LINK** LED is red, move the Extender closer to the Mesh Router.

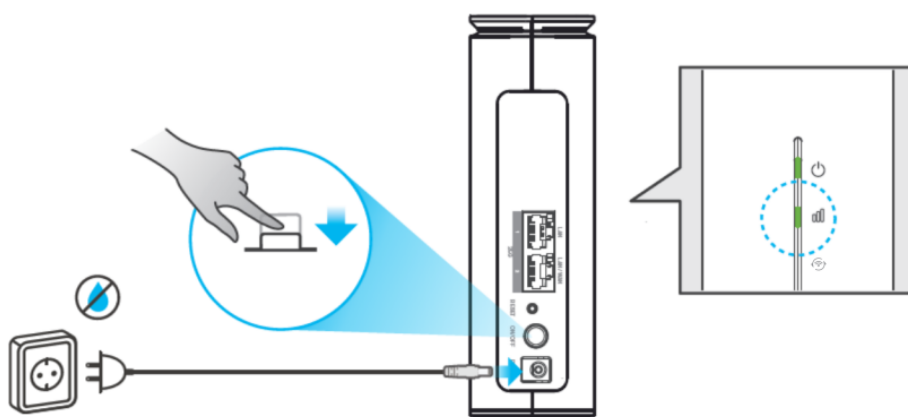

1.5 Network Management

You can manage your Controller (the Mesh Router or the Extender-1), Extender (the Extender or Extender-2), and their Wi-Fi settings through the Zyxel One app.

If you are using a wired connection with a non-Mesh Router (see [Section 1.9 on page 36](#)), you must connect your smartphone to the Extender-1 to manage the Mesh network through the app. This is because the Extender-1 is the Wi-Fi controller.

Note the difference between the Routers and Extenders at the time of writing.

Table 10 Routers and Extenders Feature Comparison

FEATURE/MODEL	ROUTER	EXTENDER
Parental Control	Yes	No

This section shows:


- [Viewing Controller Status](#)
- [Viewing the Connected Client Devices](#)
- [Checking Your Network Topology](#)

- [Enabling Mesh](#)

1.5.1 Viewing Controller Status

Use this screen to view the navigation panel and the status of your controller (the Mesh Router or Extender-1).


Tap **Home** in the navigation panel to open the following screen.

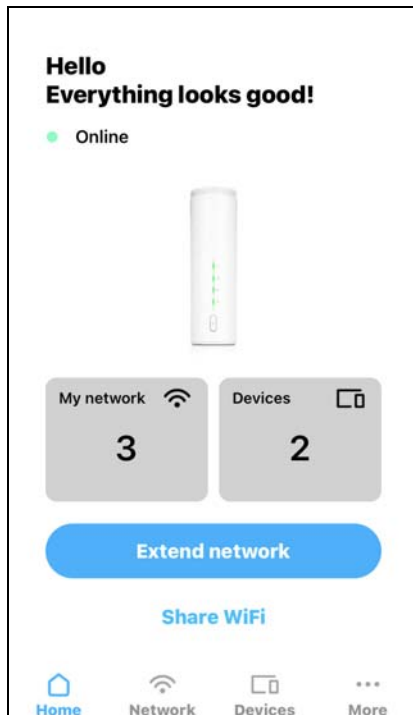

1.5.2 Viewing the Connected Client Devices

Use the **Devices** screen to view wired and Wi-Fi clients connected to your Mesh network. The information includes their link quality and device details, such as the IP address, MAC address, and the connection status of a client device.

- 1 Tap **Devices** in the navigation panel. Tap **WiFi** to view the client devices connecting to the Extender with a Wi-Fi connection. Tap **LAN** to view the client devices connecting to the Extender with a wired connection. You can also tap the search icon  to search for a specific client.

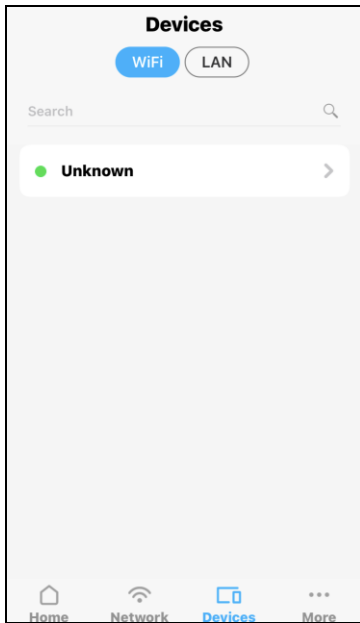

For the client device's connection status, see the table below.


Table 11 Client Device Connection Status

ICON	CONNECTION STATUS	ACTION TO DO
	Good to Go	None.
	Too Far from the Extender	• Move the client device closer to the Extender. • Place the client to avoid obstacles, such as walls or doors in between.

2 Tap the  icon to select a client device to view the following details of the devices:

- Name
- IP address
- MAC address
- Model
- Profile
- Connection status


For Wi-Fi clients connected to the Router or Extender, you can also view the details of the Wi-Fi network.

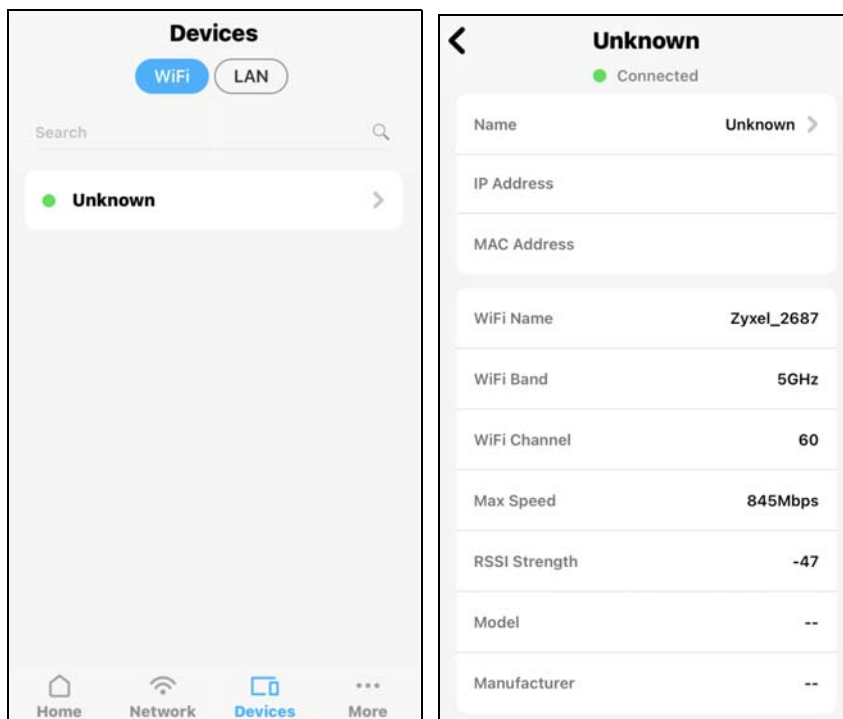




1.5.3 Checking Your Network Topology

Network topology displays how your Router and Extender are connected in the same Mesh network. A Mesh network consists of a Controller (the Mesh Router or the Extender-1), and one or more extenders (the Extender or Extender-2). Follow the steps below to see the current topology of your Mesh network and the status of the Router and Extenders in this network.


- 1 Tap **My network** in the **Home** page to check the Mesh network topology.

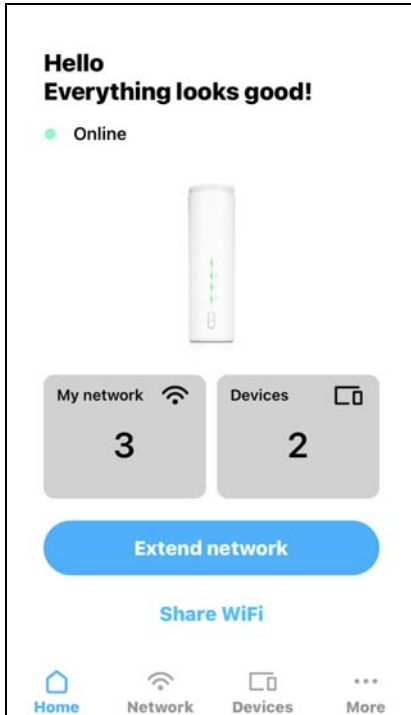

- The **Network** screen appears. The number of connected clients display near the device's icon. Tap the Controller (Mesh Router or Extender-1) icon to check and manage its connected clients.

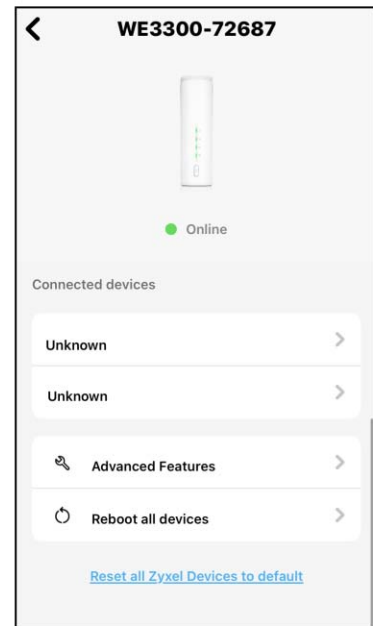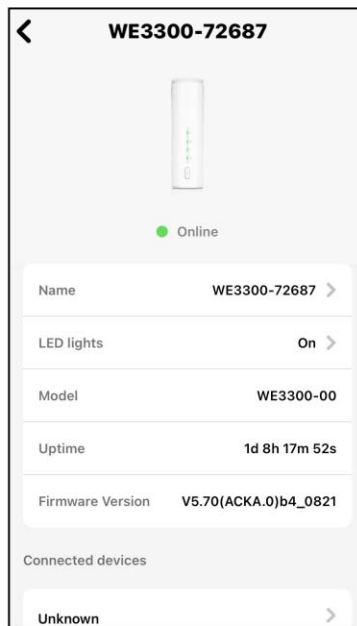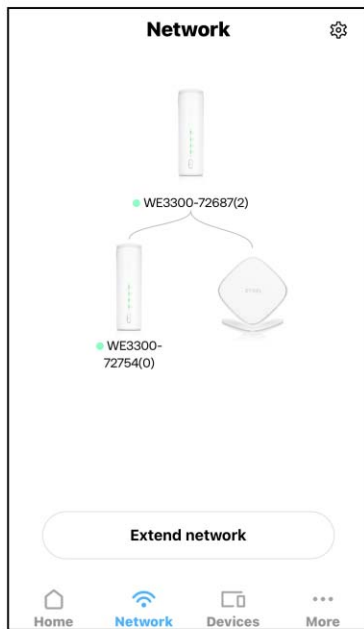

- Tap the icon of a client to see the client's detailed information. If you want to disconnect the client, switch **Block access to the Internet** to the right.

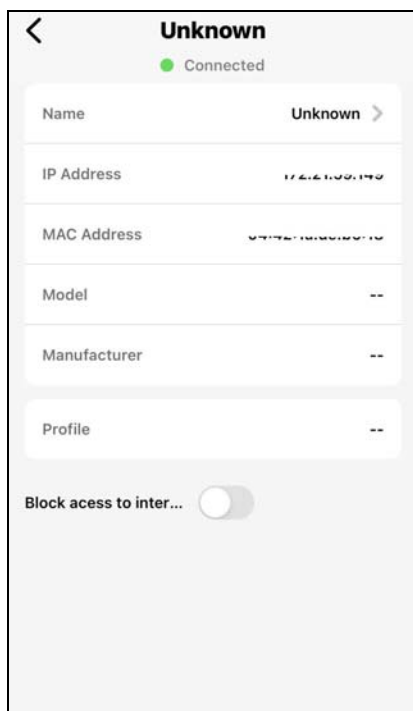

1.5.4 Enabling Mesh

In the same mesh network, the extenders will have the same Wi-Fi name and Wi-Fi password as the controller.

Mesh Network


Your Router and Extender support Mesh to manage your Wi-Fi network. You need one router for Internet access and at least one extender in a Mesh network. An extender increases Wi-Fi coverage by repeating Wi-Fi signals from the router to Wi-Fi clients far from the router. An extender can also repeat Wi-Fi signals from another extender to further increase Wi-Fi coverage.

Using the Zyxel One App to Enable Mesh

If you are setting up the Mesh network with a Mesh Router and an Extender using a Wi-Fi or wired connection, make sure Mesh is enabled on both the Router and the Extender. If not, tap **More > Settings** in the navigation panel, and tap the switch next to **Enable Mesh** to the right.

Note: Changing the Mesh enable/disable setting will restart the Wi-Fi network on the Router and Extender, temporarily disconnecting all connected Wi-Fi clients.

Note: Mesh is enabled on the Mesh Routers and Extenders by default.

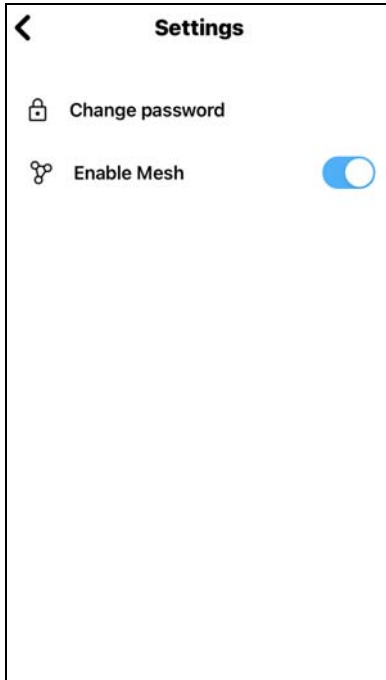

1.6 Setting Up a Main/Guest Wi-Fi Network

The following compares the main Wi-Fi network and the guest Wi-Fi network.

Table 12 Main/Guest Wi-Fi Networks Key Differences

FEATURE	MAIN WI-FI	GUEST WI-FI
Purpose	For primary household or business users.	For visitors.
Network Access	Full access to internal devices, such as printers or file servers.	Internet access only; no access to internal devices.

This section shows:

- [Changing the Wi-Fi Network Name and Password](#)
- [Joining a Wi-Fi Network Using a QR Code](#)
- [Blocking Wi-Fi Clients from Connecting to Each other](#)

1.6.1 Changing the Wi-Fi Network Name and Password

It is advisable to change the default Wi-Fi settings as they are printed on the label on the Controller (Mesh Router or Extender-1). Note that you need to reconnect your mobile device to this network with the new settings.

Use the following parameters to change the default Wi-Fi name and password.

- For the **Name**, you can use 1 – 32 alphanumeric (0-9, a-z, A-Z), single-byte special characters and spaces.


- For the **Password**, you need to use at least 8 characters, including at least one uppercase letter, one lowercase letter, one number and one special character. Please see the password requirement display on the screen.

Table 13 Wi-Fi Settings Parameters Example

HOME WI-FI	
Name	Company
Password	Company123!

Follow the steps below to change your main Wi-Fi settings.

- 1 Tap the **Network > Setting** icon  in the **Home** screen. The **WiFi** screen displays. Tap **Main WiFi** or **Guest WiFi** to configure settings for your default Wi-Fi network. Tap **Name** and **Password** to edit them using the parameters given above.

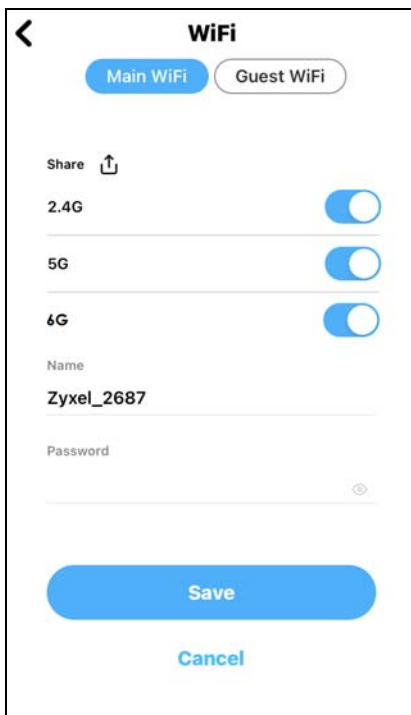


- 2 Tap **Save** to apply your changes.

Note: It takes 2-3 minutes for the Controller to apply the new Wi-Fi settings to the whole Mesh network. You will need to reconnect to the Wi-Fi network using the new **Name** and **Password**.


1.6.2 Joining a Wi-Fi Network Using a QR Code

Follow the steps below to create a QR code for Wi-Fi clients to scan and join the main/guest Wi-Fi network.

- 1 On the **Home** screen, tap **Share WiFi**. The **Share WiFi** screen pops out. Tap the  icon of the main/guest Wi-Fi network name of the Router or Extender.

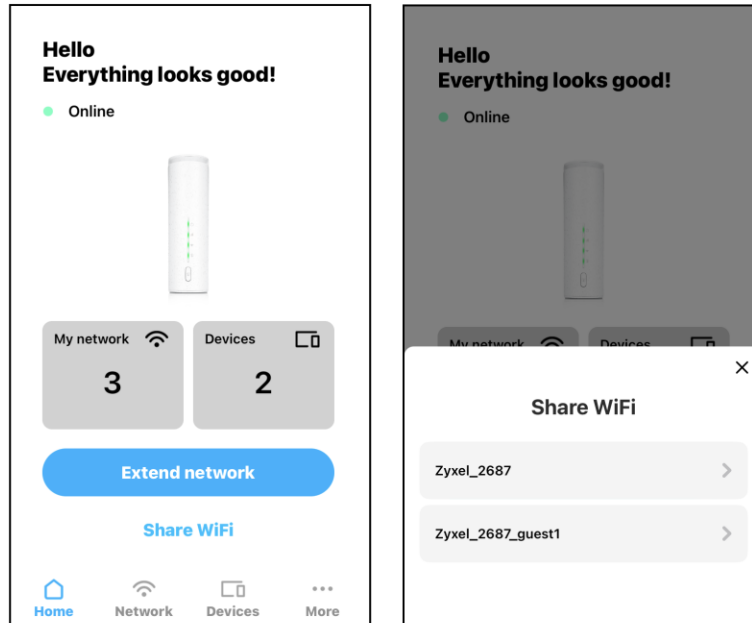


- 2 The **Share your WiFi** screen pops out. Scan the QR code from your mobile device to connect to the main/guest Wi-Fi network of the Router or Extender, or tap **More options** to send the Wi-Fi SSID and password by text.

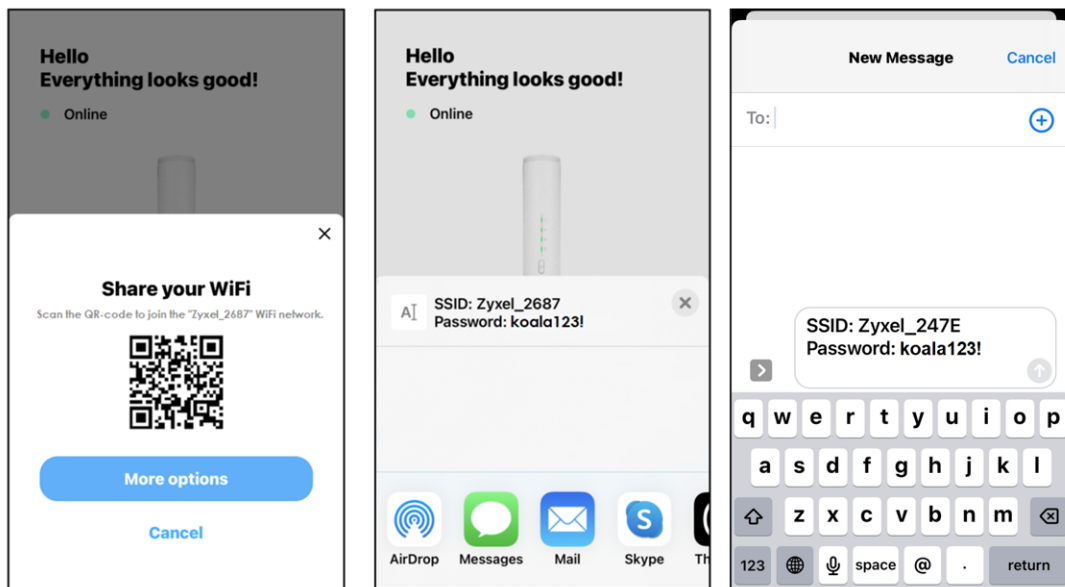

1.6.3 Blocking Wi-Fi Clients from Connecting to Each other

This feature allows you to block guest Wi-Fi clients from connecting directly to each other.

Tap **Network** > **Setting** ⚙ > **Guest** > **Guest WiFi Isolation**. Switch the **Enable guest WiFi isolation** to the right.

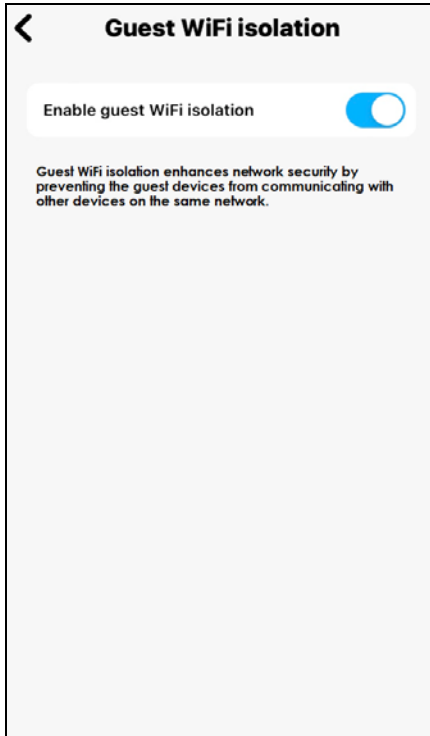

1.7 Device Management

This section shows you:


- [Using the App to Access the Web Configurator](#)
- [Checking the Power Consumption](#)
- [Turning Off the LEDs of the Controller](#)
- [Viewing and Changing the Router and Extender's Information](#)
- [Changing the Name of a Client Device](#)
- [Setting Up a Parental Control Profile](#)

1.7.1 Using the App to Access the Web Configurator


Follow these steps to access the web configurator to configure more advanced settings for your Router or Extender, such as:

- Certificate
- Remote management
- Firmware upgrade


- 1 Tap **Network** in the navigation panel, tap on the Router or Extender to configure advanced settings, and then tap **Advanced Features**.

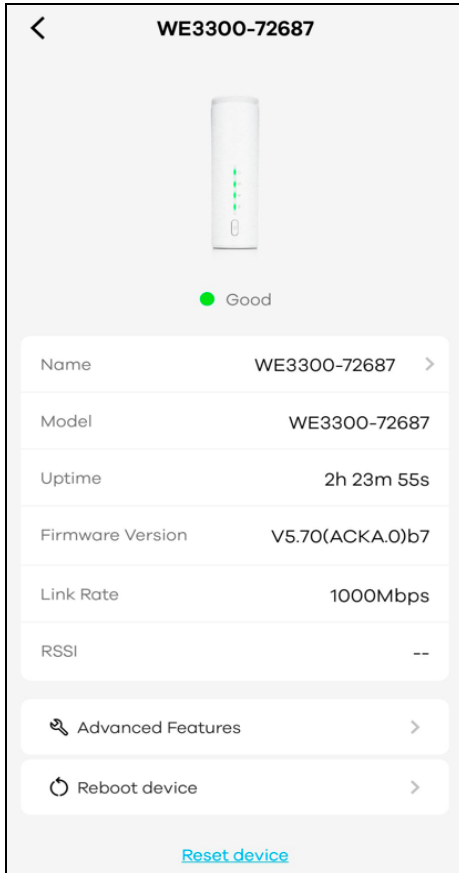


- 2 The following screen appears. Tap **Proceed** to continue to the web configurator.

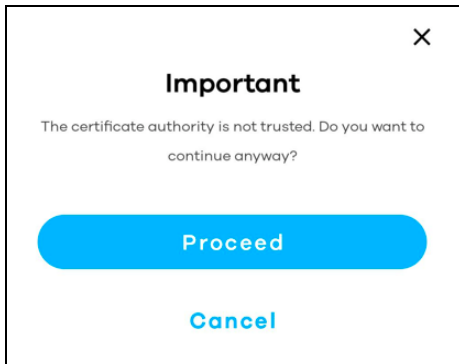

- 3 Enter the **Username** and **Password** of your Router or Extender and click **Login** to access the web configurator. The default **Username** and **Password** can be found on the device label. If you have changed the password, use the new password to login.

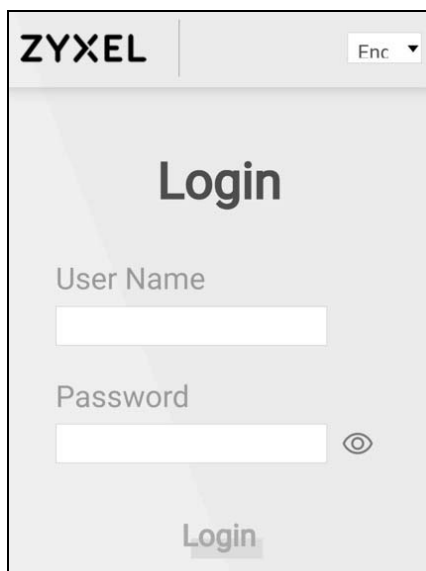

- 4 The web configurator appears. Refer to the Router or Extender's user guide for more information.

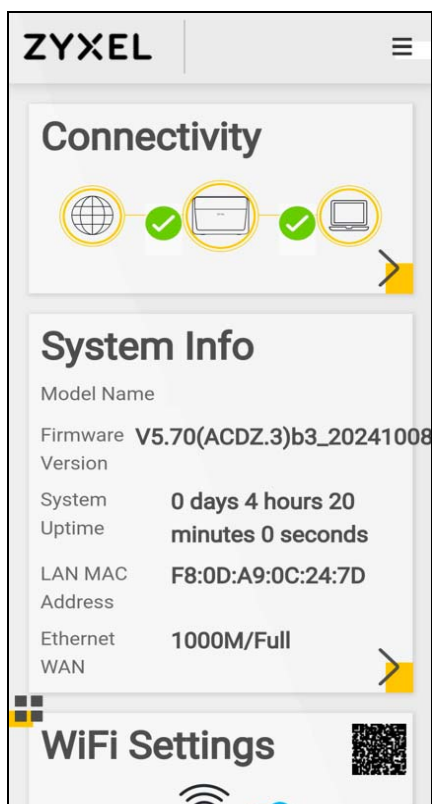

1.7.2 Checking the Power Consumption

Use the **Power monitor** screen to view the current and past amount of power consumed by the Controller.

Note: At the time of writing, not all models support this feature.


Tap **More > Power monitor** in the navigation panel. The following screen appears. The y-axis shows the amount of power consumed by the device in watts. The x-axis shows the period over which the power consumption is recorded. The maximum period for recording is 48 hours.



1.7.3 Turning Off the LEDs of the Controller


Use this screen to turn off the LEDs on your Controller (Mesh Router or Extender-1) to prevent them from lighting up at night and for power saving. The LEDs of the extender (Extender or Extender-2) will sync with the Controller.

- 1 Go to the **Network** screen and tap the controller icon. The details of the Controller appear. Tap the icon of the **LED lights**.
- 2 Slide **Enable LED lights** to the left to turn off the LEDs of your Controller.

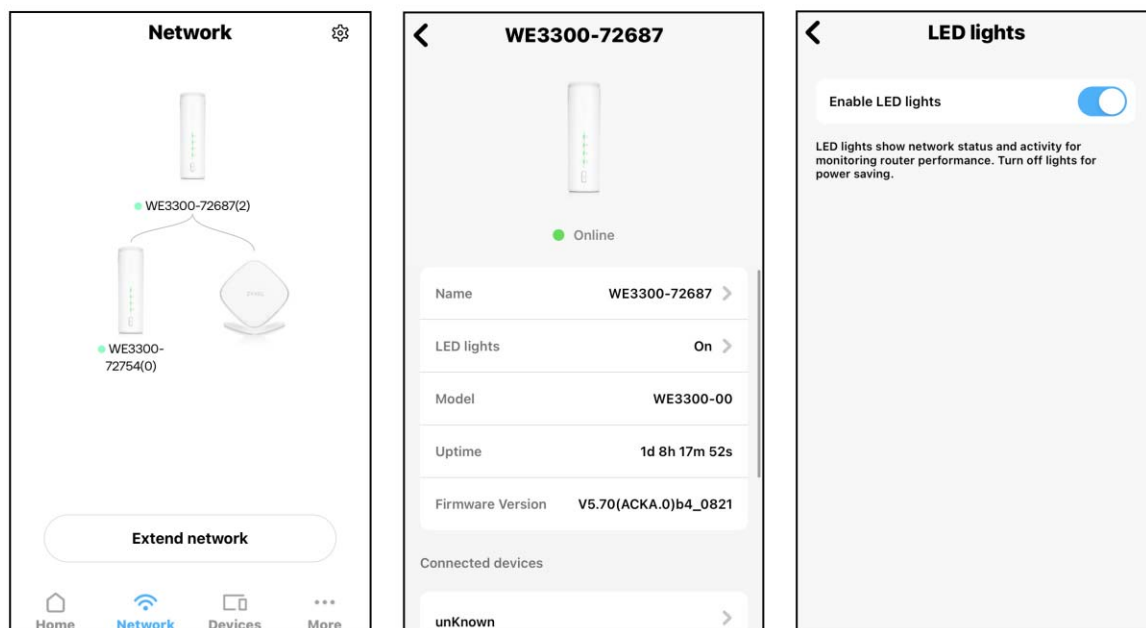

1.7.4 Viewing and Changing the Router and Extender's Information

Use this screen to view the basic information of your Router and Extenders. Go to the **Network** screen and tap on a device to view more details.

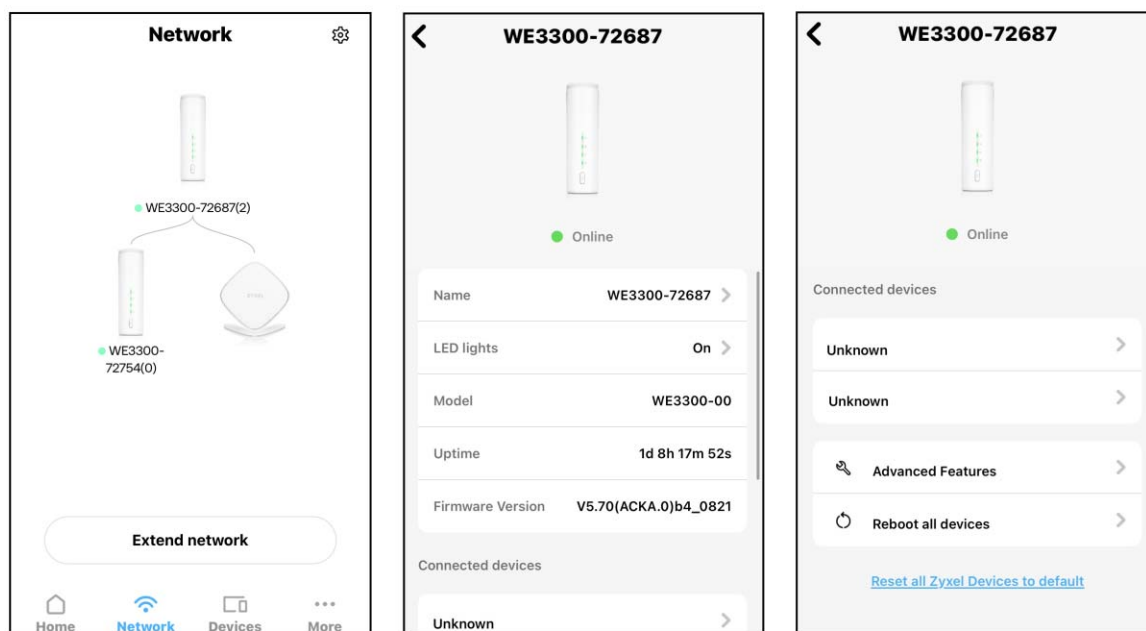


For the Router and Extender's connection status, please see the table below.

Table 14 Router and Extender's Connection Status


ICON	CONNECTION STATUS	ACTION TO DO
	Controller: The Controller is online. Extender: The Extender has a strong signal.	None.
	Controller: The Controller is offline. Extender: The Extender has a weak signal.	• Check the Internet connection and reboot the device. • Move the Extender closer to the Controller. • Avoid obstacles, such as walls or doors in between.

1.7.4.1 Changing the Name of the Router or Extender

- 1 Go to the **Network** screen and tap on a device to view more details.

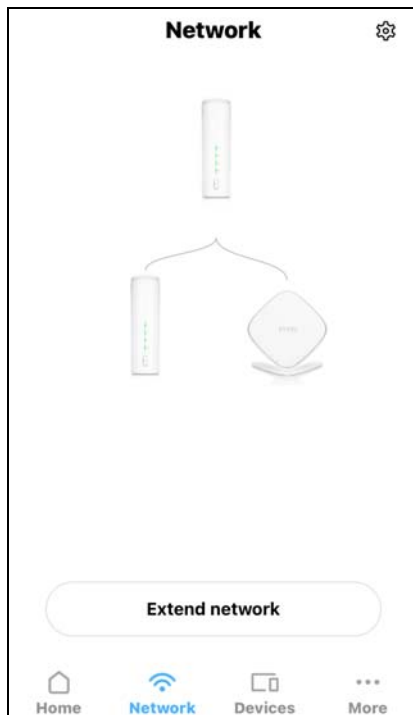

- 2 Tap the  icon of **Name**.

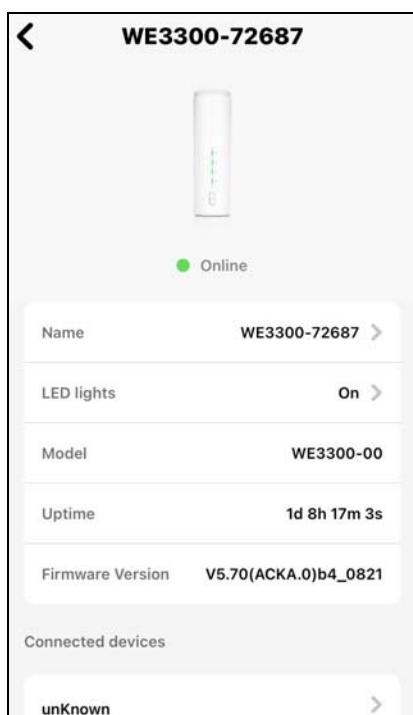


- 3 Change the name of the Router or Extender shown on the app. Tap **Save** on the upper right corner to save the changes made.



1.7.4.2 Changing the Password of the Controller

Periodically changing the login password helps improve security. To change the Controller's password, follow the steps below:

- 1 Tap **More > Settings > Change password**. Enter the new password in the **New password** field. Enter the new password again in the **Confirm new password** field. The password must be at least 8 characters long, including 1 uppercase letter, lowercase letter, 1 number and 1 special character.

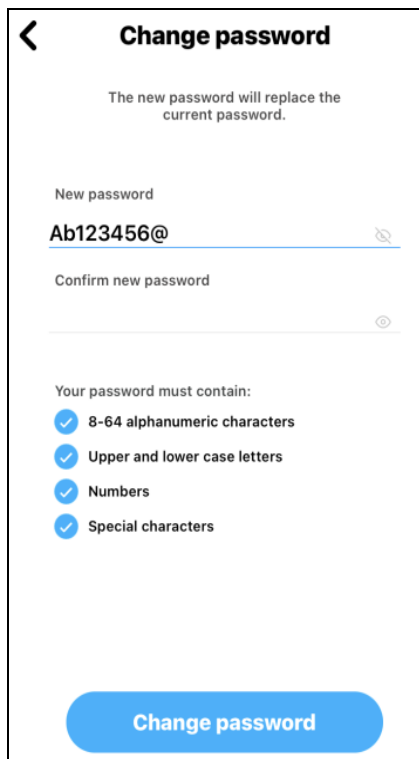

- 2 Tap **Change password** to save the changes made.

1.7.5 Changing the Name of a Client Device

Follow the steps below to change your client device's name displayed on the app.

- 1 Tap the **Devices** icon in the navigation panel.
- 2 Tap **WiFi** or **LAN** according to the client's connection type. Select a client and tap the **>** icon to view the client device's information.

The screenshot shows a mobile app interface for a device named 'Unknown'. At the top, there is a back arrow and the title 'Unknown' with a green dot and the word 'Connected' below it. The device information is displayed in a list of rows, each with a label on the left and a value on the right. The rows are: Name (Unknown >), IP Address, MAC Address, WiFi Name (Zyxel_2687), WiFi Band (5GHz), WiFi Channel (60), Max Speed (845Mbps), RSSI Strength (-47), Model (--), and Manufacturer (--).

Label	Value
Name	Unknown >
IP Address	
MAC Address	
WiFi Name	Zyxel_2687
WiFi Band	5GHz
WiFi Channel	60
Max Speed	845Mbps
RSSI Strength	-47
Model	--
Manufacturer	--

- 3 Tap the > icon to change the name of your device shown on the app.
- 4 Enter a descriptive name for the device and tap **Save**. You can use 1 – 20 alphanumeric (0-9, a-z, A-Z) and single-byte special characters except ["], [`], ['], [<], [>], [^], [\$], [|], [&], or [;]. Spaces are allowed. Or tap **Cancel** to return to the previous screen.


The screenshot shows a mobile app interface for editing the device name. At the top, there are three buttons: 'Cancel', 'Name' (in bold), and 'Save' (in blue). Below the buttons is a text input field with the label 'Name' and the text 'My Device' entered. The input field is outlined with a light gray border.

Label	Value
Name	My Device


1.7.6 Setting Up a Parental Control Profile

The Parental Control feature on your Router allows you to limit the time a user can access the Internet and prevent them from viewing inappropriate content or participating in specified online activities. Follow these steps to set up a parental control profile:


- 1 Tap **More > Parental control** to open the following screen, then tap **Create profile** to create a parental control profile.

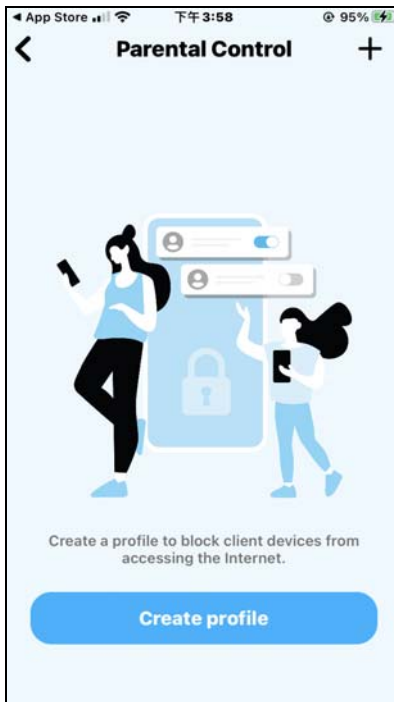

- 2 Enter a profile name and tap the **Schedule** button to the right to enable this profile.

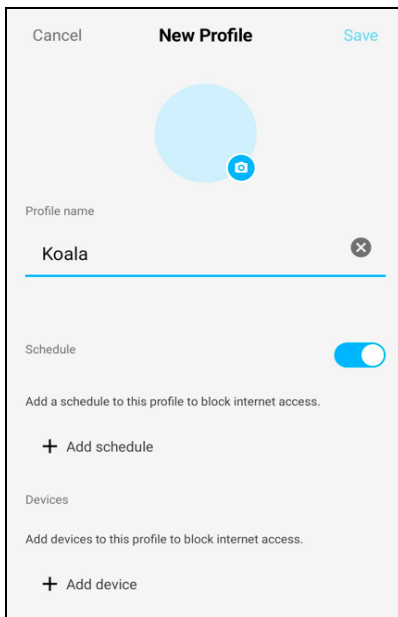


- 3 Tap **+ Add schedule** to open the following screen. Set the time periods and days during which Internet access will be blocked on the profile devices. You can set up to three blocking schedules for a profile. Tap **Save** to apply your changes to the Router.

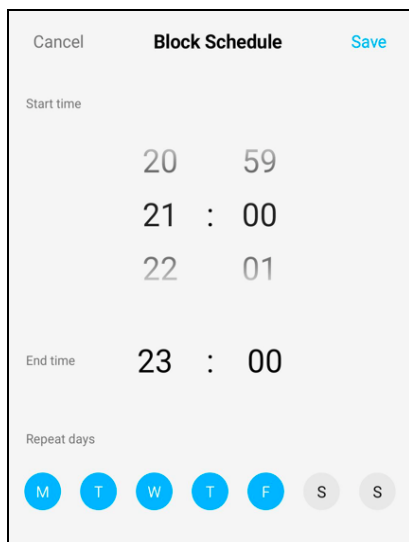


The 'Block Schedule' screen has a title bar with 'Cancel', 'Block Schedule', and 'Save' buttons. It contains two time pickers: 'Start time' and 'End time'. The 'Start time' is set to 20:59, and the 'End time' is set to 23:00. Below the time pickers is a 'Repeat days' section with seven circular buttons for the days of the week: M, T, W, T, F, S, and S. The first five buttons (M, T, W, T, F) are blue, and the last two (S, S) are grey.

- 4 Tap **+ Add device** to open the following screen. Select the client device(s) and tap **Add** to apply parental control to the selected device(s).

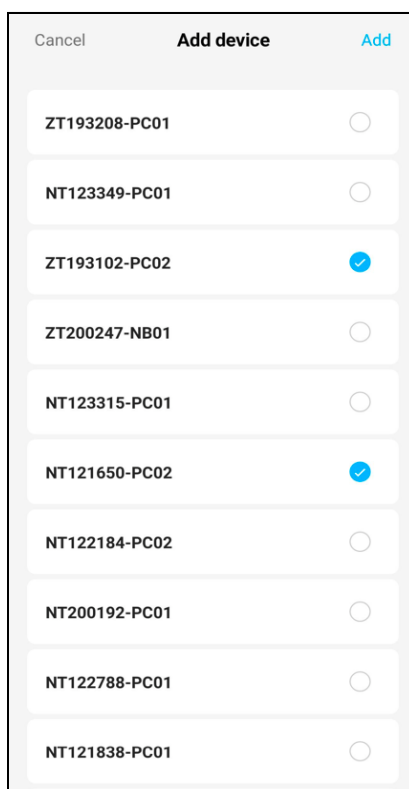

The 'Add device' screen has a title bar with 'Cancel', 'Add device', and 'Add' buttons. It displays a list of ten client devices, each with a name and a radio button for selection. The devices are: ZT193208-PC01, NT123349-PC01, ZT193102-PC02, ZT200247-NB01, NT123315-PC01, NT121650-PC02, NT122184-PC02, NT200192-PC01, NT122788-PC01, and NT121838-PC01. The radio buttons for ZT193102-PC02 and NT121650-PC02 are checked.

- 5 The blocked schedules and devices will appear on the next screen. Tap **Save** to save the parental control profile settings to your Router.

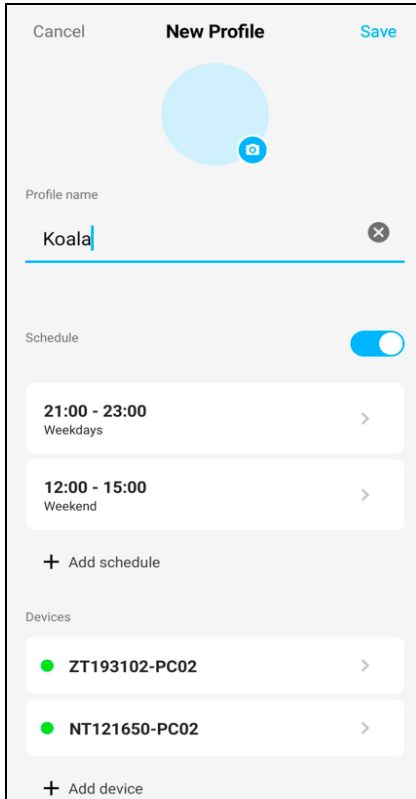


1.8 Help Menu

To get help for the app, tap **More > Help** in the navigation panel.

1.8.1 Testing Signal Strength From the Router to Your Phone


Tap **More > Help > Troubleshooting > Test signal again** to have your mobile device test the signal strength from the Router. Move your mobile device to find the best signal from the Router, then place the extender there.

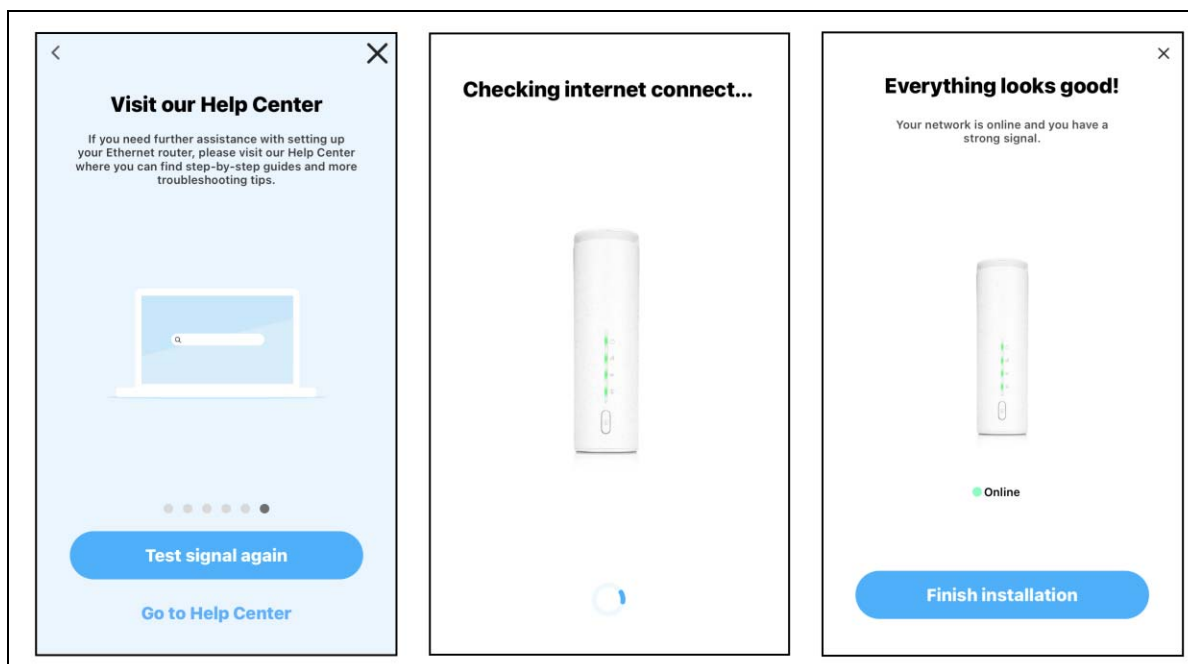

1.8.2 Rebooting the Router or Extender

If your network connection is unstable or slow, try rebooting the Router and Extender to reset the connections; the app's reboot feature allows you to do this remotely.


- 1 To reboot the Router or Extender, tap **Network** in the navigation panel.

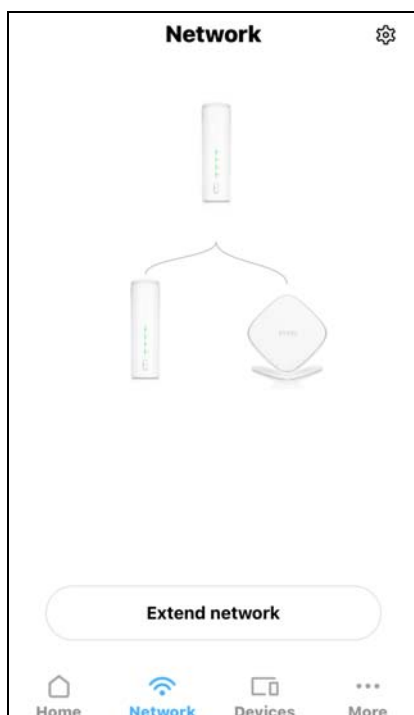

- 2 See the following to reboot all devices at once or reboot a specific Extender.


Reboot All Devices

To reboot all the devices in the Mesh network, tap the Controller (the Mesh Router or Extender-1). Then, tap the ➤ icon next to **Reboot all devices** in the Mesh network. A notification will pop out, tap **Reboot**. Your devices in the Mesh network will be disconnect from the Internet temporarily.

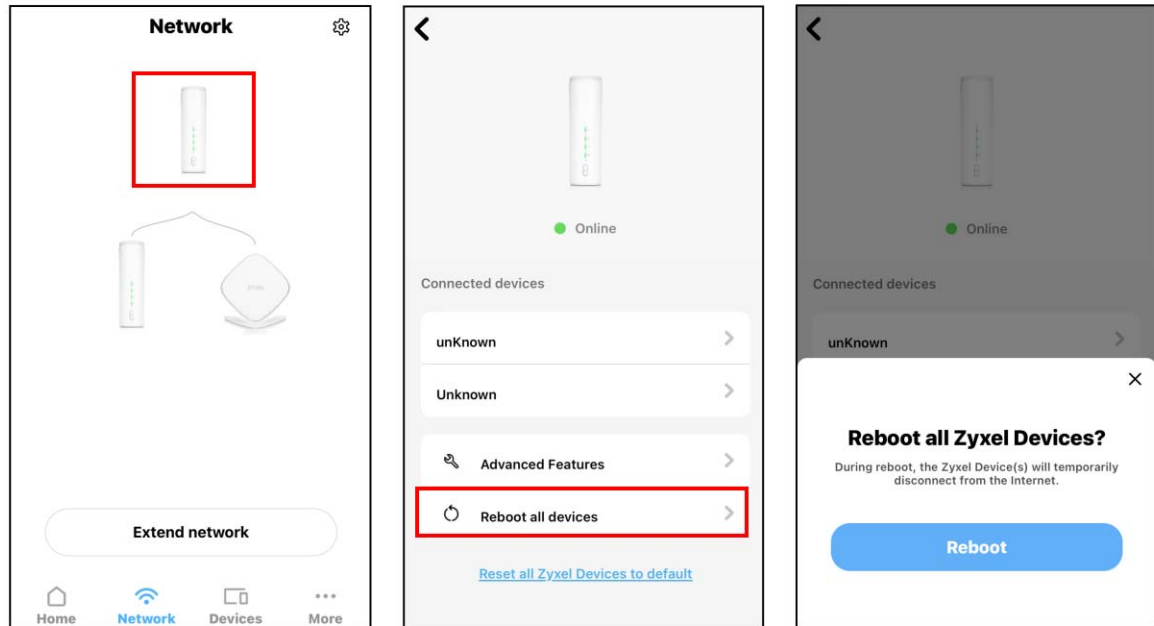


Reboot a Specific Extender

To reboot a specific Extender, tap on the Extender. Then, tap the ➤ icon of **Reboot device** to reboot the Extender you select. A notification will prompt out, tap **Reboot**. The Extender will be disconnected from the Internet temporarily.

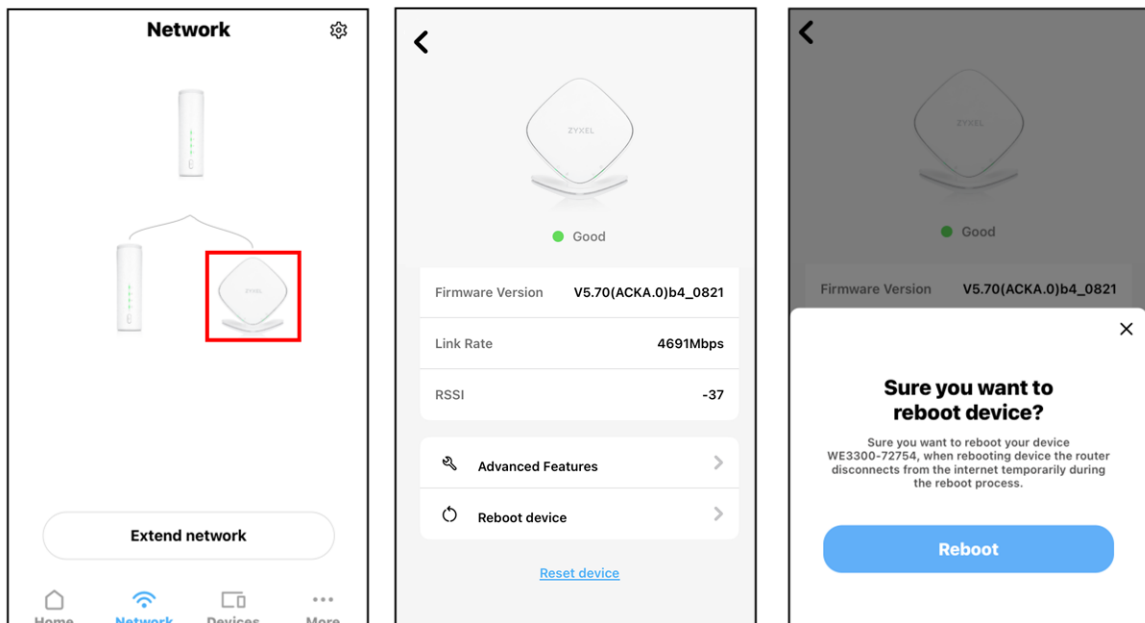

1.8.3 Contacting Customer Support

If you have problems with your Mesh network that cannot be resolved using this help, check the Community to see if a related problem has been reported. If you cannot find an answer there, you can contact customer support by tapping **More > Help > Give feedback** in the navigation panel. A log file of your Controller (Mesh Router or Extender-1) will be automatically generated and attached to the email.

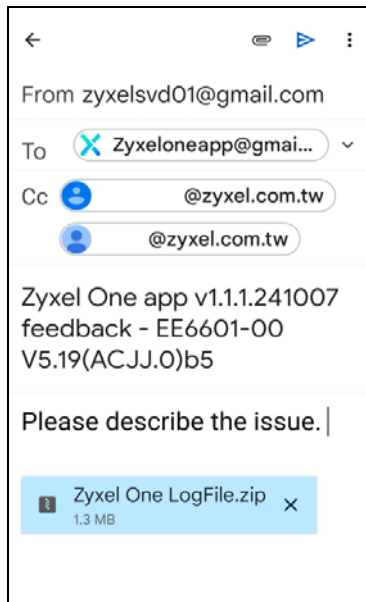


1.8.4 Viewing More Information About the App

Tap the **More** icon in the navigation panel. Tap the **About** icon to view the app's information.

You can view the following information about the app:


- **App Version** - This shows the version of the current Zyxel One app. Go to the Google Play Store or Apple App Store to make sure your app version is up-to-date.
- **Terms of service** - Tap the > icon to go to the Zyxel's Terms of use web page.
- **Privacy policy** - Tap the > icon to go to the Zyxel's Privacy policy web page.

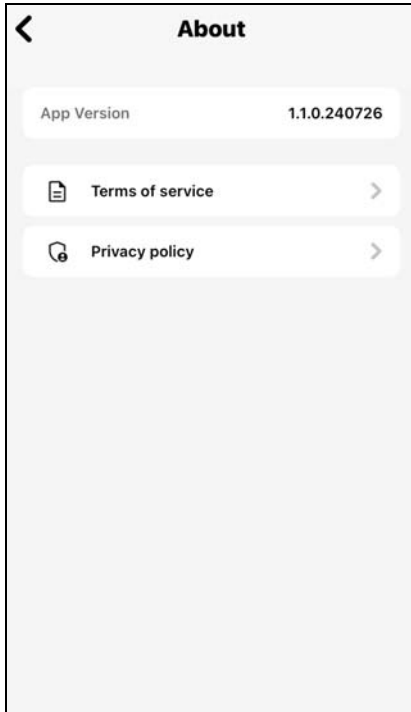

1.8.5 Using the App to Manage a Different Mesh Network

From your phone, you can only log into one controller using the app. If you want to manage a different Mesh network, you need to log out of the current network's controller (the Mesh Router or the Extender-1) and log into the controller for the network you want to manage.

To log out of this Mesh network, tap **More > Log out** in the navigation panel. You will be redirected to the Login page.

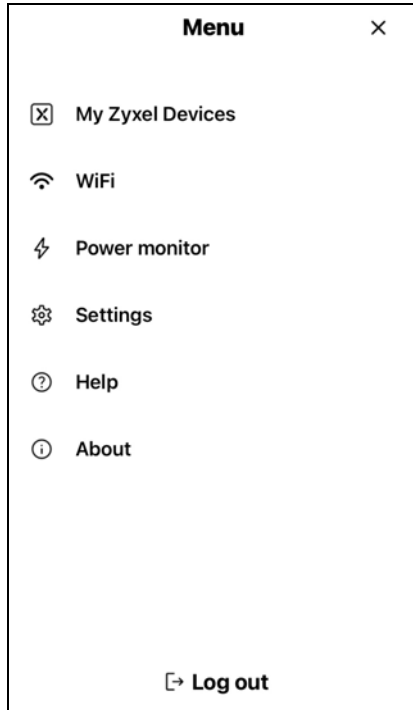


1.9 Setting Up a Non-Mesh Router with Two Extenders

This section uses one non-Mesh Router and two Extenders. The first Extender will be referred to as Extender-1 (**EX-1**), and it is the controller in this scenario. The second Extender will be referred to as Extender-2 (**EX-2**), and it functions as the extender.

Make sure the non-Mesh Router is connected to the Internet. Extender-1 (**EX-1**) must be connected to your router using an Ethernet cable. The connection between Extender-1 (**EX-1**) and Extender-2 (**EX-2**) can be wired or Wi-Fi.

In the figure below, the Extender-1 (**EX-1**) is in room 1 (**R1**), and Extender-2 (**EX-2**) is in room 2 (**R2**), with Client devices (**C**).

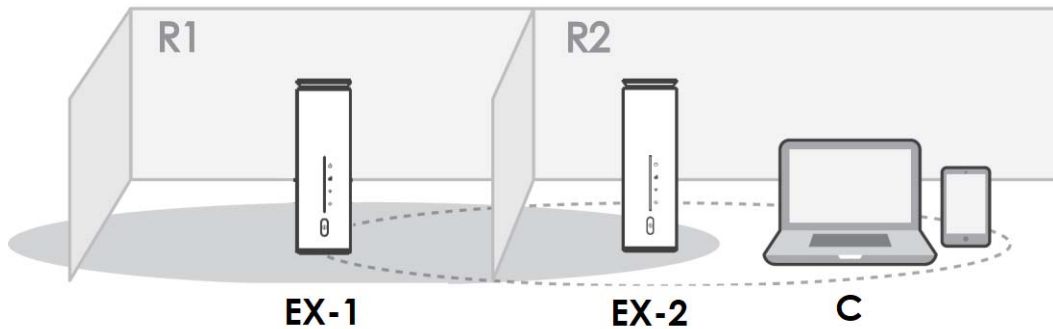

Note: In this scenario, use an Ethernet cable to connect Extender-1 (**EX-1**) and the non-Mesh Router.

1.9.1 Download the Zyxel One App

Download the Zyxel One app from the Google Play Store or Apple App Store. Make sure your mobile operating system version meets the following requirements to download the Zyxel One app.

- Android - version 11 or later.
- iOS - version 15 or later.

Check for Updates

To ensure you have the latest version of the Zyxel One app, go to the Google Play Store or Apple App Store. Updating to the newest version is important as it includes bug fixes, new features, and support for new models.

App Version


To see your current Zyxel One app version, tap **More** > **About** in the app.

Supported Models

For a list of models and firmware versions compatible with the Zyxel One app, please refer to the Zyxel One app website.


1.9.2 Extender-1 Hardware Setup

Use an included Ethernet cable to connect the first Extender-1 (**EX-1**) **LAN** port to your non-Mesh Router (**NR**) **LAN** port. Wait until the **POWER** and **LINK** LEDs are steady green.

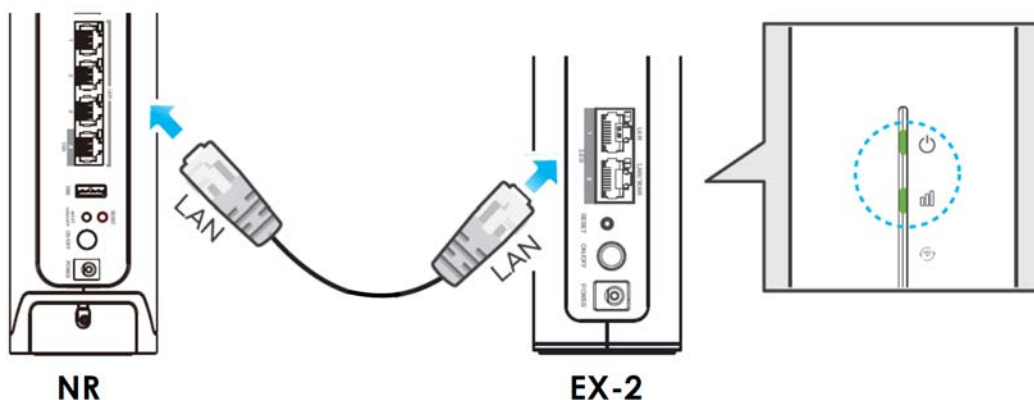

1.9.3 Add Extender-1 to the Zyxel One App

- 1 To connect the Zyxel One app to Extender-1 (**EX-1**), open the app, tap **Set up new device** to set up your Extender-1 (**EX-1**). If it is not your first login, tap **Log into the existing device**.

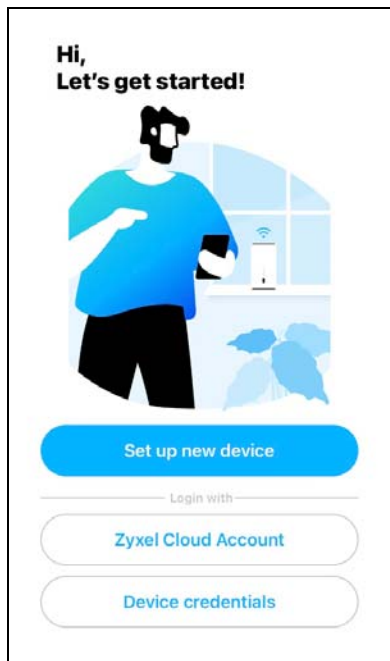


- 2 Select **Scan the QR code** or **Set up manually** to add Extender-1 to the Zyxel One app.

Scan the QR Code

Scan the QR code on the device label (L) of your Extender-1 (**EX-1**).


Set Up Manually

(1) Or, you can tap **Set up manually** to go to the **Find your model** screen. Enter the **Model number** of your Extender-1. Tap **Next** to go to the **Device login** screen.

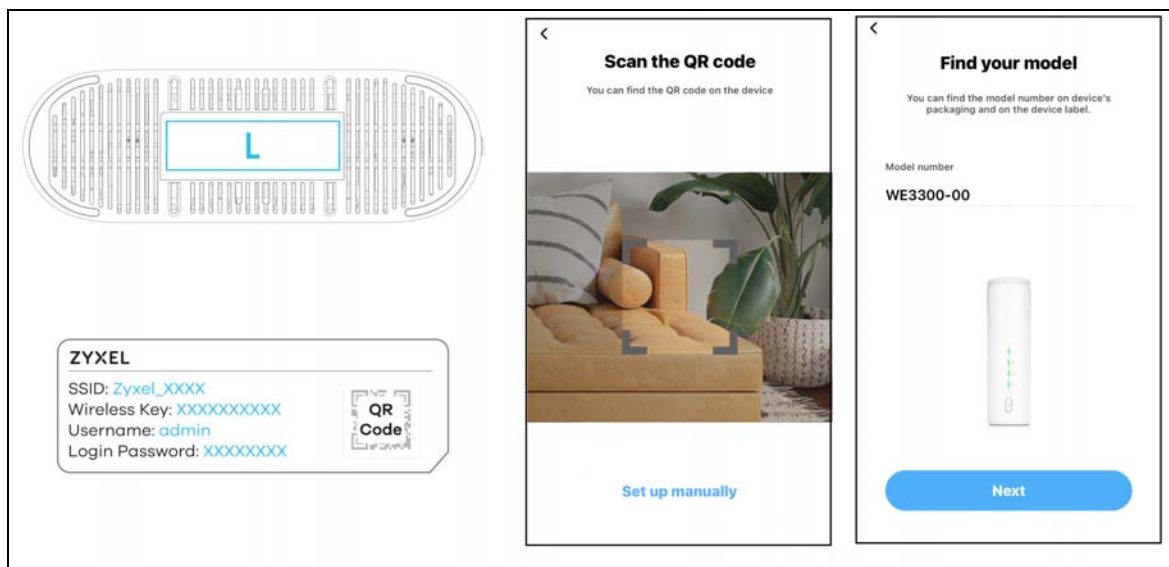

(2) In the **Device login** screen, enter the **Username** and **Login Password** found on the device label of Extender-1. Tap **Next** to go to the **WiFi login** screen. Enter the **SSID** and the **Wireless Key** found on the


device label of Extender-1. Tap **Next**, and the screen to guide you to **Set up your new router** appears. Tap **Start** to set up your Extender-1.

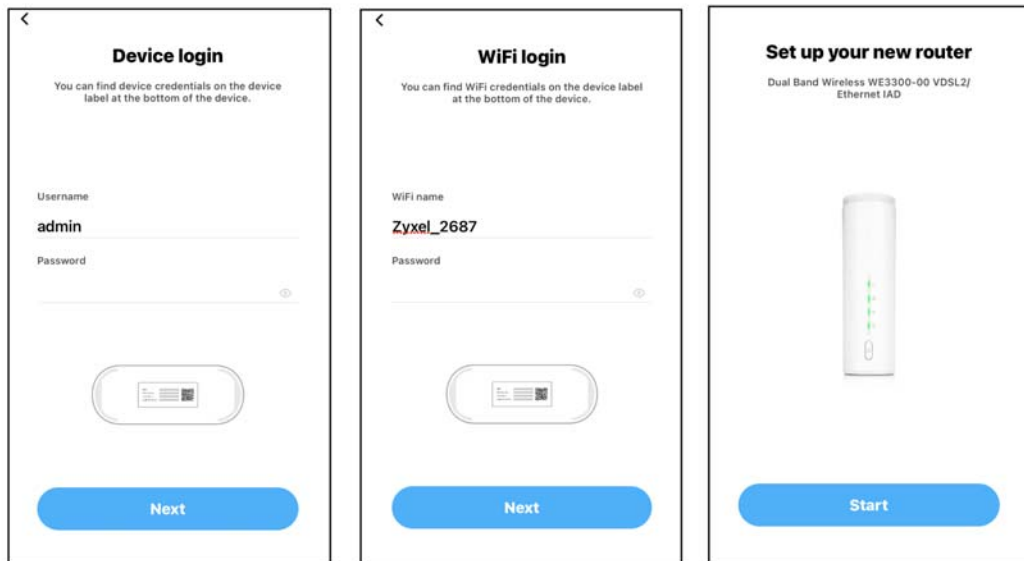


- 3 To manage the Wi-Fi settings using the Zyxel One app, you must connect to the Wi-Fi network of Extender-1. If your mobile device has an existing Wi-Fi connection, go to the Wi-Fi settings to remove it. You want to connect to the Extender Wi-Fi network. Long tap your existing Wi-Fi connection. Tap **Forget network** to remove your existing Wi-Fi connection.



- 4 Connect your mobile device to the Wi-Fi network of Extender-1(**EX-1**). Note the **SSID** and the **Wireless Key** on the device label (**L**) of Extender-1 (**EX-1**). Find this **SSID** on your mobile device, and enter the **Wireless Key** to connect to your Extender-1(**EX-1**).

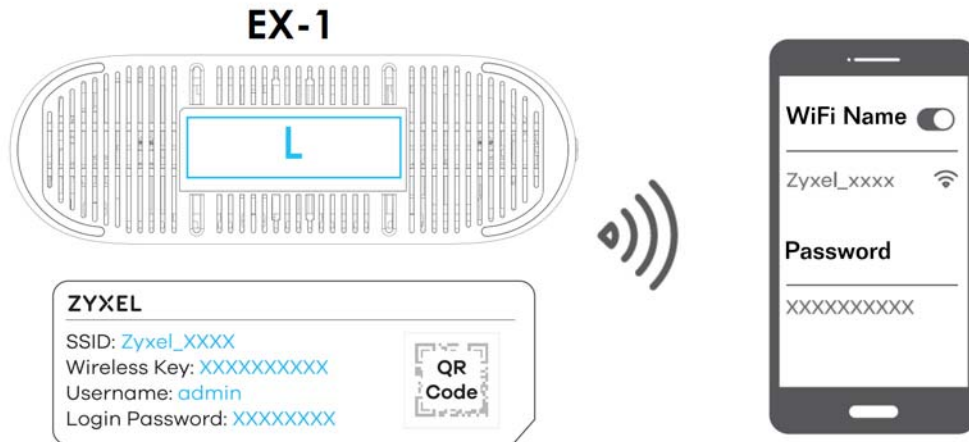

- 5 Extender-1 will start checking the network connection. Tap **Finish installation** to complete the process of setting up Extender-1 and go to the **Home** screen.

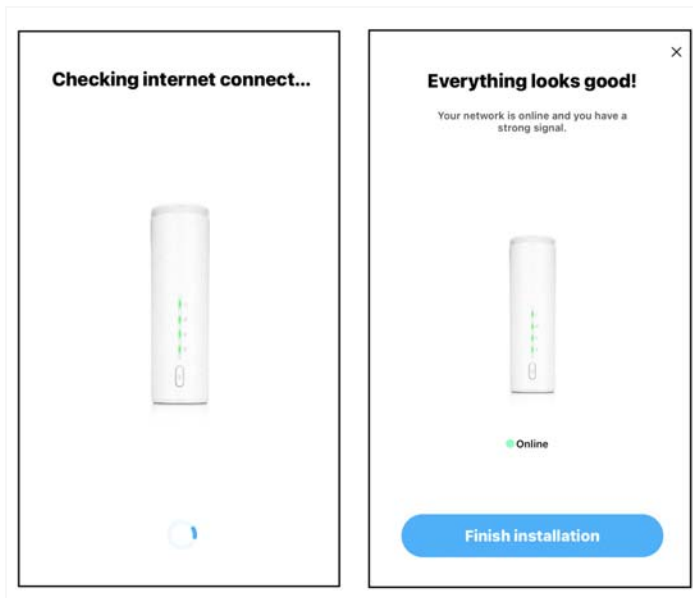


1.9.4 Pairing Extender-2 with Extender-1

Make sure the Mesh feature is enabled on both the Router and the Extender before establishing a Mesh network. If not, tap **More > Settings** in the navigation panel, and tap **Enable Mesh** to the right.


Select **Using an Ethernet Cable** or **Using WPS** to pair Extender-2 with Extender-1.

Using an Ethernet Cable

- 1 Plug in the power adapter and turn on the Extender-2 (**EX-2**). Use another Ethernet cable to connect the second Extender-2 (**EX-2**) **LAN** port to your first Extender-1 (**EX-1**) **LAN** port. Wait until the **POWER** and **LINK** LEDs on Extender-2 (**EX-2**) are steady green.

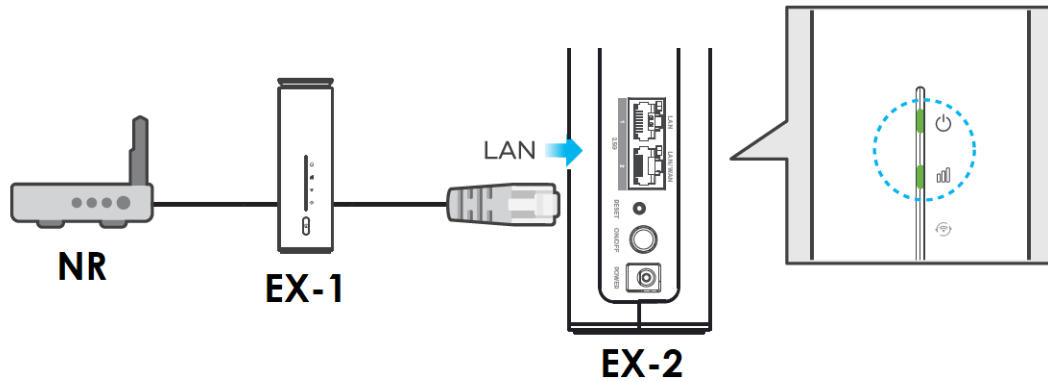


- 2 Unplug the Ethernet (LAN) and power cable (P) from Extender-2 (EX-2).

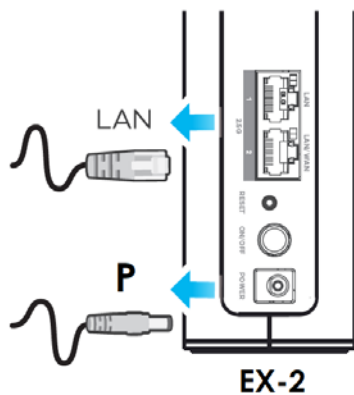

Using WPS

You can use WPS to pair the Extender with the Router if the Ethernet port is unavailable.

- 1 In the **Home** screen, tap **Extend network**. Tap **Wireless** and tap **Next**. Follow the instructions to start pairing Extender-2 with Extender-1. Once the pairing starts, a 2-minute countdown timer will begin.

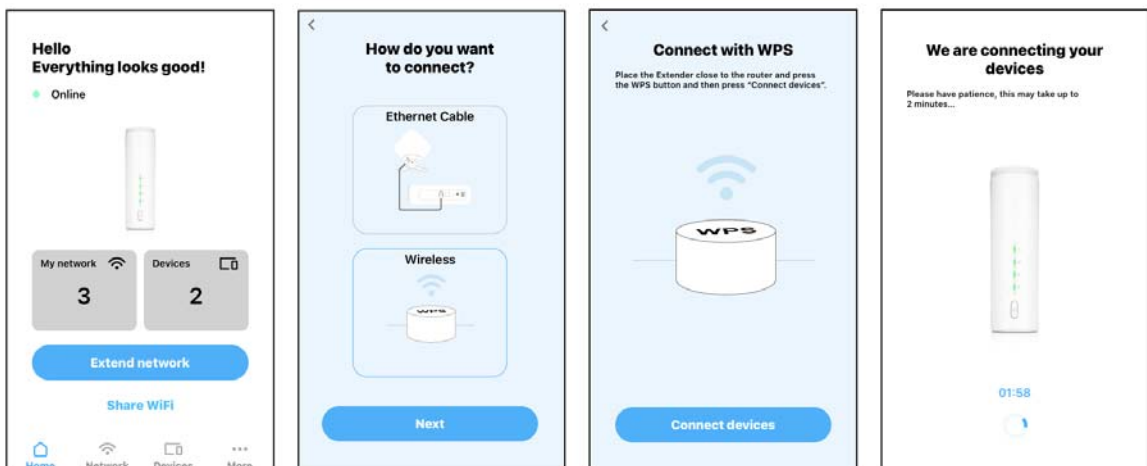

- 2 Within 2 minutes, press the WPS button once on Extender-2 for less than 3 seconds.

Note: You do not need to press the WPS button on Extender-1.

- 3 After the **Wi-Fi** LED turns steady green or fast blinking, wait for up to 2 minutes. The **POWER** LED should start blinking. The **POWER** and **LINK** LED will turn steady green if the pairing process is successful. You can also check the result on the app screen.
- 4 Click **Finish installation** to finish the pairing process. Extender-1 will undergo an auto-configuration after a Mesh network is established. Check the status of your Mesh network on the **Home** screen.




- 5 The **POWER** LED shows if Extender-2 is ready to join the Wi-Fi network. The **LINK** LED shows the Wi-Fi link quality.
- 6 Now you can connect your Wi-Fi clients to your Wi-Fi Mesh network. To do this, note the **SSID** and **Wireless Key** on the device label of Extender-1 using this SSID.



1.9.5 Placing Extender-2


In the figure below, Extender-1 (**EX-1**) is in room 1 (**R1**), and Extender-2 (**EX-2**) is in room 2 (**R2**), with client devices (**C**).

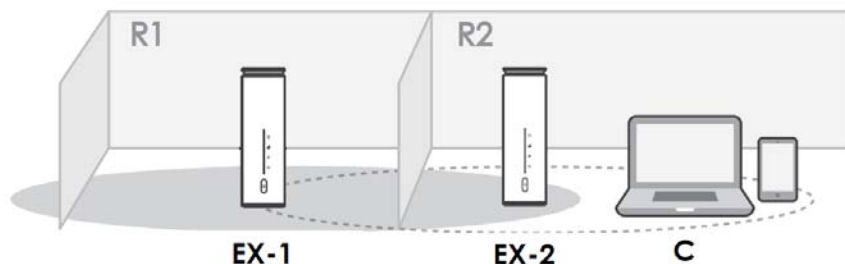

- 1 Place the Extender in the area closest to the Wi-Fi dead zone that has the best signal from the Router as indicated by the app on your mobile device.

To see if the location of the Extender is appropriate, tap **More > Help > Placement Tips** in the app navigation panel, and tap the  icon next to the Extender to perform a signal detection. After viewing the tips, tap **Start** to use your mobile device test the signal strength from the Router. See [Section 1.4.5 on page 10](#) for more placement tips.

- 2 Plug in the power adapter. Make sure your **LINK** LED is steady green. Move Extender-2 (**EX-2**) closer to Extender-1 (**EX-1**) if the **LINK** LED is red. To add more extenders to your network, repeat from [Section 1.9.4 on page 40](#).

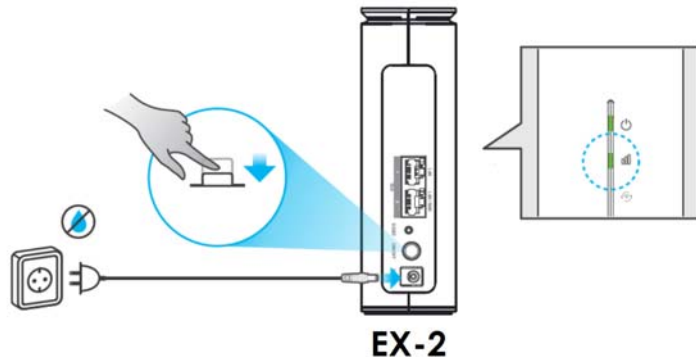

1.10 Adding Extenders to Form a Daisy Chain

You can add more extenders to your network to form a daisy chain. Daisy chain refers to the connection from the first router to up to three other extenders to extend the Wi-Fi connection from the router to the clients. The Extender uplink connection determines the mode: Access Point (**AP**) or Repeater (**RP**).

- If the Extender has a wired uplink connection, it is in AP mode.
- If the Extender has a Wi-Fi uplink connection, it is in RP mode.

The steps to add more extenders to the Mesh network are the same as in "Setting Up a Non-Mesh Router with Two Extenders."

Here are some example scenarios for the Extender's daisy chain connection:

Set up your network as in Scenarios 1-3 if you are using a non-mesh Router. Scenario 4 is only for a Mesh Router.

Note: We do not recommend connecting more than three Extenders in your daisy chain network. If you already have two Extenders in RP mode, we do not recommend adding another Extender as a repeater.

Figure 5 Scenario 1: Three APs

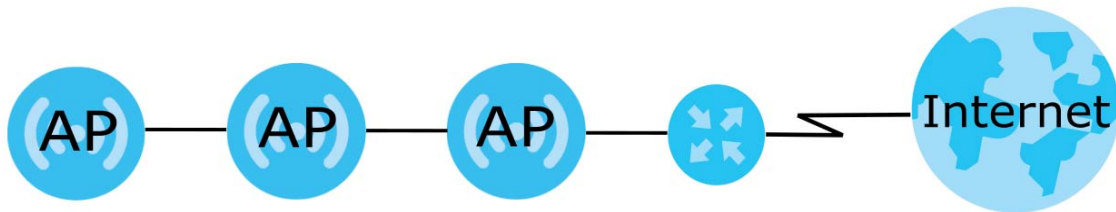


Figure 6 Scenario 2: Two APs and one RP

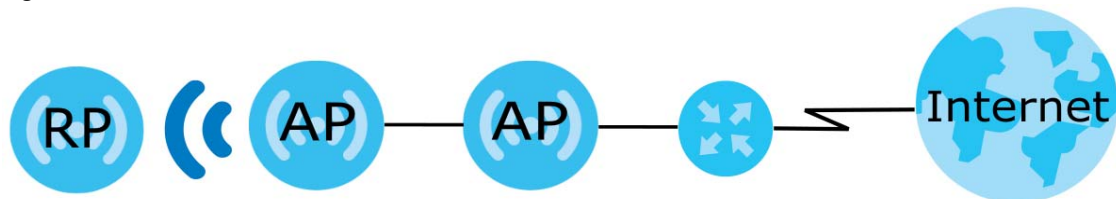


Figure 7 Scenario 3: One AP and two RPs


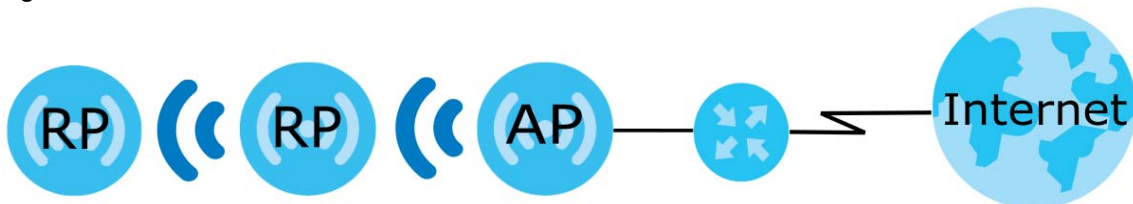


Figure 8 Scenario 4: Two RPs

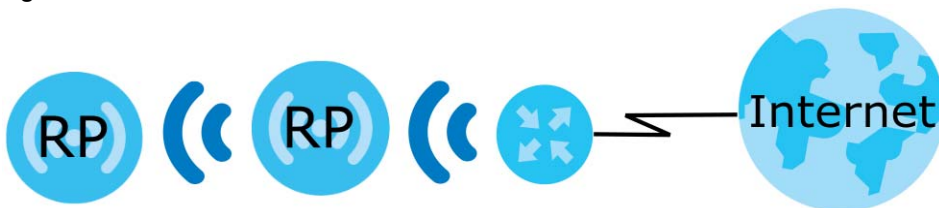

1.11 Troubleshooting

This section offers some suggestions to solve problems you might encounter. The potential problems are divided into the following categories.

- [App Problems](#)
- [Wi-Fi Problems](#)

1.11.1 App Problems

[Where can I see the current Zyxel One app version?](#)

Tap **More** > **About** in the navigation panel to see the current app version.

[I cannot add my Router or Extender to the Zyxel One app.](#)

- 1 Ensure that your mobile device is connected to your Router or Extender's Wi-Fi network. For more details, see [I cannot connect to the Extender using Wi-Fi](#).
- 2 Make sure that the Zyxel One app supports the Router or Extender and its firmware version, see the supported model list on the Zyxel One app website.
- 3 Go to **More** > **Settings** and ensure the Mesh feature on the Router or Extender is enabled.
- 4 Ensure you get the latest version of the Zyxel One app. Check for available updates on the Google Play Store or Apple App Store. Later versions include bug fixes, added features, and support for new models.
- 5 Reset the Router or Extender to its factory defaults and try again.
- 6 If the problem continues, contact Customer Support.

1.11.2 Wi-Fi Problems

[I cannot install the app on my phone/tablet.](#)

- 1 Check the Wi-Fi LED status to make sure the Mesh Router Wi-Fi is on.
- 2 Make sure your Wi-Fi client is within transmission range of the Mesh Router.
- 3 Make sure you entered the correct SSID and password. See the Mesh Router label for the default SSID and password.
- 4 Make sure your Wi-Fi client is using the same Wi-Fi security type (**WPA2-PSK** or **none**) as the Mesh Router.
- 5 Make sure the Wi-Fi adapter on your Wi-Fi client is working properly. Right-click your computer's network adapter then select **Properties** to check your network adapter status.
- 6 Make sure the Wi-Fi adapter on your Wi-Fi client is IEEE 802.11-compatible and supports the same Wi-Fi standard as the Router radio.

To check if it is your Mesh Router that is causing the problem and not your Wi-Fi connection, try using a wired connection.

I cannot connect to the Extender using Wi-Fi.

- If Mesh is enabled, the extenders will use the same Wi-Fi name and password as the controller. Make sure you're connecting to the controller's Wi-Fi name.
- Make sure the Extender is working in AP or Repeater mode and Wi-Fi is enabled on the Extender.
- Make sure the Wi-Fi adapter on the Wi-Fi client is working properly.
- Make sure the Wi-Fi adapter installed on your computer is IEEE 802.11 compatible and supports the same Wi-Fi standard as the Extender.
- Make sure your computer (with a Wi-Fi adapter installed) is within the transmission range of the Extender.

Check that both the Extender and your Wi-Fi station are using the same Wi-Fi and Wi-Fi security settings.

The Wi-Fi connection is slow and intermittent.

The following factors may cause interference. See [Section 1.4.5 on page 10](#) for more information.

- Obstacles: walls, ceilings, furniture, and so on.
- Building Materials: metal doors, aluminum studs.
- Electrical devices: microwaves, monitors, electric motors, cordless phones, and other Wi-Fi devices.

To optimize the speed and quality of your Wi-Fi connection, you can:

- Move your Wi-Fi client closer to the Router or Extender if the signal strength is low.
- Reduce Wi-Fi interference that may be caused by other Wi-Fi networks or surrounding Wi-Fi electronics such as cordless phones.
- Place the Router or Extender where there are minimal obstacles (such as walls and ceilings) between the Router or Extender and the Wi-Fi client.
- Reduce the number of Wi-Fi clients connecting to the same Router or Extender simultaneously, or add additional Extenders if necessary.
- Try closing some programs that use the Internet, especially peer-to-peer applications. If the Wi-Fi client is sending or receiving a lot of information, it may have too many programs open that use the Internet.
- Place the Router or Extender where there are minimum obstacles (such as walls and ceilings) between the Router or Extender and the Wi-Fi client. Avoid placing the Router or Extender inside any type of box that might block Wi-Fi signals.