



Cypress Vending Corp.

SMART, BOLD, DIGITAL VENDING

OPERATIONS MANUAL

CONTENTS

SECTION 1. Welcome!	3
Contact numbers and procedures for support.	
SECTION 2. Quickstart!	4
Your quick guide to starting up. There are two parts: before your equipment arrives & after it arrives.	
SECTION 3. Vendron/Silkron	19
Links to the online resources for your Nibly Snacks customer interface software.	
SECTION 4. Machine Manual	20
All the information about the Nibly Snacks machine including setup, loading and programming.	
SECTION 5. Suppliers	36
Important supplier information and contacts for healthy and premium products.	
SECTION 6. Start Up Menu Grids	43
A menu grid of popular premium products and the suppliers that carry them.	
SECTION 7. Unpacking Your Machine	50
A menu grid of popular premium products and the suppliers that carry them.	

WELCOME!

Welcome to Cypress Vending's Nibly Snacks program and welcome to the team!

This manual has been designed to help you in the initial setup of your business and also to assist you as your business grows. From time to time, you will receive updates to this Manual of Operations so please be sure to add update sheets as you receive them.

We have organized the manual into several useful sections. Please refer to the directory for quick reference.

Please read this manual completely before you start your operations. This will save you time and keep you focused on what's most important: customer service and building your business!

Important Contact Information

If you require assistance with your business or your machines, please follow the steps below. Most of the issues that you will encounter have been documented, either in this manual or on the distributor website.

Please be sure to follow this chain of action as questions arise:

1. ALWAYS CHECK THE MANUAL FIRST

- Be sure to check the Machine Manual in the Manual of Operations for all machine issues.

2. NEXT CHECK THE DEALER WEBSITE

- Download the most up-to-date manual and check it.
- Check the frequently asked questions section.

3. CONTACT US BY EMAIL: SUPPORT@CYPRESSVENDING.CA

- Start with your machine's serial number and include as many details about your question or concern as you can. Photos help. We will respond as quickly as possible.

4. CONTACT US BY PHONE: 604-638-6078*

- We can respond to email inquiries much more quickly than phone inquiries, quite often sending you a file or answer to your question right away.



Cypress Vending Corp.

SMART, BOLD, DIGITAL VENDING

QUICK START GUIDE

We are almost ready to begin your new business venture!

Before we begin please follow the **QUICK START** guide to make sure you have covered all the important steps:

PART 1—BEFORE YOUR EQUIPMENT ARRIVES

- | | | |
|---|--------------------------|------|
| 1. You have decided on your business structure | ☐ | Done |
| 2. You have ordered your business cards | ☐ | Done |
| 3. You have familiarized yourself with key suppliers | ☐ | Done |
| 4. Your initial product order is planned and ready to be placed | ☐ | Done |
| 5. You have prepared your investment balance | ☐ | Done |
| 6. You have decided on your initial product pricing | ☐ | Done |

PART 2—AFTER YOUR EQUIPMENT ARRIVES

- | | | |
|---|--------------------------|------|
| 1. Make delivery arrangements | ☐ | Done |
| 2. Moving and delivery of your machines | ☐ | Done |
| 3. Storage of your machines | ☐ | Done |
| 4. Unpacking your machines | ☐ | Done |
| 5. Tools for initial start-up | ☐ | Done |
| 6. Locate keys and open door | ☐ | Done |
| 7. Open your Nibly Snacks vending machine | ☐ | Done |
| 8. Remove tray lock bar | ☐ | Done |
| 9. Attach air diverter | ☐ | Done |
| 10. Retrieve power cord | ☐ | Done |
| 11. Payment device installation | ☐ | Done |
| 12. Load product | ☐ | Done |
| 13. Power up and turn on machine | ☐ | Done |
| 14. Test machine | ☐ | Done |
| 15. Refer to SECTIONS 3 and 4 of the online manual to begin using your Nibly Snacks machine. | ☐ | Done |

PART 1. QUICK START GUIDE

Before your equipment arrives.



1 DECIDE ON YOUR BUSINESS STRUCTURE

Prior to beginning, you should decide on how you want to structure your new business. Depending on your situation you may decide to run your Nibly Snacks business as:


Proprietorship • Limited Company • Partnership • Subsidiary Company

As every Nibly Snacks operator has different financial needs and goals it is best that you discuss the various options with your accountant before you decide on your business structure.



2. ORDER YOUR BUSINESS CARDS

Now it's time to order your business cards. These cards will allow you to advertise your business and promote your services to new accounts. You will receive an email from the Cypress Vending team with ordering instructions.

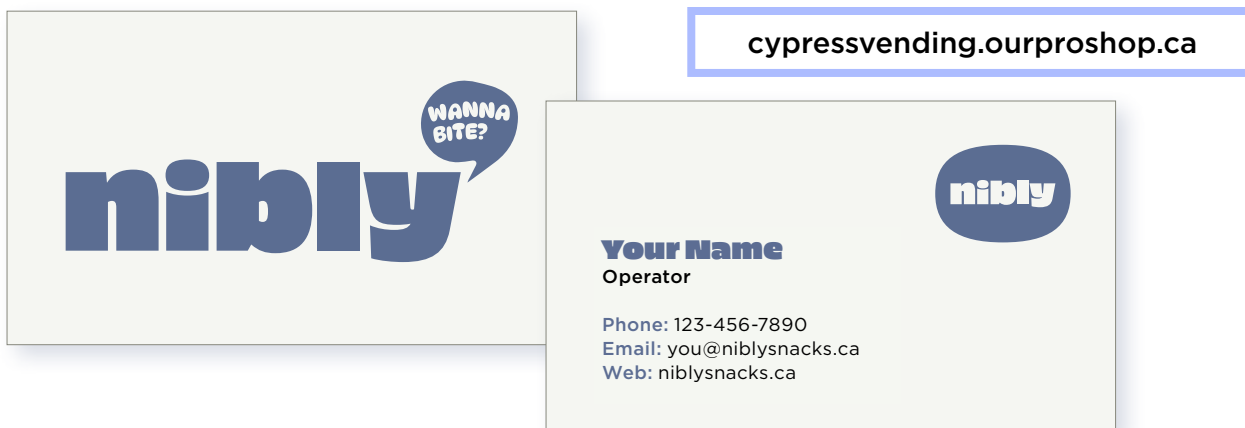

3. REGISTER WITH KEY SUPPLIERS

In the Suppliers section of the manual (Section 6), you will find the supplier registration forms. Take the time to carefully fill out all necessary forms and make sure to request a catalogue or digital pdf from each supplier!



PART 1. QUICK START GUIDE

Before your equipment arrives.



4. PLAN YOUR INITIAL ORDER

What products do I start with? This is a common question asked by Nibly Snacks operators. We have provided a startup grid in this manual to give you a place to build from.

Once your business is underway, you will then adjust your menu according to the feedback provided by your customers.

Note: Plan your startup grid well before you place your first machine on location.

The grid is laid out exactly like the machine, showing the different selections, products dispensed from these sections and the specific quantities each selection will hold.

For example, if you are purchasing Popcorn for Coil 12, you will need 5 pieces for that coil. To determine the total inventory you need to take the number of pieces required for each selection and multiply by the number of machines that you have.

Example: Selection 12 - 5pcs Farm to Table Popcorn X 10 Machines = 50 Pieces Required.

Now go through each selection and calculate how many pieces you need to fill all your machines. Record this information. The next step is to go to your chosen suppliers and determine exactly what you will need to purchase to fill all your machines. We recommend that you order enough inventory to restock your machines a second time so you are prepared for refilling your machines. You will need to factor in each supplier's minimum order quantity and case sizes to order efficiently.



5. PREPARE YOUR INVESTMENT BALANCE

Your deposit confirmed your position in the Nibly Snacks program. Your equipment is currently in production or is being shipped to our warehouse. We will be sending you notification once the equipment is on our loading bay and ready to ship. Please make arrangements for your investment balance to avoid any start-up delays.



6. DECIDE ON YOUR INITIAL PRICING

How much do I charge? We often have operators ask us what they should be charging at their locations. Unfortunately, we cannot give you prices because this is your business. You set the prices that you charge!

We can however give you a rule of thumb that is common in the vending industry. If you buy a product for \$1.50 most vendors would charge \$3.00 so they would be making a gross profit of \$1.50 per bottle. Some products you will get a larger markup. One example is water that is usually purchased for around 20 cents per bottle. Many operators will sell bottled water for \$1.50 per bottle, which is over 500% markup.

Some other factors that will go into pricing at your accounts are:

- The commission (rent) paid at the location.
- The type of location (school-aged children's activities may require more affordable products.)

PART 2. QUICK START GUIDE

When your equipment arrives.



1. MAKE DELIVERY ARRANGEMENTS

Your Nibly Snacks representative will contact you to let you know that your shipment is ready to ship to you. When your equipment has arrived at the local freight terminal you will receive a phone call to notify you. At this point you will have let your Nibly Snacks rep know if you'd like your equipment delivered to your residence or a local temporary storage facility where it can be staged for final delivery to your locations. Please let your Nibly Snacks rep know if you require assistance in locating a local delivery company or secure storage facility for short-term staging. Having your equipment staged and ready to be delivered as soon as you receive location confirmation is the most efficient arrangement. Once a location agrees to host an Nibly Snacks machine, it is best to deliver it immediately.

Note: After initial inspection, replace the cardboard carton until your Nibly Snacks machine is safely in your location clear of all doorways and obstacles. This will prevent damage!

IMPORTANT! BEFORE SIGNING FOR YOUR MACHINES!

You must confirm that all boxes and pieces are with your shipment. You must confirm that NO damage has occurred during shipping. Damage or missing items must be claimed within 24 hours of receipt of shipping. Cypress Vending Corp or the shipping company will not be responsible for damage which is not reported within 24 hours.



2. MOVING YOUR NIBLY SNACKS MACHINES

Your Nibly Snacks vending machines are large, heavy machines that should be moved by experienced appliance movers. We do not recommend that operators move their own machines in their personal vehicles. It is best to leave this to a professional to avoid any unwanted damage to the equipment or, worse yet, injury due to moving the machine yourself.

BE SAFE — HIRE A PRO!

Your mover should be experienced at moving large, delicate items (pianos, refrigerators, freezers and industrial equipment). Piano movers are especially great for vending machines as they are used to large and delicate moves. They will need a truck with a tailgate lift to receive the machine from the loading bay and to lower the machine to street level. Once on level ground the best way to move the equipment is with a narrow-fork pallet jack (pump jack) with forks of 20 inches in width.

PART 2. QUICK START GUIDE

When your equipment arrives.



2. MOVING YOUR NIBLY SNACKS MACHINES (CONT'D)

A standard-fork pallet jack will also work with one fork going under the machine and the other fork resting against the front bottom ledge of the machine. It is advised to lift the machine just high enough off the ground to move it. Lower the machine gently when in its final position.

Exercise caution when sliding the machine on polished floor surfaces as it might scuff!

Use caution when moving the machine in a location. It is the operator's responsibility to make sure the move goes off without damage.



3. STORING YOUR NIBLY SNACKS MACHINES

Your machines can be stored in a dry and secure storage facility. It is advised to store the machines at room temperature. Never tilt or lay your Nibly Snacks vending machine on its side as this will affect the refrigerant gas in the machine's chilling system!

WARNING: NEVER place your Nibly Snacks on it side. If the machine has been tipped more than 30 degrees **DO NOT PLUG IN TO POWER FOR A FULL 24 HOURS.** Doing so will void your machines warranty.



4. UNPACKING YOUR NIBLY SNACKS MACHINES



Once your machine is stored, you may decide to unpack and test one machine. We recommend that you keep machine's packed and on their pallets until installation ensuring they are fully protected during transportation. If you opt to unpack and test one unit, first, remove the cardboard carton from the machine. If you have enough ceiling height in your storage facility you can simply and carefully pull the cardboard carton off. Be careful not to grab or tear the vinyl display graphics when you pull the box off the machine. The other option is to cut the box and remove it from around the machine. Your Nibly Snacks vending machines have been clearly marked "FRONT". Do not cut on the front or sides of machine but carefully cut the shipping carton on the back. Use a blade that is exposed just enough to cut the cardboard only, carefully cut the box from top to bottom. Do not press hard – remember you are just cutting the cardboard! Next, remove the plastic protection bag from the machine by pulling up. Now you can see your new Nibly Snacks machine. Let's now begin to prepare this machine for operation. **Note: see the "Removing Nibly Snacks Vending Machine from Pallet" supplementary document for more unpacking details.**

PART 2. QUICK START GUIDE

When your equipment arrives.



5. INITIAL NIBLY SNACKS MACHINE START-UP PROCEDURE

Now that we have our Nibly Snacks vending machine in our location we need to get the new machine ready for customer use! Let's do this in a step- by-step manner:

Tools and items required:

- ☐ 1. Phillips screwdriver
- ☐ 2. Utility knife
- ☐ 3. Scissors
- ☐ 4. Carpet or cardboard to slide machine
- ☐ 5. Complete product for machine
- ☐ 6. Grounded extension cord
- ☐ 7. Drill
- ☐ 8. Small step ladder

PART 2. QUICK START GUIDE

When your equipment arrives.



6. LOCATE KEYS AND OPEN MACHINE DOOR

Your machines keys are located in the product delivery tray.

This would be a good time to record the machine's location on the key chain to avoid confusion later about which machine belongs to which keys. We have seen this happen many times!

Keep one key on your master key ring for each location. Mark the location name on each key. Keep your spare keys in a safe place in case you ever should lose your keys. It is not fun when you lose all your keys and have no spares!



7. OPEN YOUR NIBLY SNACKS MACHINE




Place the key in the lock on the front left of the machine. Turn the key counter clockwise and then pull the latch out, then turn the latch counter clockwise several times. Now pull the door open. You will now be able to access the product compartment.

Inside the product compartment, you will find the hardware and accessories for your machine. Remove them from the door and put them in a safe location until you are ready to assemble your machine.



****The machine may be difficult to open if not levelled. A spirit level from the dollar store will assist with that easily.**

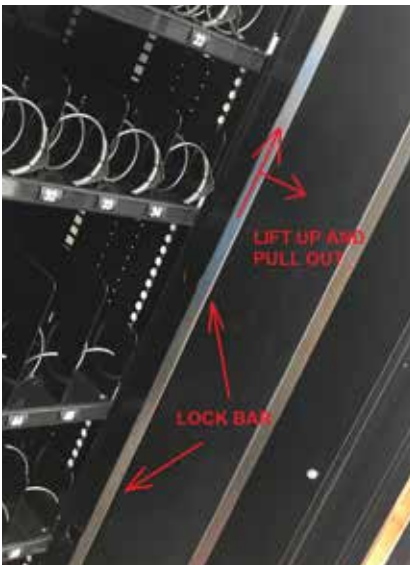

8. REMOVE THE TRAY LOCK BAR

Your machine's vend trays have been secured with a tray lock bar on the right side to prevent them from moving during transportation. You will need to remove the lock bar. Pull upwards on the bar toward the top of the machine and then pull the bar straight out towards you. Store the bar somewhere safe in case you need to move the machine later.

Note: see the "Removing Nibly Snacks Vending Machine from Pallet" supplementary document for more unpacking details.



PART 2. QUICK START GUIDE

When your equipment arrives.



9. ATTACH AIR DIVERTER

An air diverter comes with your machine. This is a necessary item. It keeps space between your Nibly Snacks vending machine and the wall so your machine's refrigeration system can ventilate properly.

Failure to install the air diverter could result in damage to the refrigeration system which would not be covered by the equipment warranty. To avoid any damage during moving, we recommend installing the air diverter once the machine is placed in its final location.



10. RETRIEVE POWER CORD

Your power cord has been safely stowed in a rear compartment of your machine to prevent damage during transport. Open stowage compartment by removing the 2 screws at the back of the machine right side.



A. Open stowage compartment by removing the 2 screws at the back of the machine right side.



B. Remove cover plate by rocking it forward.



C. Pull out the power cord and pull it through the slot. Slide plastic cover plate on to the cover plate. Tighten screws.

See the Nibly Snacks–Machine Setup supplementary document for more details.

PART 2. QUICK START GUIDE

When your equipment arrives.



11. STREAMPAY CARD READER AND COVER PLATE INSTALLATION

Your Nibly vending machine is equipped to handle all forms of electronic payment. Your machine will come supplied with a card reader. Your machine panel has 2 “knockouts” to facilitate the installation of either the card reader. Here is how install the card reader on your configuration. If you wish to add other payment options now or in the future contact your Nibly Vending Representative.

12 INSTALL STREAMPAY CARD READER SYSTEM

Each machine will come with a StreamPay Card reader. The unit comes in 2 parts; the front bezel called a card reader which your customers will use and the telemetry unit which is installed inside your machine.

a. Install the reader onto the bezel.



b. Install the reader in the device opening using the screws mounted in the frame.



SECTION 2. QUICKSTART - PAYMENT MODULE

When your equipment arrives.



12. INSTALL STREAMPAY CARD READER SYSTEM, CONTINUED

c. First item to plug into the Telemetry Unit is the USB cable. This is very important. Especially with an increase in units being prepped and tested at storage units with battery packs. If you use a battery pack it is essential to plug in the USB Cord first before connecting any other cables into the Telemetry Unit. We suggest doing the USB cable in this order regardless.

The USB cable can plug into any open USB connector on the Silkron IPC (blue box) into a 'USB' slot. Then plug the USB cable into Telemetry Unit (silver box) into USB Connector.



d. Connect the USB-C cable and Silkron MDB adapter Y cable to the reader unit.



e. Plug in the Silkron MDB adapter Y cable and the USB-C Cable into the Telemetry Unit.



SECTION 2. QUICKSTART - PAYMENT MODULE

When your equipment arrives.



12. INSTALL STREAMPAY CARD READER SYSTEM, CONTINUED

f. Install the antenna on top of the door. Thread the cable inside the machine through hole in top of door. Then plug in Antenna into Telemetry Unit.



g. The Telemetry Unit will install on the open space in the instrument panel below the card reader on inside of the door. Keep cables clear of the edge of the door to avoid damage.

h. Once your StreamPay system has been installed, record the Telemetry Unit and card reader serial numbers for each machine and register and submit these numbers with StreamPay (see the StreamPay section of the manual). Registration is necessary to accept cashless transactions.

PART 2. QUICK START GUIDE

When your equipment arrives.



13. LOAD PRODUCT

Before your installation, you will have recorded your pricing for each item and you will know exactly where each item is to be placed according to your Nibly Snacks Start-Up Grid. Let's begin by doing one tray at a time.

1. Start with the 1st tray (chip bags)

Pull your 1st product tray out until it tilts forward, allowing you access to the product coils. Inspect the vend coils and make sure none of them have come out during shipping. Starting at the back in the selection 10, begin placing products inside each coil and work your way from back to front. Now go on to 11, and then 12, repeating the same process.

2. Repeat this process on the 2nd tray.

When you get to the 3rd tray, note that there are spacers on some of the right hand selections. Because they have this adjustable spacer bar, narrow product will travel more easily in the coil. Slide this adjuster bar to snugly fit the product (not too tight!)

3. Continue on loading from back to front...

The 4th tray is for large bottles (up to 591ml). Caution – Do not pull this tray out too far forward when filling as bottles and cans of liquids are very heavy.

Place the larger bottles on the outside coils in this section. For large diameter bottles, you might find it is best to place them cap down. This is especially true for Vitamin Water bottles, which are very wide. Other bottles sit nicely in the coils. Make sure that you start loading from the back to front.

The 5th tray is for cans and the 6th tray is for small juice bottles and tetra boxes.

Now that we have loaded the machine – let's tell the machine's brain how much each product's price is.

PART 2. QUICK START GUIDE

When your equipment arrives.



14. LET'S POWER UP AND TURN ON YOUR NIBLY SNACKS MACHINE

You will need to plug your Nibly Snacks vending machine in at your location. It is recommended to use a dedicated 120V grounded outlet.

Note: We said GROUNDED. Do not plug your Nibly Snacks vending machine into an outlet or use extension cord that is not GROUNDED! Your machine is protected against ground faults. It has been designed for **SAFETY!**

Do not cut corners – you need a grounded outlet and/or a grounded extension cord!

Once you have plugged your machine into the power – we need to turn the machine on. With the control door open you will see the one main power (breaker type switch) at the bottom of the machine in recess below the control panel.

Start by making sure the main power to the machine is in the on position. If this main switch does not turn on – you will need to reset it by pushing the smaller reset tab on the switch. Then turn the switch on again.

With the door shut, you will hear the refrigeration compressor turn on and begin to blow air.

PROBLEM?

CHECK THE MAIN POWER FIRST. Make sure that the power receptacle actually has power by plugging in a light, radio, or power tool to ensure there is power at the outlet. If there is no power, talk to your location. If you have power, reset the breaker switch and turn it on again!

15. TEST YOUR MACHINE



We will get into more testing of the machine as we begin to program prices and make test vends, but to start, let's make sure the machine's basic functions are working:

1. Is the machine's LCD display on inside the door of the machine?
2. Is the touch screen display on?
3. Is the machine's refrigerated compartment beginning to cool down?

The machine's temperature will start at room temperature and slowly chill down. Watch this temperature over the next 40 minutes to confirm that it is cooling down. Okay, now that we know the machine is functioning correctly let's begin our basic setup.

PART 2. QUICK START GUIDE

When your equipment arrives.



16. CONGRATULATIONS ON COMPLETING YOUR INITIAL SETUP!

Please refer to Section 3 of the online manual, Vendron/Silkron resources, to begin using the machines user and customer interface:

<https://www.nibly.ca/ops-manual>




SECTION 3. VENDRON/SILKRON

Smart Vending & Automated Retail Software Platform

SETTING UP AUTOMATED RETAIL SOFTWARE

Please refer to the links to the online resources for your machine's customer interface software.

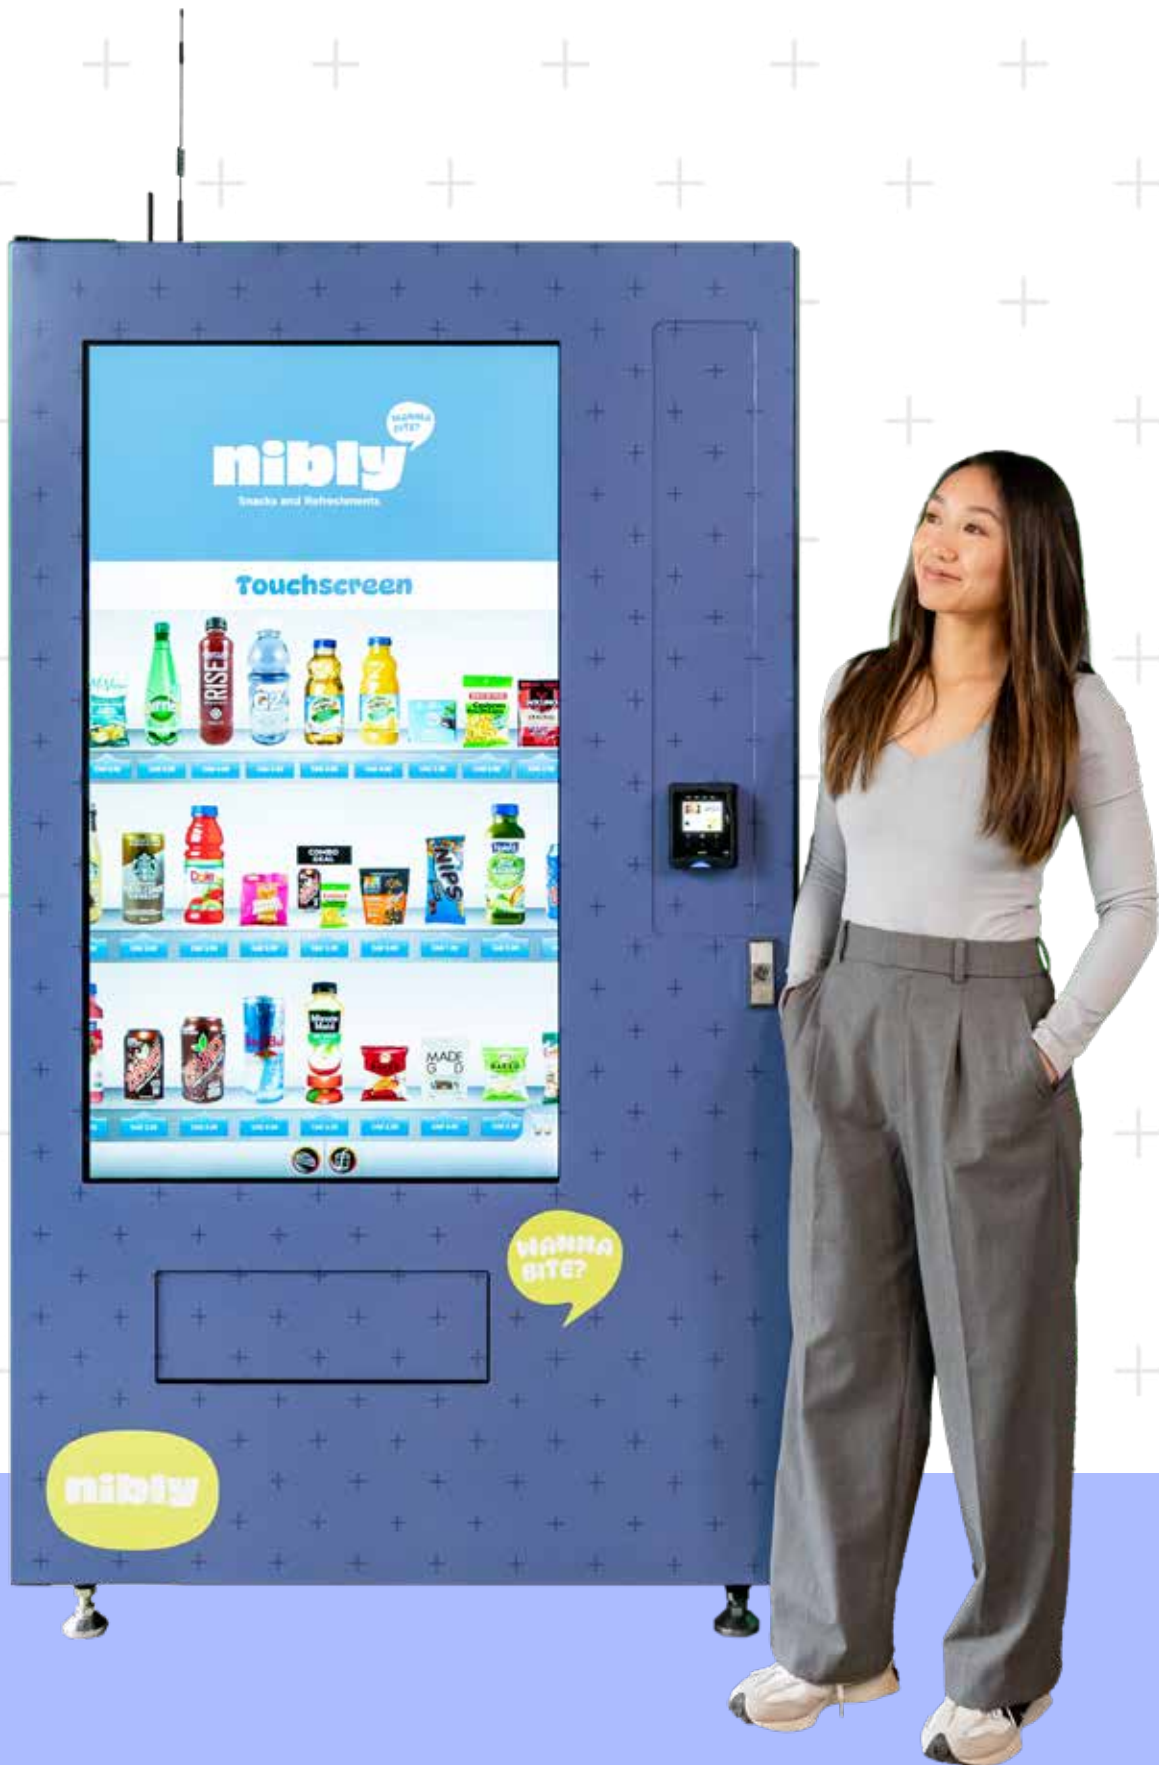

MACHINE MANUAL

CONTENTS

1.0	Introduction	21
2.0	Installation	22
3.0	Loading of Product	23
4.0	Refrigeration	24
5.0	Programming Options	25
6.0	Cleaning	30
7.0	Maintenance	31
8.0	Noise	31
9.0	Restrictions of Use	31
10.0	Important Safeguards	31
11.0	Troubleshooting	33

1.0 INTRODUCTION

YOUR NIBLY SNACKS MACHINE

The Nibly Snacks machine is a state-of-the-art, fully refrigerated vending machine suitable for multi-purpose applications. Your Nibly Snacks machine comes standard with 6 trays—3 snack trays and 3 drink trays.

The machine's robust construction makes it ideal for many locations. It has superior insulation, a double-glazed glass touchscreen window, sophisticated vend sensors to confirm product delivery, and a powerful cooling system with a bottom area temperature of 4°C and 14°C in the top area.

For added safety an electrical cut out switch (RCD) is built in as standard. The machine operates with the MDB protocol and has two control boards with built in diagnostics. Vend motors are standard 24 volt and coils can be interchanged easily.

This machine is suitable for indoor use.

NIBLY SNACKS VENDING MACHINE		
Model	GN 4500	
Dimensions (WxDxH) mm	1,058 mm x 778 mm x 1,830 mm	
Weight GW (kg)	328 kg	
Max. Selection	Beverage: 108 pcs Snacks: 137 pcs	
Refrigeration System	1/3 HP R-134a (280g charge)	
Power Consumption	Rated power: 688W, Standby: 168W, Max power: 726W.	
Power Supply	AC 220V ~ 250V 50Hz / AC 110V ~ 130V 60Hz (based on your actual machine)	
Lighting (Optional)	12VDC LED Color corrected lighting system	
Internal Temperature	Top	14°C ~ 25°C
	Bottom	Down to 3°C
Air noise	Less than 60 dB	
Conditions of use	Ambient temp 0°C ~ 35°C Humidity 75% Not for dairy or perishable goods.	

2.0 Installation

2.1 UNPACKING & PLACEMENT

Remove all packing materials and dispose of responsibly. Once the installation site has been chosen, ensure that the machine is level and all four levelers touch the ground. Check that the door can be opened fully and the machine is stable and level.


***MACHINE MAY MIS-VEND IF NOT LEVEL.**

The machine may be difficult to open if not levelled. A spirit level from the dollar store will assist with that easily.

2.2 INSTALL THE AIR DIVERTER

The air diverter for the machine is not installed before leaving the factory. This prevents it from getting damaged during transportation. You should install it before the machine is put into service.

See below:

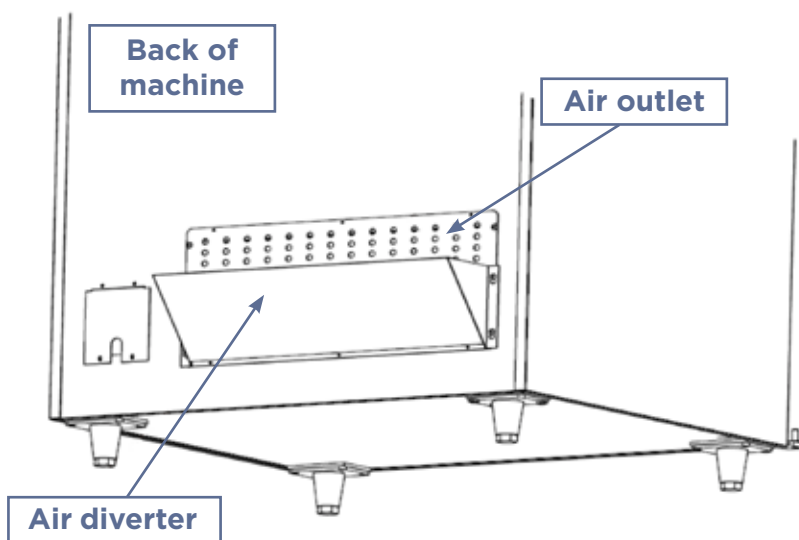

NOTE: Wear protective gloves when installing the air diverter to prevent injury.

1. Open the door and take out the air diverter from the right small drawer of the Nibly Snacks machine.
2. Loosen the lower four screws which secure the air diverter to the back of the cabinet.
3. Place the air diverter on the air outlet as shown, aligning it with the holes in the outlet and the cabinet.
4. Fasten the four screws.

Allow 300mm (12 inches) minimum between machine and the wall for air circulation and refrigeration ventilation. The air diverter helps ensure this distance is maintained. Installation instructions for the air diverter are above.

Ensure that a 120 volt AC, 15 Amps grounded outlet is within 2 meters of the machine.

This machine should not be used with an extension cord.

THIS MACHINE MUST BE GROUNDED

Open the door and power up the machine. Switch on the circuit-breaker power switch. The coin system, LCD display and refrigeration system will begin operation.

3.0 LOADING OF PRODUCT

LOAD PRODUCT


This machine has 6 trays. The top 3 trays are for snack-type items such as chips, bars, etc. The bottom 3 trays are for drink-type items — bottles or cans.

To load a tray: with the door fully open, pull the front tray forward. With the tray fully forward, lower to an angle that makes loading easier.

Ensure products are not too tight or too loose for the coil. Load products so they rest on the tray and not the coil. This helps to ensure correct delivery of product. The machine is supplied with trays with coils of different diameters and pitches.

To vary their quantity or their order, proceed as follows:

1. Open the main door.
2. Pull out the tray on which you want to change. Disconnect the tray cable and take out the tray.
3. Remove the coil from the plastic support (coil base) and replace with another coil or replace the motor to change coil type.
4. Load the modified tray, following the above instructions in reverse. When the tray is back in place, make sure that the end of the coil is attached securely

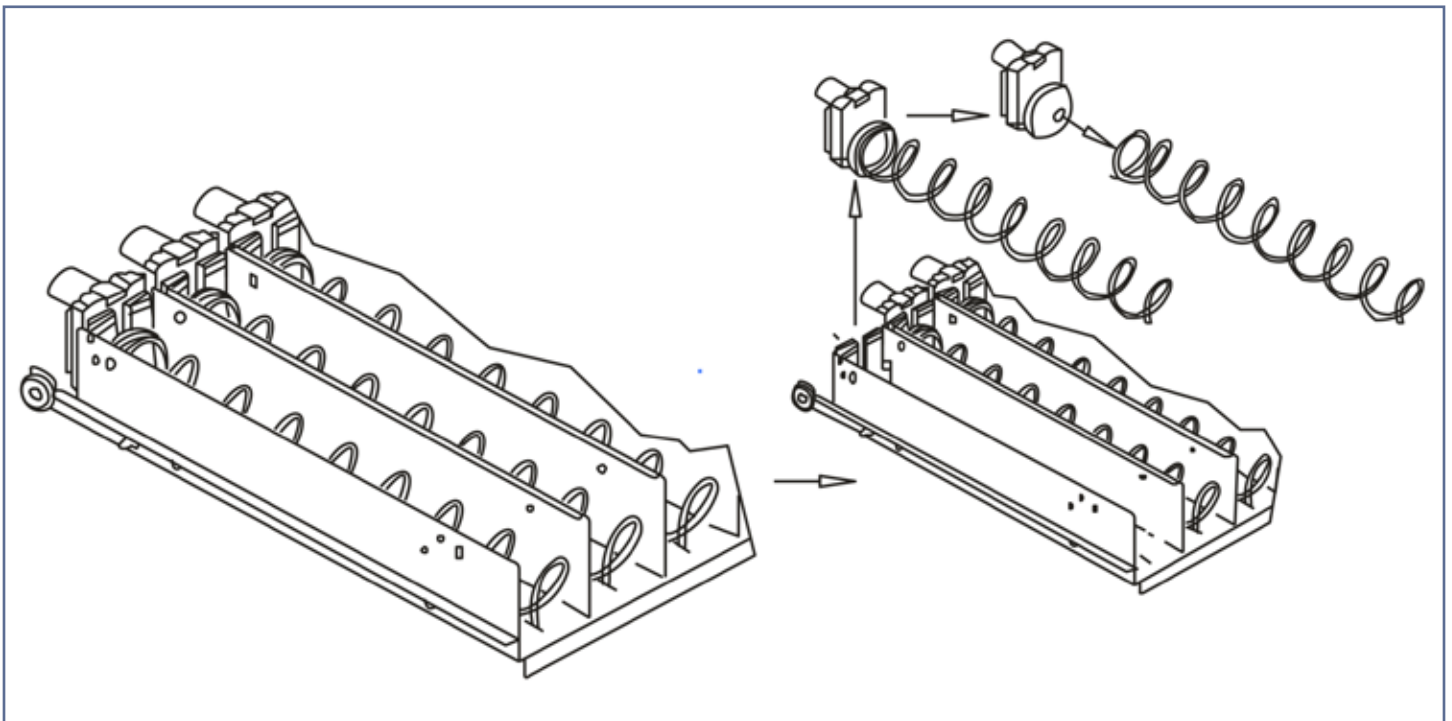

On the right-hand side of the cabinet are four shelves for storing excess items. Although the shelves are close to the refrigerated part of the machine, due to the cabinet's efficient insulation, they are protected from high ambient temperatures.

4.0 REFRIGERATION

LEARN MORE NIBLY SNACKS' COOLING SYSTEM.

1. This system is like an air conditioner. Take care to neither obstruct the rear air grill or to place the machine too close to a wall (300mm minimum distance). Failure to observe these points may invalidate the refrigeration system warranty.
2. The refrigeration system is operated through the electronic control board. There are two temperature sensors in the cabinet: one control the current temperature, the other controls the defrost temperature. When an unusual condition takes place and leads to the evaporator frosting, the sensor will send out a signal to the controller, then the controller in turn shuts off the compressor through the relay.
3. If the temperature exceeds the cabinet temperature that has been programmed in by the user, the controller sends a signal to the refrigeration relay. The energized relay closes to complete the high voltage circuit that powers the compressor and the condenser fan.
4. If the compressor should overheat, a thermal overload removes power to the compressor until it is cooled.
5. When the temperature in the cabinet reaches 8°C (or the desired cabinet temperature setting), the controller de-energizes the relay, which in turn breaks the circuit powering the compressor.
6. The controller will also shut off the compressor if the door is opened. This is to prevent the refrigeration unit from freezing up.

When the compressor has been shut off, the controller will wait until the compressor has been for 3 minutes and if applicable, the door has been closed for 1 minute before restarting the compressor. The delay allows pressure in the system to equalize.

NOTE:

The refrigeration system is pressurized and sealed at the factory. Puncturing or cutting any component in the system will cause refrigerant gas and liquid to be propelled out of the system and may create an immediate physical hazard. Use caution to avoid accidentally opening the refrigerant system.

It should also be noted that releasing refrigerant to the atmosphere is a federal crime and is punishable by law. Any service work requiring the system to be opened must be performed by a licensed technician using certified equipment. Unauthorized service to the sealed refrigerant system may void the warranty.

1. Never puncture or cut any component in the refrigeration system.

2. Always use licensed service technicians to service the refrigeration system.

3. Always wear hand and eye protection when servicing the vendor.

5.0 Programming Options

OVERVIEW

Open the machine door. All programming options are accessed by pressing the black *"MODE"* button located on the main control board. The controller automatically returns to the sales mode if the door is closed. If there is a credit displayed before entering the service mode, it will be restored when the sales mode is re-invoked.

When opening the door, the programming LCD will show **"Welcome V1.0 190916"** V1.0 (190916 is the current software version.)

The display will show in this order: *Checking: OK, Card READER:, Refri Board: Red_C Board.*

The machine will beep to notify the operator. At the same time, display will show *"WARNING: the door is open"* and *"WARNING: Motor checking."* After 2 seconds, the beeping will stop and only those motors not at home position, null or jammed will run. The number of each selected motor will be displayed when it is tested. When a motor is not running, an error message *"** (** = the motor number) TIMEOUT!"* or *"** LOST!"* will show if any motors are still jammed or not home. If any motors are still null, *"** NULL"* will show. If any selection is sold out, *"** SOLD OUT"* will show. Otherwise it will show *"** OK!"* If those motors are all reset, the test will be finished.

After a motor is reset, the machine will be diagnosed automatically. It will display the current status of the controller and peripherals. Checking is carried out in the order of changer, bill validator, card reader and vending machine controller. The display will show in this order: *"READER", "VMC"*. If no problems are found with the individual device then the name of the device will be followed by *"OK"*. If problems are found then the device name will be followed by an error code.

Possible error codes are shown in **5.10 Diagnose**

Press the programming key once to enter service mode. The display will show the first menu in service mode: *"ENTER SVC MODE PLS PRESS ENTER."*


NOTE: If the control board need to be replaced for any reason, all motors must be tested after the new control board is installed.

Programming options are:

Single Motor TST

Test All Motors

Machine Setup (Lighting, Cooling Set Test)

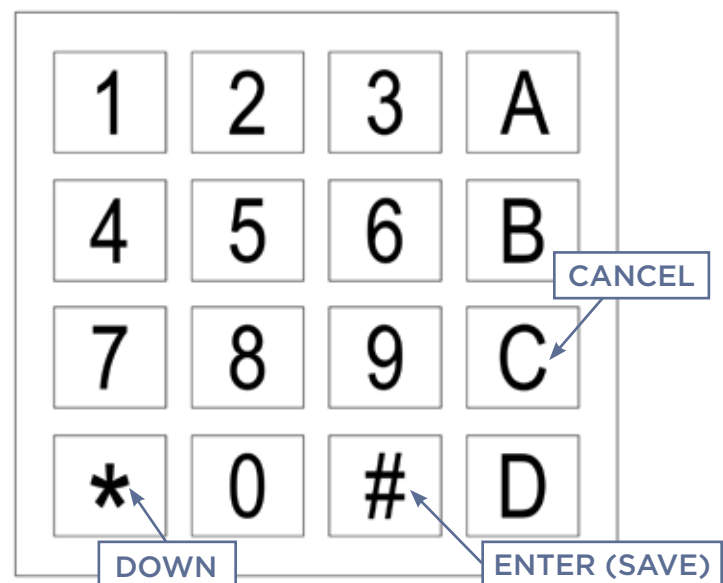

The operator navigates the service menu by using the 3 function keys above. The *"**"* key may be thought of as a *"DOWN"* key. It can also be used as a *"SELECT"* key depending on the context. To enter into the displayed menu, the user should press the *"#"* key. Think of the *"#"* key as the *"ENTER"* key. When changes have been made to a menu, the *"#"* key has a second function as the *"SAVE"* key. To cancel navigation within a menu item and return to the previous level, the user should press the *"C"* key. This key may be thought of as the *"CANCEL"* key. For the purpose of simplifying the service mode instructions, the following sections will introduce the different menus available and describe how settings are modified in service mode. When entering service mode by following the method above and pressing the *"**"* (*Down*) key, the first menu is displayed.

5.1 SINGLE MOTOR TEST (SINGLE SELECTION)

This menu provides functions that allow the operator to test the operation of individual motors. After pressing the “*” key when “*SET PRICE*” is displayed, the menu will display “*SINGLE SELECTION*”. Upon entering into test mode, the display will show “*SELECT ***” (*with ** being the two digit motor number selected*). To test a single motor, the user should enter the required selection number with the keypad. The display will show “*** (the number of motor entered) TESTING*”. If the motor is working “*** OK*” will be shown; otherwise, “*** ERROR*” will be displayed. If the motor does not exist, “*** NULL*” will be displayed. To exit the menu, press the “C” key.

5.2 TEST ALL MOTORS

This menu allows the operator to test the operation of all motors in the machine. Use the “*” key to display the “*Test all Motors*” Menu. Pushing the “#” key will activate the function. If any motor is not working, “***Error!*” will be shown (“**” is the number of the motor with the error). If the motor does not exist “*** NULL*” will be shown (“**” is the number of motor tested). Please remove the tray and check the motor for loose connections or replace with new motor if necessary. If all motors are working, “*ALL OK*” will be displayed. If you wish to end your tests, press the “C” key to exit the menu at any time.

5.3 SENSOR MODE

There are three drop sensor modes: **DISABLE**, **HOME**, and **DROP**.

DISABLE: The drop sensors are disabled and the message “*THANK YOU*” will show on the screen whether or not a product drops and clears the drop sensors in the product compartment (drop box).

NOTE: If the optical sensors are not installed or are not functioning, the detect mode will automatically be set to DISABLE. When the door is open, the display will show “*WARNING: optic disabled!*”.

HOME: If the product fails to vend on the first try, the coil will automatically make an additional cycle in an attempt to vend the chosen selection. If the product still fails to vend on the second try, a third rotation will be initiated. If after the third attempt, the vend still fails, the message “*MAKE ALTERNATE SELECTION*” will be displayed. If during the above process, a product is detected by the drop sensors, the message “*PLEASE REMOVE YOUR PRODUCT*” “*THANK YOU*” will show on the screen indicating a successful vend.

DROP: If the product fails to vend, the coil will turn an additional 1/6 cycle. If a product is still not detected, the motor will turn the coil another 1/6 turn. If, after the second attempt, the vend still fails, the message “*MAKE ALTERNATE SELECTION*” will be displayed. If there is a product detected by the sensors during the above, the message “*PLEASE REMOVE YOUR PRODUCT*” “*THANK YOU*” will show on the screen.

Enter the Drop Sensor (Sensor Mode) menu by pressing “#” (Enter) key. The display will show “*Sensor Mode*” (the sensor mode of the master machine). Press “#” (Enter) to enter into edit mode, then press the “*” (Down) key to switch the sensor mode. Finally, the user can press the “#” (Save) key again to save the Drop Sensor setting. At any time, the menu may be exited by pressing the “C” (Cancel) key.

Press “*” (Select) key to scroll down and the display will show the currently selected sensor mode and select a new sensor mode if desired. Then press the “#” (Save) key to save your setting or press the “C” (Cancel) key to exit this menu.

When “*MAKE ALTERNATE SELECTION*” is displayed, a vend is considered a failed vend. The controller will prevent any further attempts to vend the same selection. That motor is disabled until it is successfully tested with “*MOTOR RESET*” or 'Single motor test'. The “*MOTOR RESET*” function is performed automatically after opening the door. The 'Single motor test' is the Test Vend function described in section 6.3. If a motor fails, the customer can choose an item from any other available selection.

If there are three continuous failed vends in the HOME mode or DROP mode in a single transaction, the sensor will be considered faulty and the sensor mode will automatically be set to 'DISABLE' mode. When the door is opened, the display will show “*DIAGNOSE:VMC===D=*”. On the next vend, the controller will detect a successful or failed vend. If there is a successful vend, the controller will set the mode to the previously selected setting of DROP or HOME. If the vend fails, the sensor mode will be set again to DISABLE.

5.4 TIME AND DATE

This option will allow the operator to set the time and date for the machine.

To enter this menu, press the “#” (Enter) key, then the operator can set the date and time using the numeric keypad. (Note: the current time of day is displayed in 24-hour format.) When the date is set, press “#” (Save) key again to save the date.

After setting time and date, if the operator presses the “*” (Down) key, he/she can set the day of the week from Sunday to Saturday. Press the “#” (Enter) key, then press “*” (Down) key to choose the specific day of the week. Finally, press “#” (Save) key again to save the day of the week.

5.5 MESSAGING

This sub-menu allows the operator to change the information displayed on the programming LCD screen. This menu will allow you to see the cabinet and defrost temperatures for troubleshooting. There are two settings available. The default setting is TIME & DATE; the alternate setting is CABINET TEMPERATURE. Press the “#” (Enter) key, then press “*” (Down) key to choose the MESSAGING mode. Finally, press “#” (Save) key again to save your choice.

At any time, pressing the “C” button will exit the menu.

5.6 LIGHTING

This menu can be ignored. It is not used when a touchscreen is installed. There is an LED light in the drop box but it is automatically by the position of the drop box (push) door so no user settings are required.

5.7 COOLING SET TEST

This sub-menu allows the operator to activate and modify the controller's temperature control capabilities.

1. Setting Cabinet Temperature (CABINET TEMP)

This function allows the user to set the desired cabinet temperature.

Cabinet temperature setting can be done in the "SET/PT" menu. After entering this menu, the display will show "SET/PT +008 C". Press "#" and input the new temperature using the numeric keys. Press "#" to save the temperature. Press the "C" key to exit the menu without saving the new temperature.

2. Setting Defrost Temperature (DEFROST)

This menu allows the user to set a defrost temperature.

After entering this menu, the display will show "Temp 1 -004C". This indicates the defrost cycle will begin at the set temperature minus 4 degrees C. To enter a new Defrost setting, press the "#" (Enter) key and enter the new temperature using the numeric keys. To save the temperature, press "#" (Save). Pressing the "C" (Cancel) key will exit the menu without saving the new Defrost setting.

3. Cooling Sys Test

This is a display menu only. The operator can view the set cabinet temperature, defrost temperature parameters and actual cabinet temperature.

5.8 MACHINE INFO

This function will show Serial VCM (serial number of the Video Machine Controller), Model VCM (model number of the Video Machine Controller), Software (current software version number). Exit this function by pressing the "C" button.

5.9 SERVICE CALL

This menu can be ignored.

5.10 DIAGNOSE

The Diagnostics menu displays the current status of the controller (the vending machine controller or VMC) and the machine's peripherals. Enter this menu by pressing the "#" (Enter) key after the navigating to the menu item labeled "Diagnose" with the "*" (Down) key.

Diagnostics mode checks the machine in the following order: the vending machine controller and the card reader. The display will show in this order: "VMC", "Reader". If no problems are detected with the individual devices, the relevant device name will be followed by "OK". If a problem is detected, the relevant device name will be followed by an error code.

5.11 TROUBLESHOOT ERROR CODES

A definition of all possible error codes is shown in the table below.

Error Code	Error Description
A	Motor Fault
C	No refrigeration control board found.
D	Vend sensor fault or the vend sensor is set to disabled because of 3 continuous failed vends.
E	Selection was not detected by optical sensor and, as such, is considered sold out.
Card Reader: ??	Loss of card reader communications or no card reader. The display would read "READER 8".

6.0 Cleaning

Unplug the machine from the power before any cleaning is carried out.

6.1 OUTSIDE CABINET

Use a soft damp cloth with a mild detergent. Do not use a spray nozzle or water hose to clean the machine. Do not allow water to enter the cabinet.

A specialty eyeglass or computer screen cleaner can be used on the Touch Screen. Avoid using glass cleaners or any harsh chemicals. The Touch Screen has a special coating and fingerprints or oily spots can be removed with a lint-free cloth or screen cleaning wipe without rubbing.

6.2 INSIDE CABINET

Remove all products from trays before cleaning. Wipe cabinet and dispensing trays with a damp cloth at least once every week.


Do not use a damp cloth to wipe any cables or connectors. Use only a DRY cloth for this.

Do not use a perfumed cleaning product as this may taint any snack items.


If any tray or storage drawer requires deep cleaning, remove the tray/drawer from the machine to clean. DO not immerse any tray in water. Do not allow water to touch motors. Ensure that tray is completely dry before re fitting.

6.3 COOLING UNIT


Check the condenser regularly to look if there is dirt or dust.

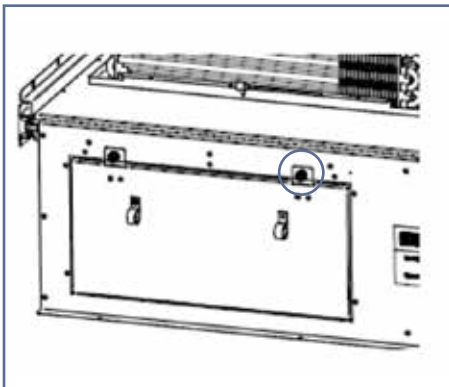

1. Remove the two knurled screws.

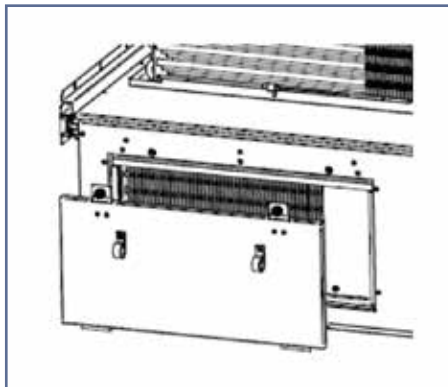

2. Remove the condenser cover plate.

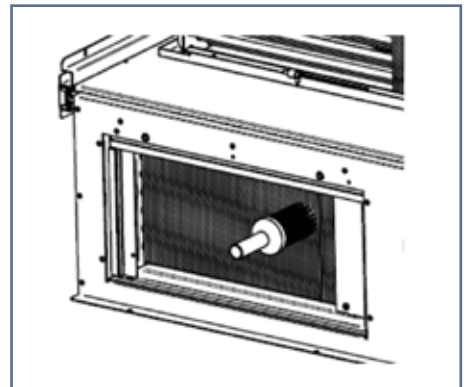

3. Use brush or vacuum cleaner to clean the condenser.

Cooling units using coolant R134a must be repaired by a qualified engineer. Please pay attention to fire prevention while repairing!

7.0 Maintenance

Disconnect the machine from the power before any maintenance is carried out. Only qualified personnel should carry out maintenance tasks.

If the mains cable requires replacing this must be carried out by the machine manufacturers, its agents or a qualified technician.

Any damage to internal wiring must be repaired by a qualified technician.

Do not remove any fixed covers or panels. Any repairs must be carried out only by qualified persons.

8.0 Noise

This machine has a continuously running fan within. It also has an intermittent running refrigeration system. The noise level from this machine under normal working conditions is slight. Any loud or persistence noise or vibration should be reported to the service providers as this could be a symptom of a fault. The noise rating for this machine is 60dB.

9.0 Restrictions of Use

This machine has an IP24 rating and can be used indoors within an ambient temperature range of 0 ~ 35°C.

NOTE: The machine is not designed for outdoor use. This machine is NOT intended for dispensing dairy products, any perishable goods, or any flammable/explosive material. **See section 11.0**

10.0 Important Safeguards

When using or maintaining electrical appliances, basic safety precautions should always be practiced, including the following:

If the supply cord, lights or leads are damaged, these must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The plug must be inserted into the correct grounded outlet.

The appliance is not intended for dispensing the following food:

- Milk, eggs, meat, poultry, shellfish, crustacean, and their products, either raw or heat treated, as well as food of plant origin that is ready for consumption without the need for any further preparation or processing;
- Powdered ingredients are mixed with water or food is required to be stored at correct temperature.
- Any potentially hazardous food such as food with a capability for supporting rapid and progressive growth of pathogenic or toxin producing micro-organisms;
- Food having a pH level of not greater than 4.6 or a water activity (Aw) value not greater than 0.85 at 25°C;

- Food maintained at a temperature not exceeding 5°C for periods specified by the producer, but for not more than 5 days;
- Food maintained at a temperature above 65°C or below -18°C

Food for which the appliance is suitable:

- Shelf stable snacks and beverages;
- Chips, candy, nutritional bars, nuts, and similar confectionery;
- Cookies, crackers and similar bakery products;
- Instant-coffee, chocolate, cocoa and sugar;
- Food in hermetically sealed containers;
- Food that has been processed to prevent spoilage.

This appliance is not suitable for installation in an area where a water jet could be used.

The appliance must be placed in a level, upright position.

Do not clean internal wires using water or damp cloth. Do not pull or push the internal wiring with excessive force during maintenance or cleaning. If internal wiring is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


To open the door to gain access to the maintenance area: The door key should be kept by qualified and trained maintenance person. Before opening the door, switch off the unit and unplug the machine from the outlet. The service area is restricted to persons having knowledge and practical experience in this particular appliance.

The unit is only available for food stored in the temperature of less than 25°C. Before loading the machine, carefully check the food and its packaging and ensure the product is within the “best before date” and the packaging is unopened. If any abnormal situation occurs when machine is on (e.g., abnormal noise, smells or smoke), please cut off the power immediately. If you cannot find out the exact cause, please do not fix by yourself. It must be fixed by qualified person.

11.0 Troubleshooting

Symptom	Possible Cause	Remedy
Goods vended do not match selection chosen.	1. Connection fault between motors and the main control board. 2. The main control board is faulty.	1. Check the connections and adjust cables. 2. Replace the main control board.
Free vend.	1. Detecting sensor. 2. Coin acceptor fault. 3. Main control board fault.	1. Check and repair the wiring connections of the detecting sensor or replace the detecting sensor. Change the sensor mode to "DISABLED". 2. Check and replace the coin acceptor. 3. Replace the main control board.
Multiple products drop in one vend.	1. Detecting sensor fault or loss of connections when the sensor is in "HOME" mode. 2. Incorrectly installed coils. 3. Main control board fault. 4. Motor switch electrical short.	1. Check and repair the connections on the detecting sensor or replace the detecting sensor. Change the sensor mode to "DISABLED". 2. Install the coils in the correct position. 3. Check and repair the main control board. 4. Replace the motor.
The compressor does not start up or stops immediately after start.	1. The machine circuit breaker trips or the fuse break off. 2. Socket disabled. 3. The compressor wire is shorting or abraded. 4. The door switch does not work or is damaged. 5. The temperature is set too high. 6. Refrigeration control board fault. 7. The temperature sensor is faulty or its wire is broken off.	1. Check switch/breaker and wiring and ensure the power supplied to the machine is correct. 2. Check if the socket is up to the required standard. 3. Replace the compressor wires. 4. Close door tightly or check and repair the door switch and its circuit. 5. Reset the temperature. 6. Replace the refrigeration control board. 7. Replace the temperature sensor or check and repair the sensor wire.
The refrigeration shuts off suddenly or periodically but the compressor functions normally	1. The compressor is overloaded, the thermal overload is activated 2. The compressor is overheating. 3. The relay on the refrigeration control board is faulty.	1. Check the connections on compressor. 2. Clean the condenser and ensure 300 mm clearance at back of machine. 3. Check and repair the refrigeration control board.

Symptom	Possible Cause	Remedy
The machine is noisy or shakes.	1. The mounting bolts of the compressor are loose. 2. Friction between the fan and its shroud. 3. The gasket, compressor or fan is worn out.	1. Tighten the bolts. 2. Check and adjust the fan. 3. Check and replace the compressor and fan.
The compressor is continuously running and not cycling.	1. Lack of proper ventilation in the cabinet or condenser is dirty. 2. Refrigerant leak. 3. The temperature sensor is not correctly installed.	1. Check the evaporator fan and the condenser fan and clean the dust in the condenser. 2. Add refrigerant. 3. Re-install the temperature sensor.
The temperature inside the cabinet is high.	1. The compressor has no power. 2. The temperature sensor is in contact with the wall. 3. Set temperature is too high. 4. Refrigeration system fault. 5. Refrigeration board fault.	1. Check the compressor connections. 2. Fix the temperature sensor position. 3. Set the correct temperature. 4. Have a technician inspect the machine. 5. Replace the refrigeration board.
Product is too cold or freezing.	1. Evaporator frozen. 2. Temperature sensor fault. 3. The compressor is not running or functions abnormally. 4. Refrigeration board fault.	1. Check for a failed evaporator fan motor. Check evaporator fan connections. Check the defrost sensor, replace or repair as necessary. Replace the refrigeration board if faulty. 2. Replace the temperature sensor. 3. See Symptom 13, 14, 16. 4. Replace the refrigeration board.
Indicated temperature not correct but the refrigeration system works normally.	1. Temperature sensor fault. 2. Refrigeration board fault. 3. Communication fault between the main board and refrigeration board.	1. Replace the temperature sensor. 2. Replace the refrigeration board. 3. Check the communication cable.
Time and temperature can't be set in programming.	1. Communication fault between the main board and the refrigeration board. 2. Refrigeration board fault.	1. Check the communication cable. 2. Replace the refrigeration board.

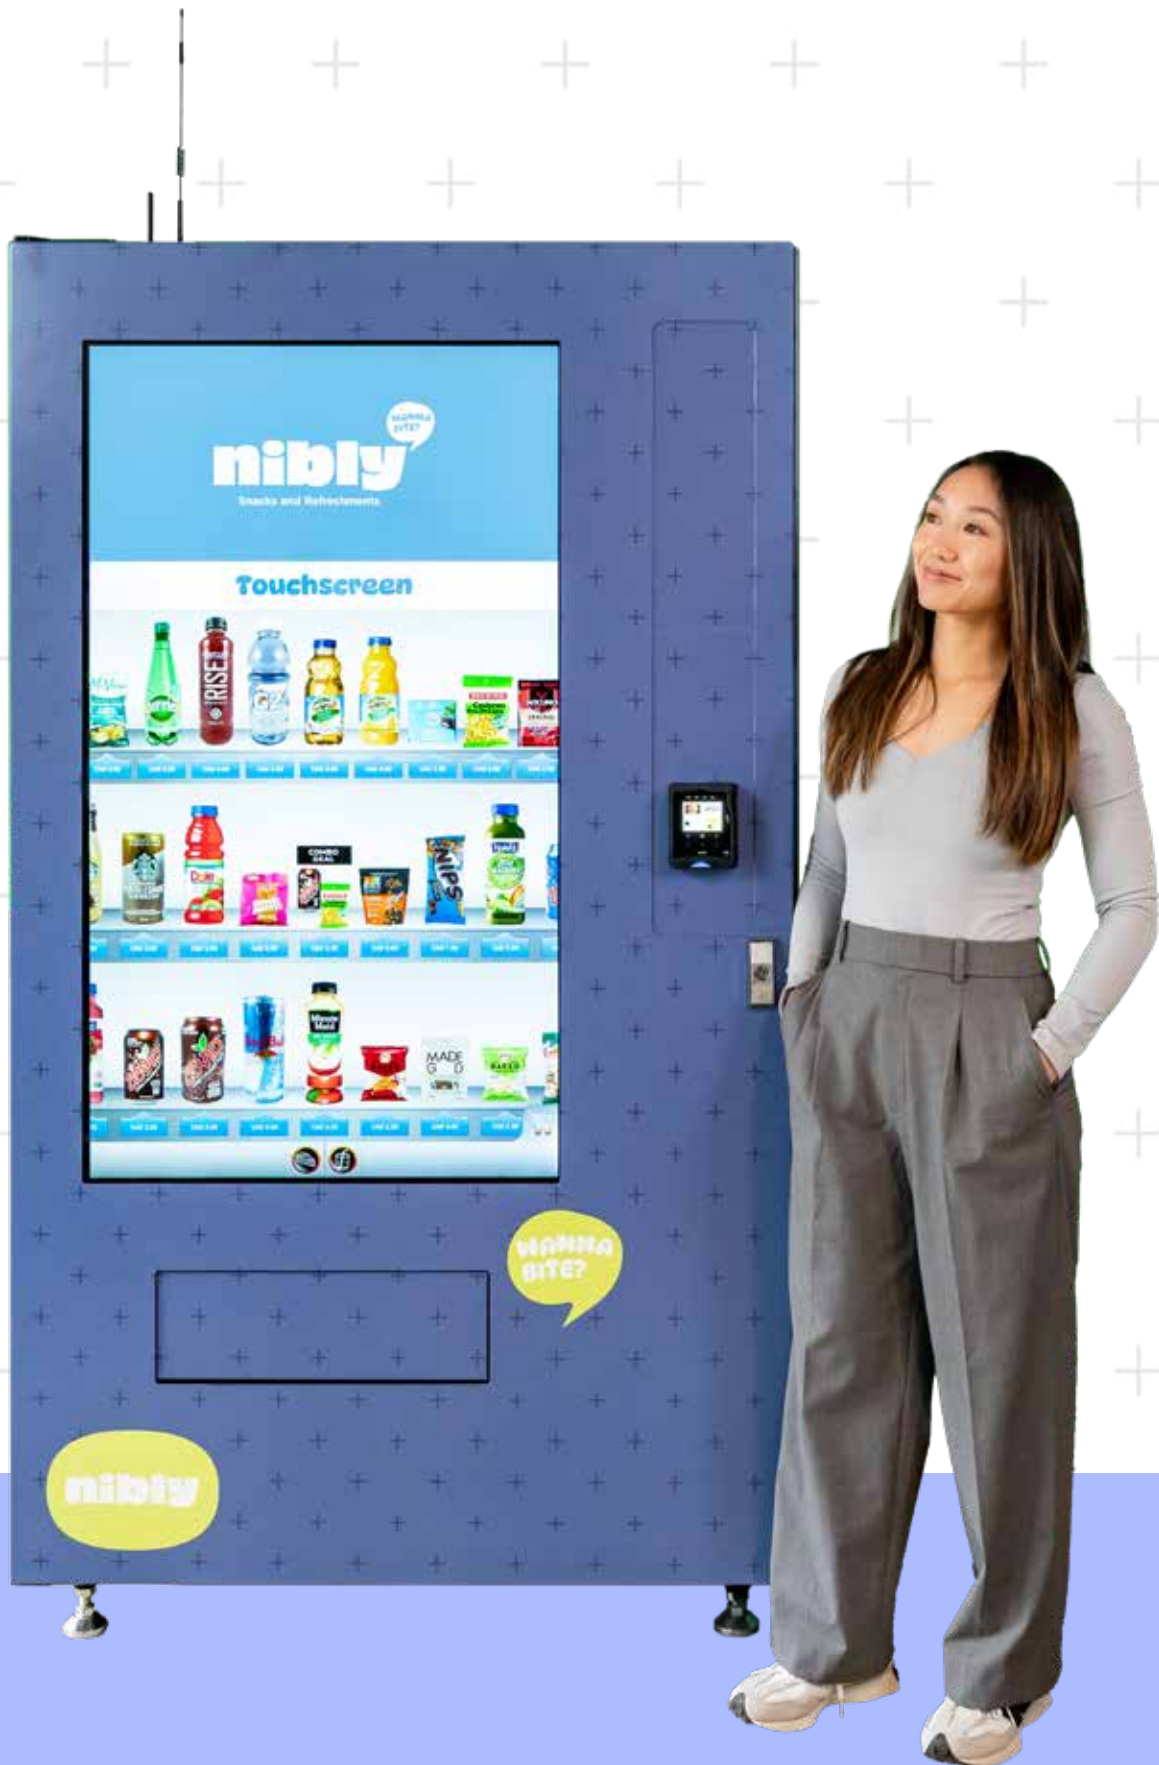

SUPPLIERS

SECTION 5. SUPPLIERS

Premium and healthy vending.

IT'S TIME TO START PLACING PRODUCT ORDERS

Premium healthy vending products have their own wholesale supply chain. Much like our unique niche in healthy vending, our key natural wholesale grocer suppliers have carved out their own spot in the food market - catering to gourmet grocery outlets and now to your vending business.

In this section you will find supplier information and registration/order forms.

Please see the following pages in this section for preferred supplier details.

SECTION 5. SUPPLIERS

Dan-D Pak Foods



Canada West

Dan-D Foods Ltd. Head Office

11760 Machrina Way,
Richmond, BC V7A 4V1 Canada

Tel: 604 274 3263 • **Fax:** 604 274 3268 • **Toll Free:** 1 800 663 4788

Email: info@dan-d-pak.com

Canada East

Dan-D Foods Corp. Toronto

45 Basaltic Drive, Unit #5
Vaughan, ON L4K 1G5 Canada

Tel: 905 889 7807 • **Fax:** 905 889 2684 • **Toll Free:** 1 800 663 4788

E-mail: dandtoronto@dan-d-pak.com

All available product can be seen online at:

<http://www.dan-d-pak.com/catalogues>



Canada

Purity Life Health Products LP

6 Commerce Cres
Acton, Ontario L7J 2X3

Tel: 1-519-853-3511

E-mail: info@puritylife.com

www.puritylife.com

New Account Sign Up: <https://customerlink.puritylife.com/>

SECTION 5. SUPPLIERS

Vending Products of Canada



Vending Products of Canada

Vending Products of Canada is a national wholesaler of snack and beverage products for sale in vending machines. They feature a line of healthy products.

Vancouver

4275A Phillips Avenue, Burnaby British Columbia. V5A 2X4

Tel: 604-415-5444 • **Fax:** 604-415-5414 • **Toll Free:** 1-877-415-5444

Email: bcinquiries@vendproductscan.com

Calgary

3109-16th Street N.E., Calgary, Alberta. T2E 7KE

Tel: 403-248-7927 • **Fax:** 403-248-7935 • **Toll Free:** 1-866-692-1102

Email: abinquiries@vendproductscan.com

Toronto

Unit 1, 108 Woodbine Downs Blvd, Toronto, Ontario. M9W 5S6

Tel: 416-213-VEND (8363) • **Fax:** 416-213-0616 • **Toll Free:** 1-87-462-1334

Email: oninquiries@vendproductscan.com

Montreal

8089 Trans Canada Highway, Saint Laurent, Quebec. H4S 1S4

Tel: 514-832-0440 • **Fax:** 514-832-0462 • **Toll Free:** 1-888-832-0440

Email: qcinqquiries@vendproductscan.com

Dartmouth

5-130 John Savage Avenue, Dartmouth, Nova Scotia. B3B 0C9

Tel: 902-481-3669 • **Fax:** 902-481-7255 • **Toll Free:** 1-855-481-3669

Email: nsinqquiries@vendproductscan.com

Phone in or email your orders to the nearest branch above.

A complete line of products can be seen online at:

<https://www.vendproductscan.com>

SECTION 5. ADDITIONAL WHOLESALE SUPPLIERS

Costco Wholesale & Canadian Wholesale Club



Costco is a great source for natural, healthy products at great wholesale pricing. Costco does tremendous volume and passes their massive discounts on to their members. You will find attractive pricing on many items at Costco, including bars, drinks and snack items.

To find the nearest Costco Wholesale warehouse to you go to:

www.costco.ca/warehouse/locator.aspx



Like Costco, the Canadian Wholesale Club is a good source for many healthy snack items. The Canadian Wholesale Club is operated by the giant grocer Loblaws and does not require membership. Many great products are available at good prices.

To find the nearest Canadian Wholesale Club warehouse go to:

www.wholesaleclub.ca



NEW CUSTOMER FORM

If you are a new customer, suppliers require the following information to get your account set up.
Please print and fill out each form to scan back and send to each supplier.

Location: _____

Type of Business: _____

Customer ID: _____

Company Name: _____

Address: _____

Phone: _____

Fax: _____

Email Address: _____

Contact: _____

Shipping Address: _____

How did you find out about us? _____

Prepared by: _____

Approved by: _____



CREDIT CARD AUTHORIZATION

If you are a new customer, suppliers require the following credit card information to get your account set up. Please print and fill out the below form to scan and send back to each supplier.

Customer #: _____

Phone Number: _____

Company Name: _____

Name on Card: _____

Card #: _____

Expiry Date: _____


CVC (3 digits on back) (Visa, MC): _____

CVD (4 digits on back) (Amex): _____

Billing Address

(where credit card statement is sent): _____

Email Address: _____

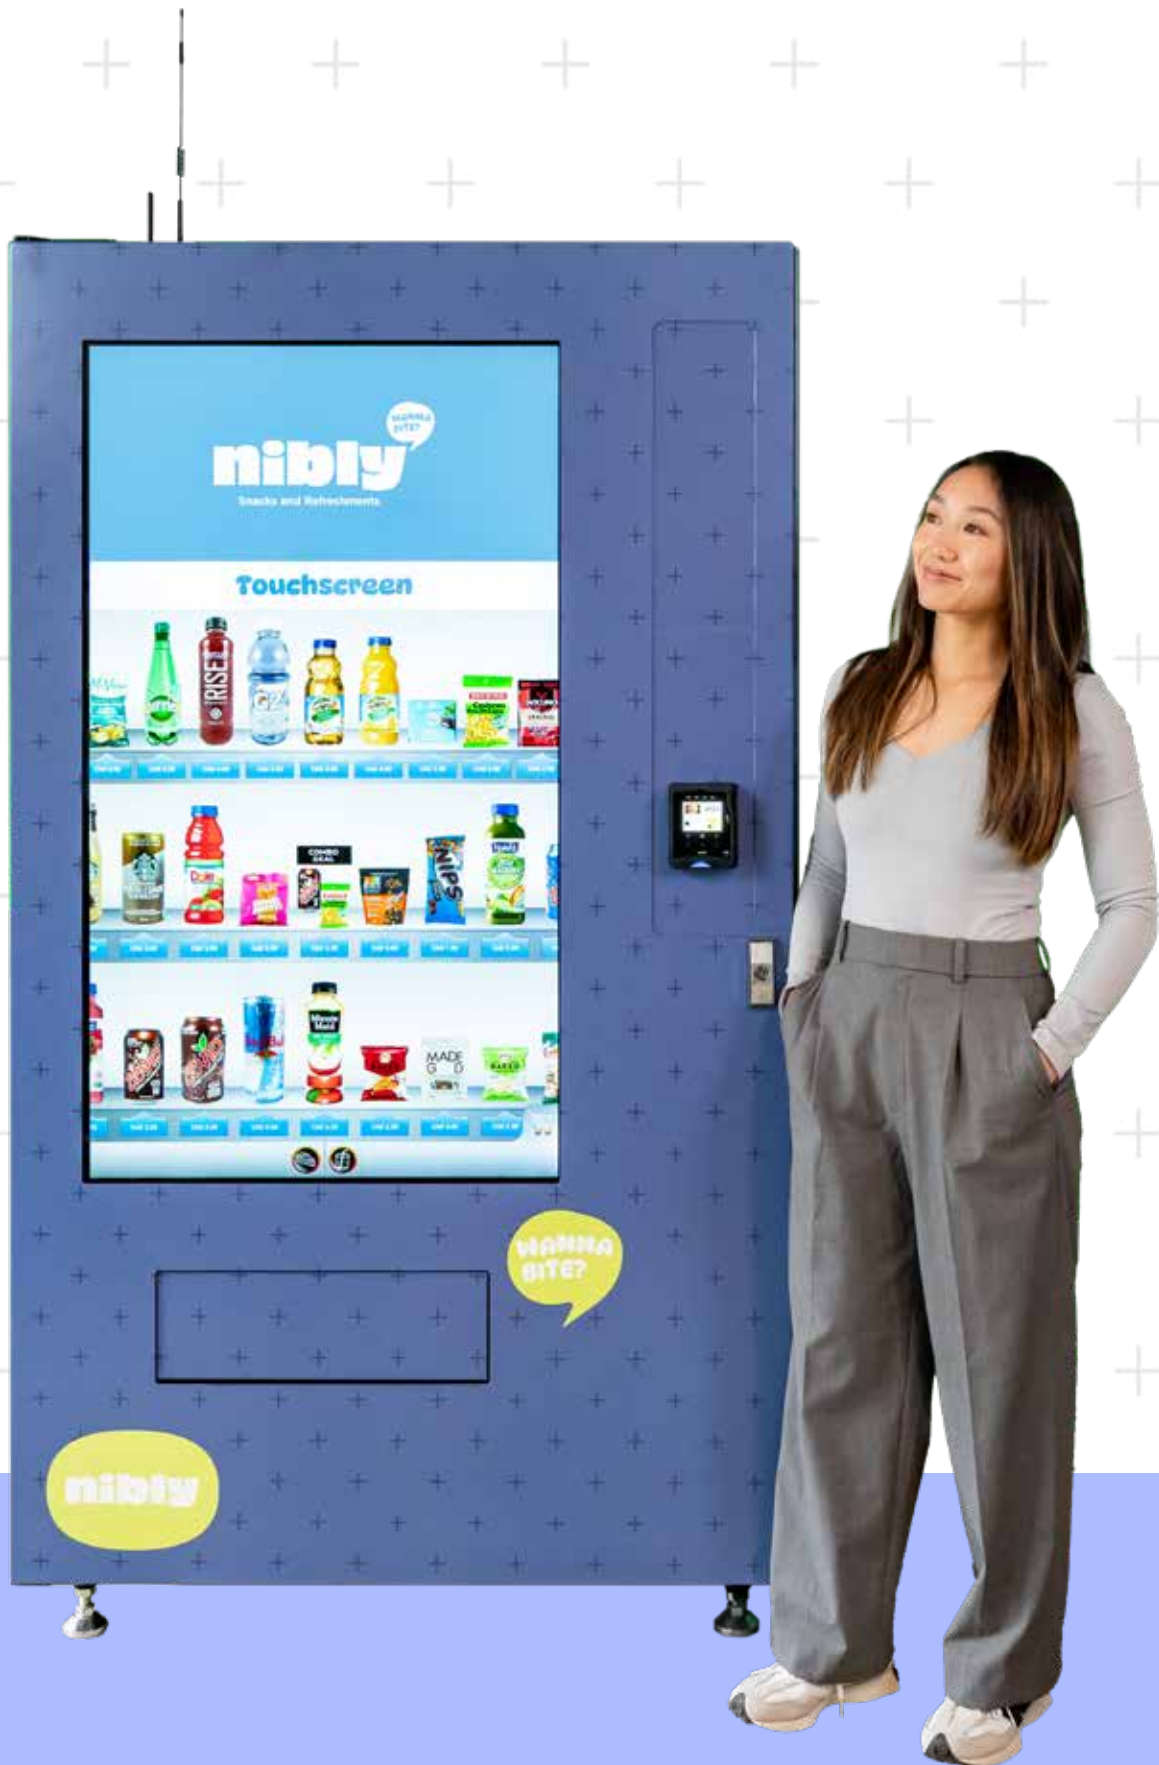

START UP GRIDS

Startup Base Menu

MODEL: GN4500







B Medium Bags

C Bars, Slim Bags

D Chilled Bottles

E Chilled Cans, Tetra Packs, Small Bottles

F Chilled Cans, Tetra Packs, Small Bottles

5 pcs/coil 10	5 pcs/coil 11	8 pcs/coil 12	5 pcs/coil 13	5 pcs/coil 14					
									
8 pcs/coil 20	8 pcs/coil 21	8 pcs/coil 22	8 pcs/coil 23	9 pcs/coil 24					
									
9 pcs/coil 30	8 pcs 31	8 pcs 32	8 pcs 33	8 pcs 34	9 pcs 35	9 pcs 36	9 pcs 37		
									
4 pcs 40	4 pcs 41	4 pcs 42	4 pcs 43	4 pcs 44	4 pcs 45	4 pcs 46	4 pcs 47	4 pcs 48	
									
4 pcs 50	4 pcs 51	4 pcs 52	4 pcs 53	4 pcs 54	4 pcs 55	4 pcs 56	4 pcs 57	4 pcs 58	
									
4 pcs 60	4 pcs 61	4 pcs 62	4 pcs 63	4 pcs 64	4 pcs 65	4 pcs 66	4 pcs 67	4 pcs 68	
									

Pieces needed per coil
is noted on each coil #

- Stacy's Pita Chips
- Covered Bridge Kettle Chips
- Farm to Table Popcorn
- Sun Chips Harvest Cheddar

- Dan-D-Pak Chocolate Almonds
- Dan-D-Pak Philippine Mango
- Brookside Acai Blueberry
- Dan-D-Pak Mountain Trail Mix

- Corn Nuts, Assorted Flavours
- Clif Bars, Assorted Flavours
- The Simply Bar
- Kind Bar
- Jack Links Beef Jerky

- Sparkling Ice
- Vitamin Water Zero
- Fiji Water
- Pure Leaf Green Tea
- Gatorade
- Snapple Lemonade
- Prime Energy Drink
- Monster Energy Drink

- V8 Vegetable Juice
- Minute Maid Apple Juice
- Dole Orange Juice
- Zevia
- San Pellegrino
- Grace Coconut Water

- Perrier
- San Pellegrino
- Oasis Cranberry Apple
- Red Bull
- Red Bull Sugarfree
- Two Bears Flash Brew Coffee
- Heineken Alcohol Free
- Remedy Kombucha

SECTION 6. HEALTHY MENU GRIDS

Startup Menu Products, GN4500

A Section – Large Bags

5 pcs/coil 10	5 pcs/coil 11	8 pcs/coil 12	5 pcs/coil 13	5 pcs/coil 14

PRODUCT		POPULAR FLAVOURS	AVAILABLE AT
	Stacy's Pita Chips	Simply Naked, 39g Garlic & Herb, 39g	Vending Products of Canada
	Covered Bridge Kettle Chips	Salt & Vinegar, 36g Smokin' Sweet BBQ, 36g	Vending Products of Canada
	Farm to Table Popcorn	Butter Salt, 23g	Vending Products of Canada
	Sun Chips	Harvest Cheddar, 40g	Costco Wholesale

B Section – Medium Bags

8 pcs/coil 20	8 pcs/coil 21	8 pcs/coil 22	8 pcs/coil 23	9 pcs/coil 24

PRODUCT		POPULAR FLAVOURS	AVAILABLE AT
	Dan-D-Pak	Chocolate Almonds, 170g	Dan-D-Pak
	Dan-D-Pak	Dried Mango, 80g	Dan-D-Pak
	Brookside	Acai Blueberry Chocolate, 90g	Vending Products of Canada
	Dan-D-Pak	Sierra Mountain Mix, 170g	Dan-D-Pak

SECTION 6. HEALTHY MENU GRIDS

Startup Menu Products, GN4500

C Section – Bars, Slim Bags

9 pcs/coil	8 pcs	8 pcs	8 pcs	8 pcs	9 pcs	9 pcs	9 pcs
30	31	32	33	34	35	36	37

PRODUCT		POPULAR FLAVOURS	AVAILABLE AT
	Jack Links	Original Beef Jerky, 35g	Vending Products of Canada
	Clif Bars	White Chocolate Macadamia, 68g Coconut Chocolate Chip, 68g Cool Mint Chocolate, 68g	Vending Products of Canada
	Corn Nuts	BBQ Corn Nuts, 48g Original Corn Nuts, 48g	Vending Products of Canada
	Simply Protein Bar	Variety Pack	Costco Wholesale
	Kind Bar	Almond Chocolate, 40g Dark Chocolate, 40g Peanut Butter Dark, 40g	Costco Wholesale

SECTION 6. HEALTHY MENU GRIDS

Startup Menu Products, GN4500

D Section – Chilled Bottles

4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs
40	41	42	43	44	45	46	47	48	

PRODUCT		POPULAR FLAVOURS	AVAILABLE AT
	Snapple	Lemonade, 473ml	Costco Wholesale
	Sparkling Ice	Variety Pack, 503ml	Costco Wholesale
	Gatorade	Lemon Lime, 591ml	Vending Products of Canada
	Fiji Water	330ml	Costco Wholesale
	Pure Leaf Green Tea	Green Tea, 547ml	Canadian Wholesale Club
	Vitamin Water	Essential, Orange, 591ml	Canadian Wholesale Club
	Prime Hydration Drink	Tropical Punch, 500ml	Canadian Wholesale Club
	Monster Energy Drink	Regular, 491ml Sugarfree, 491ml	Canadian Wholesale Club

SECTION 6. HEALTHY MENU GRIDS

Startup Menu Products, GN4500

E Section – Chilled Cans, TetraPak

4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs
50	51	52	53	54	55	56	57	58	

PRODUCT		POPULAR FLAVOURS	AVAILABLE AT
	V8 Vegetable Juice	Original, 354ml Bottle	Vending Products of Canada
	Minute Maid	Apple Juice, 341	Vending Products of Canada
	Dole	100% OJ, 430ml Strawberry Kiwi , 430ml	Vending Products of Canada
	Zevia	Ginger Ale, 355ml Vanilla Cola, 355ml Creamy Root Beer, 355ml	Costco Wholesale
	San Pellegrino	Arranciata, 330ml	Costco Wholesale
	Grace Coconut Water	Coconut Water, 500ml	Costco Wholesale


SECTION 6. HEALTHY MENU GRIDS

Startup Menu Products, GN8000

F Section – Chilled Cans, TetraPak

4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs	4 pcs
60	61	62	63	64	65	66	67	68	

PRODUCT		POPULAR FLAVOURS	AVAILABLE AT
	Perrier	Spring Water, Variety, Slim Can, 250ml	Vending Products of Canada
	San Pellegrino	Limonata, 330ml	Costco Wholesale
	Oasis	Cranberry Apple, 300ml	Vending Products of Canada
	Red Bull	Energy Drink, 250ml, Sugar Free Energy Drink, 250ml	Vending Products of Canada
	Two Bears	Flash Brew Coffee, Unsweetened, 250ml	Costco Wholesale
	Remedy Kombucha	Raspberry Lemonade, 355ml	Canadian Wholesale Club
	Heineken	0% Alcohol-free Beer, 330ml	Costco Wholesale

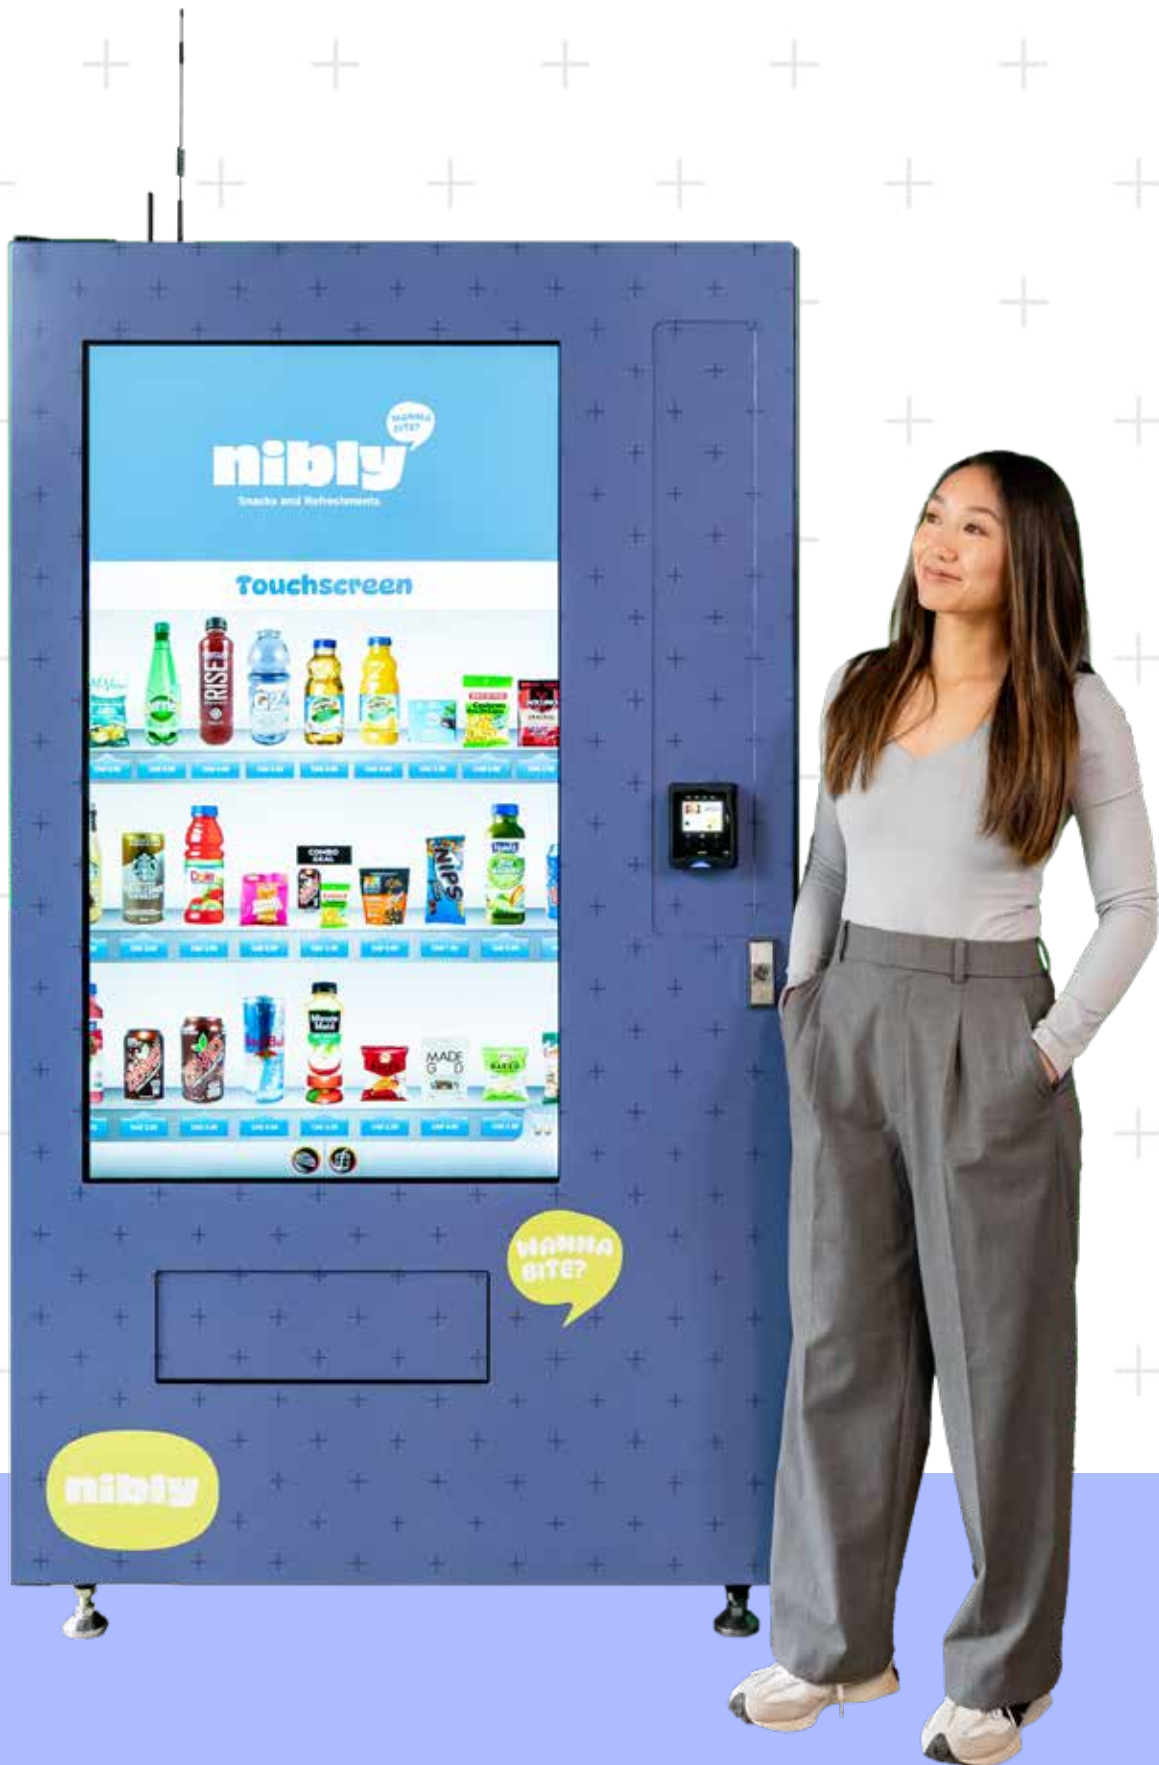

UNPACKING

SECTION 7. REMOVING NIBLY SNACKS MACHINE

Unpacking Instructions

YOUR NIBLY SNACKS VENDING MACHINE IS FITTED WITH SPECIAL PALLETS AT OUR SHIPPING WAREHOUSE.

These pallets protect the machine from accidental damage that might occur during freight shipment.

TOOLS REQUIRED:

- Screwdriver with Phillips head. A drill or electric screwdriver is recommended
- Hammer or pry bar
- Utility knife or scissors to cut ties
- Gloves

PLEASE NOTE: The machines are heavy and this procedure requires 3 people to do safely. If you have any doubt about your ability to do this safely **STOP** and hire a professional insured mover.

REMOVING NIBLY SNACKS MACHINE FROM THE SPECIAL PALLET

Your Nibly Snacks machine can be stored on its pallet until they are ready to be located. Many operators choose to leave their machines on the pallets until they are delivered to their locations where the pallets can be removed outside of the location or at their final destination. The machines will be easier to move on the pallet because it was built to accommodate a full size pallet jack (pump jack).



STEP 1. Remove the screws that secure the front panel of the pallet to the frame. We recommend using an electric screwdriver or drill with a Phillips bit.



Remove the 4 screws from the front panel.

SECTION 7. REMOVING NIBLY SNACKS MACHINE

Unpacking Instructions

REMOVING NIBLY SNACKS MACHINE FROM THE SPECIAL PALLET, CONTINUED.

STEP 2. Remove the screws that secure the 2 x 2 hold-down dowels. These keep the feet securely mounted to the pallet. There are two screws on each side of the pallet holding the dowels in place. Remove front panel.



Remove the screws for the hold-down dowels.



Pallet with front panel removed.

STEP 3. Unscrew the corner blocks on both sides of the open side of the pallet. There are two screws on each side.



Unscrew the corner blocks .

SECTION 7. REMOVING NIBLY SNACKS MACHINE

Unpacking Instructions

REMOVING NIBLY SNACKS MACHINE FROM THE SPECIAL PALLET, CONTINUED.

STEP 4. Note: You only need to remove your machine from the pallet when it has reached the location where it will be in operation. You can install your Nayax devices and perform other setup procedures with the front panel of the machine removed but the machine still sitting on the pallet at your staging location before moving the machine to the location.

To remove the machine from the pallet: slide the machine along the 2 x 6 boards toward the front of the pallet and then place two front feet of the machine on the floor. Tilt the machine forward and pull the pallet out from behind. Make sure the machine is secured from the front. With the weight of the machine on the front two feet, the pallet is easily removed.



Secure the machine from the front. Remove pallet.



Machine on pallet.

SECTION 7. REMOVING NIBLY SNACKS MACHINE

Unpacking Instructions

REMOVING NIBLY SNACKS MACHINE FROM THE SPECIAL PALLET, CONTINUED.



Cut tie-down straps.

STEP 5. Remove the cardboard cover by cutting the nylon straps and then the plastic inner covering will slide up and off the machine.



OPENING THE MACHINE DOOR AND REMOVE PARTS

STEP 6. Once you have removed the machine from the pallet and removed all external packaging, you will want to open the door of the machine and remove the air diverter. The key for your machine will be in the zip-locked bag located in the drop box behind the “Push” door. The trays have been secured by a transport tray lock, preventing the trays from sliding forward when the machine is tilted. See the Quickstart Guide in the Nibly Snacks Operations manual for instructions on installing the air diverter and removing the tray transport lock.