
Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

Flash a Gotek with a USB A to USB A cable



Most of the Goteks can be Flashed with a USB A to USB A cable.

There are currently 2 differents MCU brands used in the Goteks and there are some update procedure changes between these MCUs.

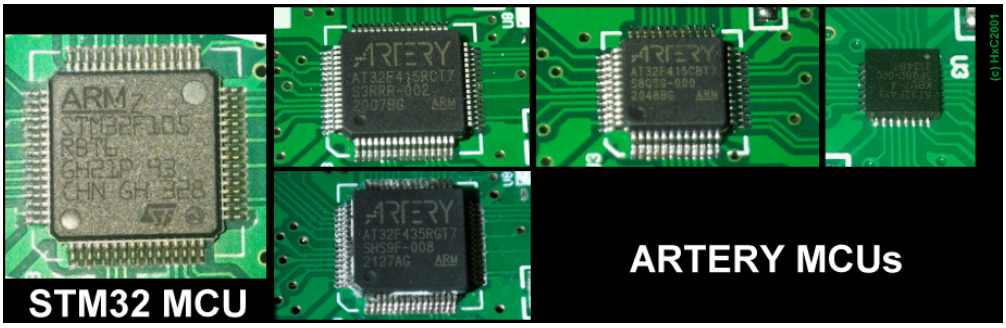


- You have a STM32 Gotek - click here…
- You have an ARTERY Gotek - click here…

STM32 Gotek USB A to USB A cable firmware installation

STM32 Gotek jumper block

On STM32 Goteks you need to connect together the pins 1 and 2 (BOOT0) and the pins 3 and 7 (VBUS). You can use jumpers or wires to do this. Soldering them is not necessary.

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

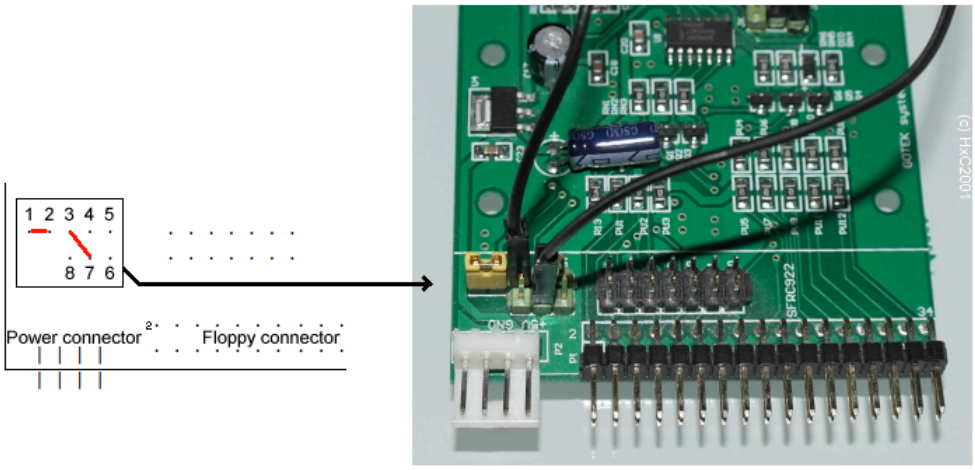


If your Gotek is using a STM32 MCU you will need :

- A Gotek drive.
- A USB A to USB A cable.
- The DfuSe software from ST Microelectronics
- 1 Jumper lead and one wire to connect pins on the Gotek.


STM32 Gotek DfuSe USB update software

Download and install the ST DfuSe USB device firmware upgrade from ST Microelectronics :


- Download : https://www.st.com/en/development-tools/stsw-stm32080.html
- Alternate Download : link:../../../download/floppy_drive_emulator/en.stsw-stm32080.zip

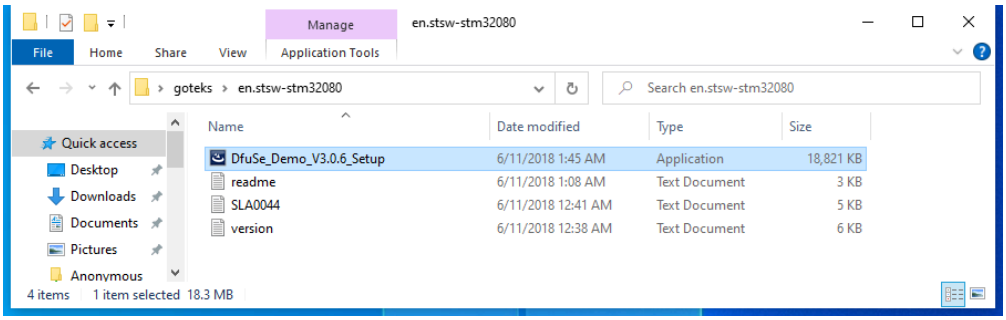

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

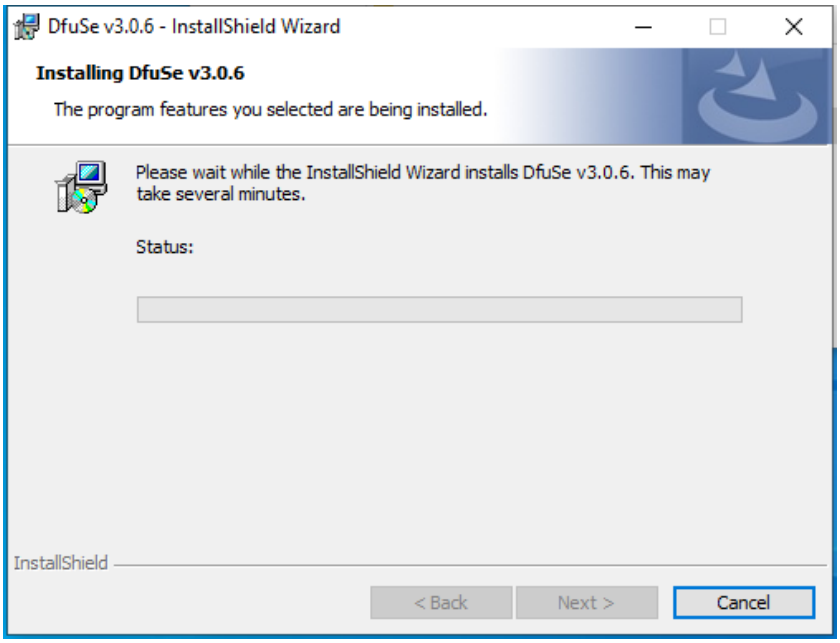

Note For some reasons you may need to install the driver manually. It can be found in the "C:\Program Files (x86)\STMicroelectronics\Software\DfuSe v3.0.6\Bin\Driver\Win10" folder.

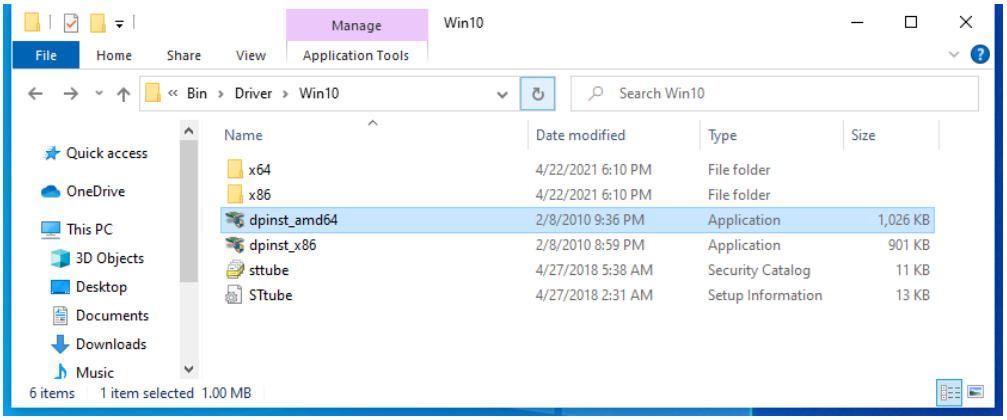


Update procedure

- Strap the BOOT0 signal and the VBUS signal as shown on the above picture.
- Connect the Gotek to your PC with the USB A USB A cable. (No other physical connection needed !)

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact




- The PC should detect the Gotek. Once done you should see a "STM Device in DFU mode" device in the device manager.
- Start the "DFuseDemo" software from the start menu. In the devices dropdown you should find "STM device in DFU mode".

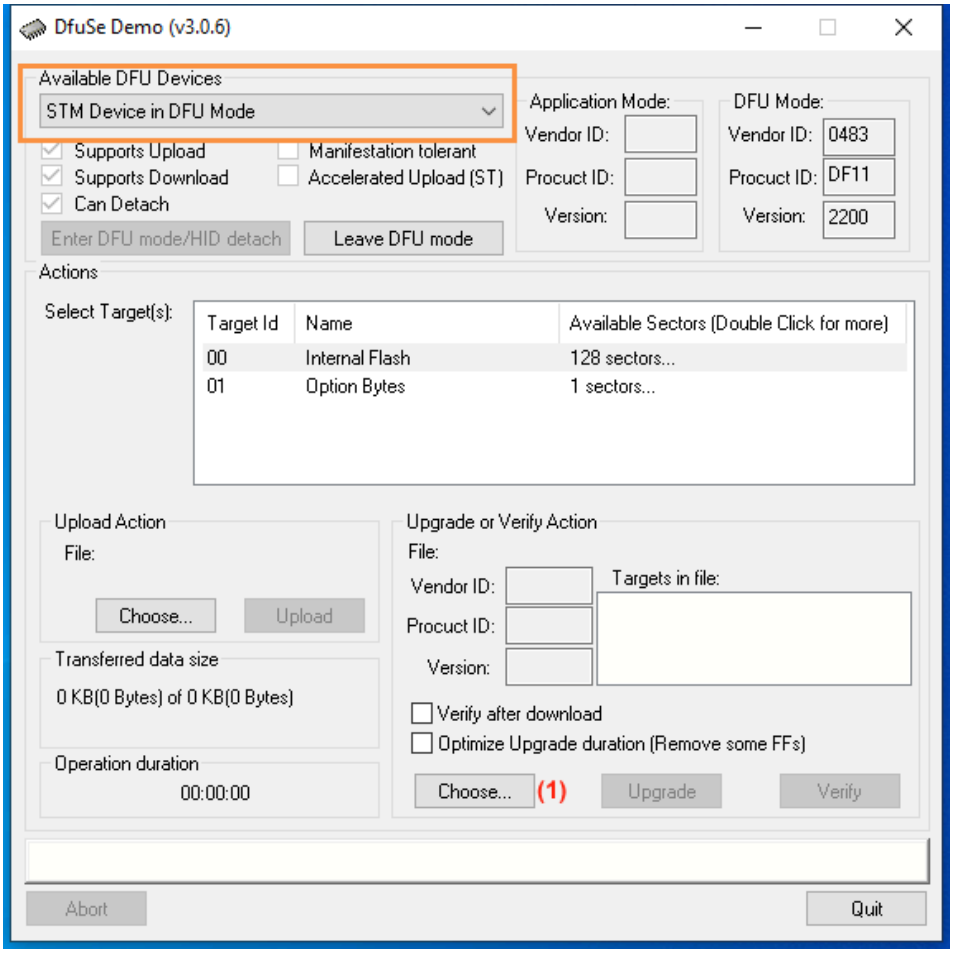


Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

- Press "Choose" (1) in the Upgrade/Verify Action box and choose the provided **hxc_fw_installer.dfu** file.
- Click on "Upgrade" (2)

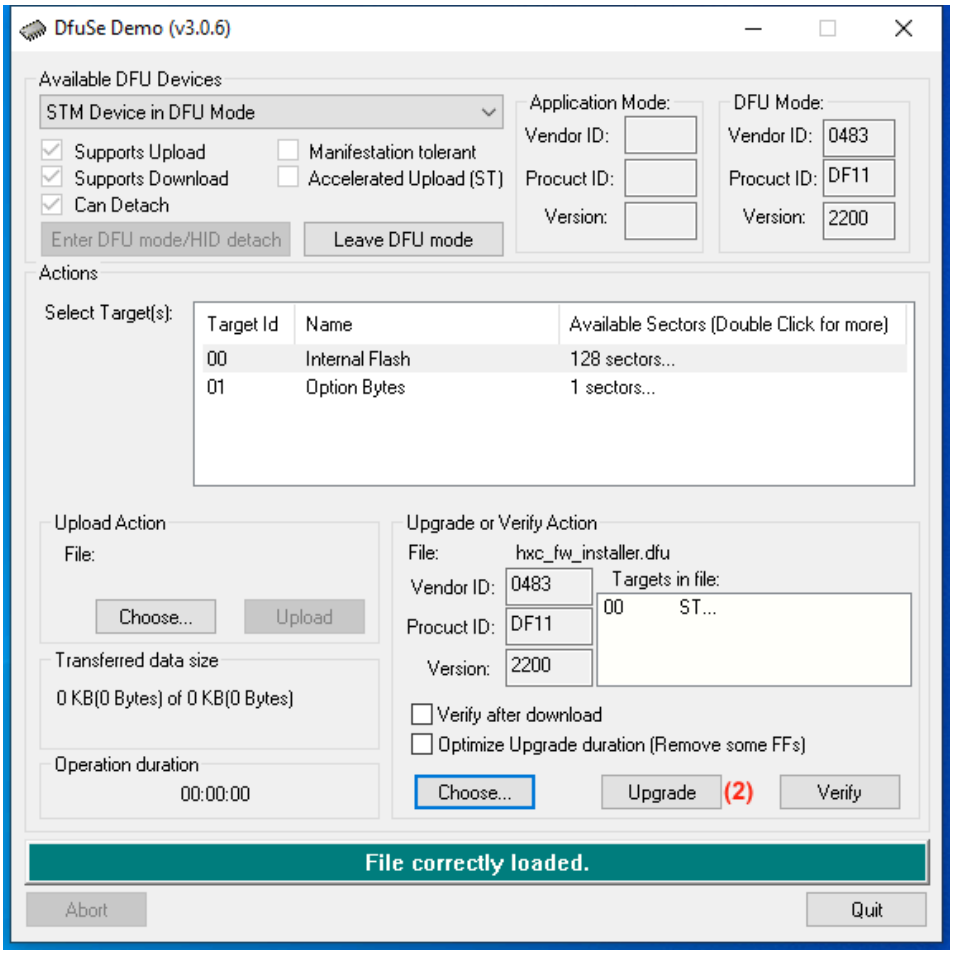


- If the read protection related question is asked, press "Yes" (3)

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

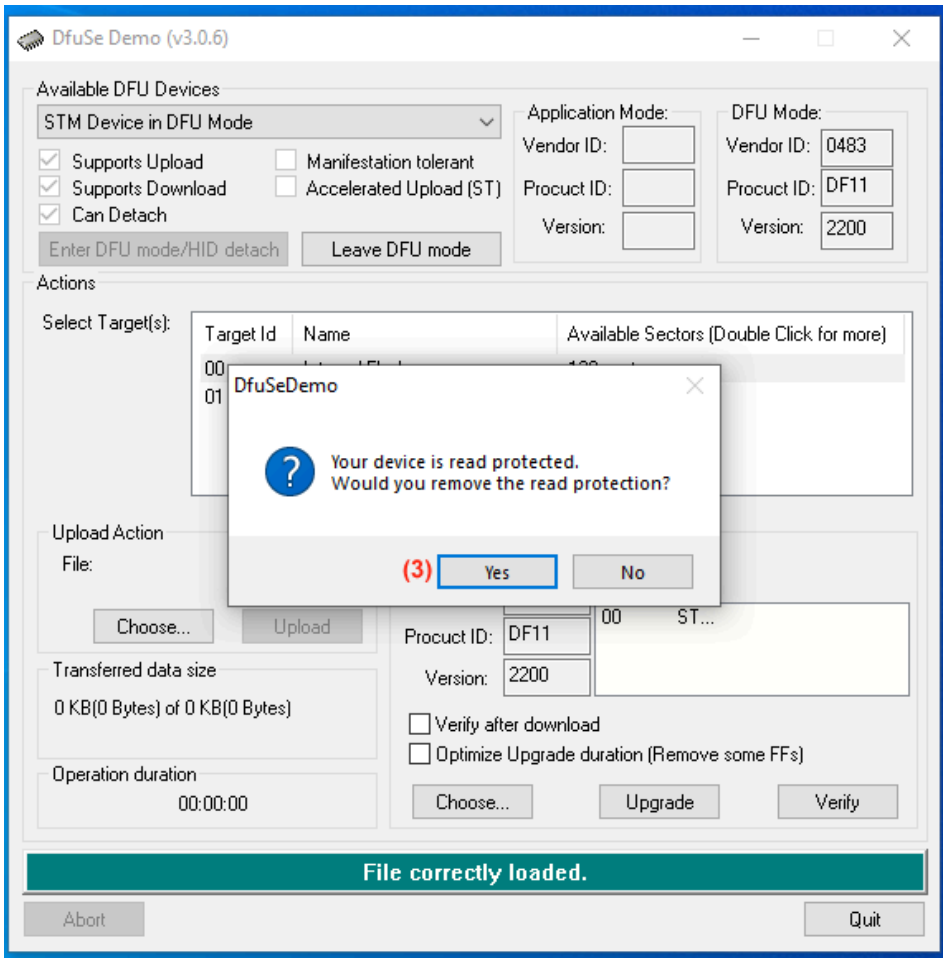


- If the identification related question is asked, press "Yes" (4)

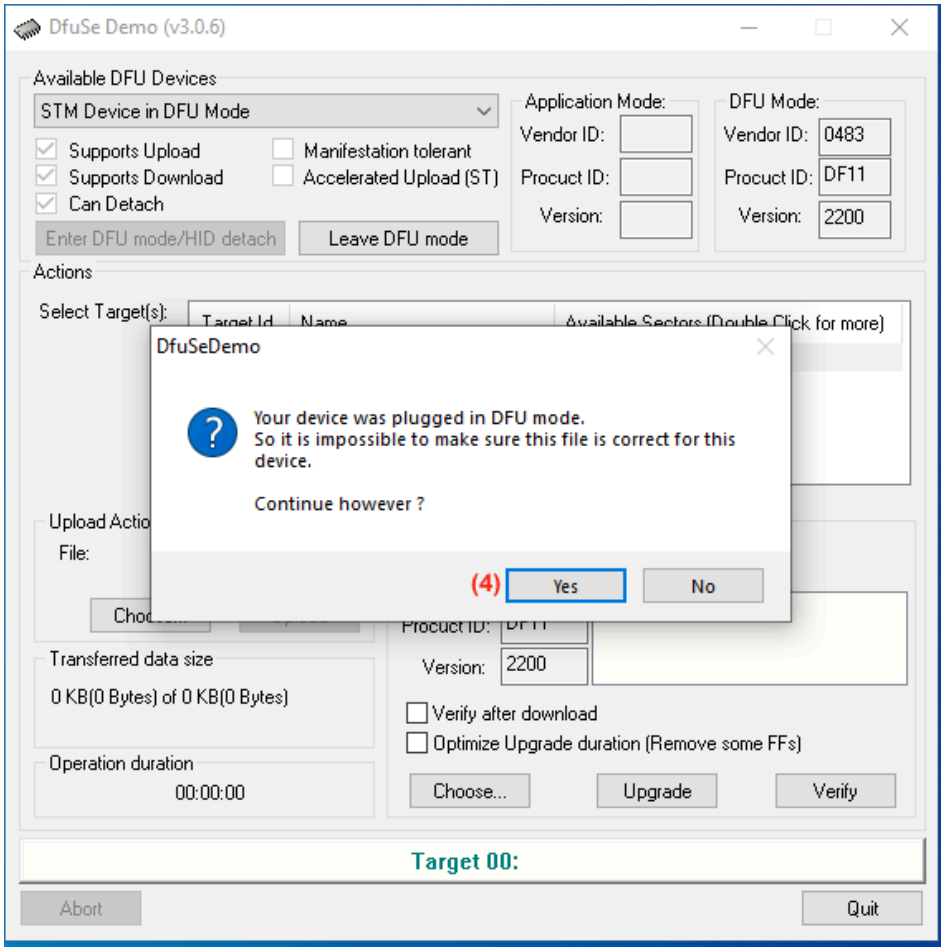


- After this the Gotek will be reprogrammed.

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

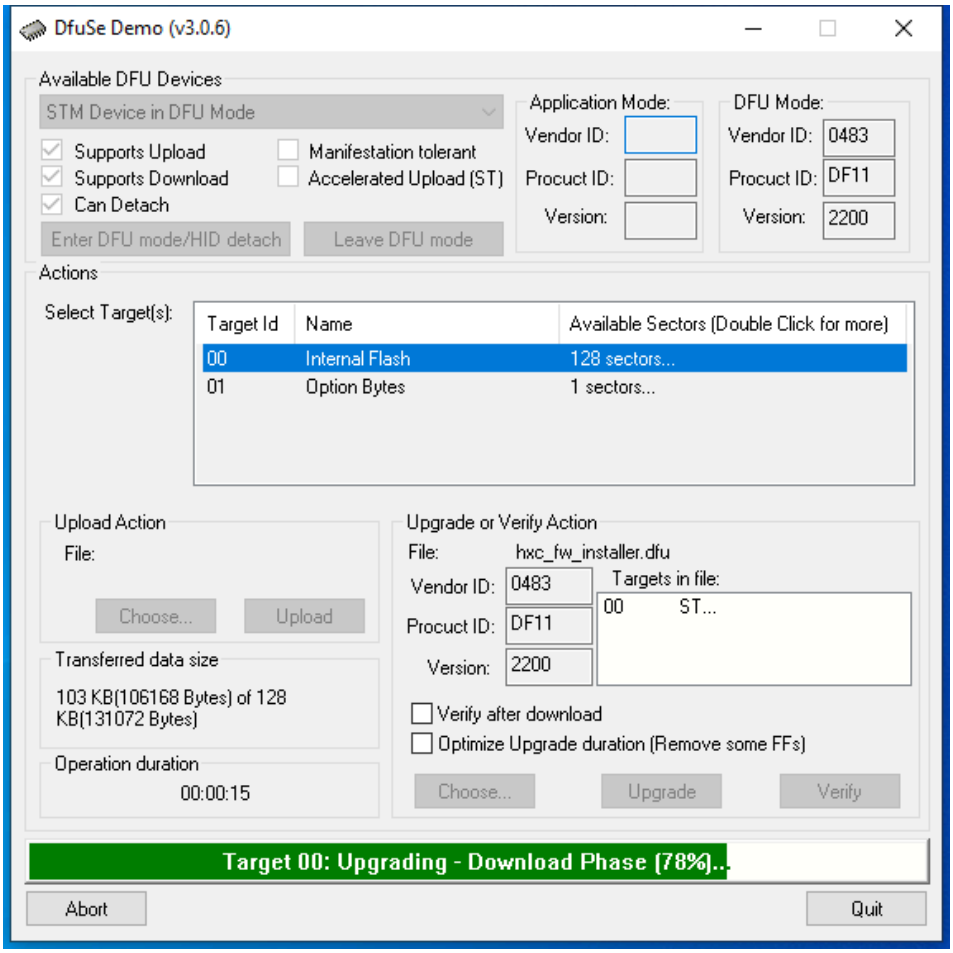

- Once done disconnect the gotek and remove the jumpers/straps/wires.

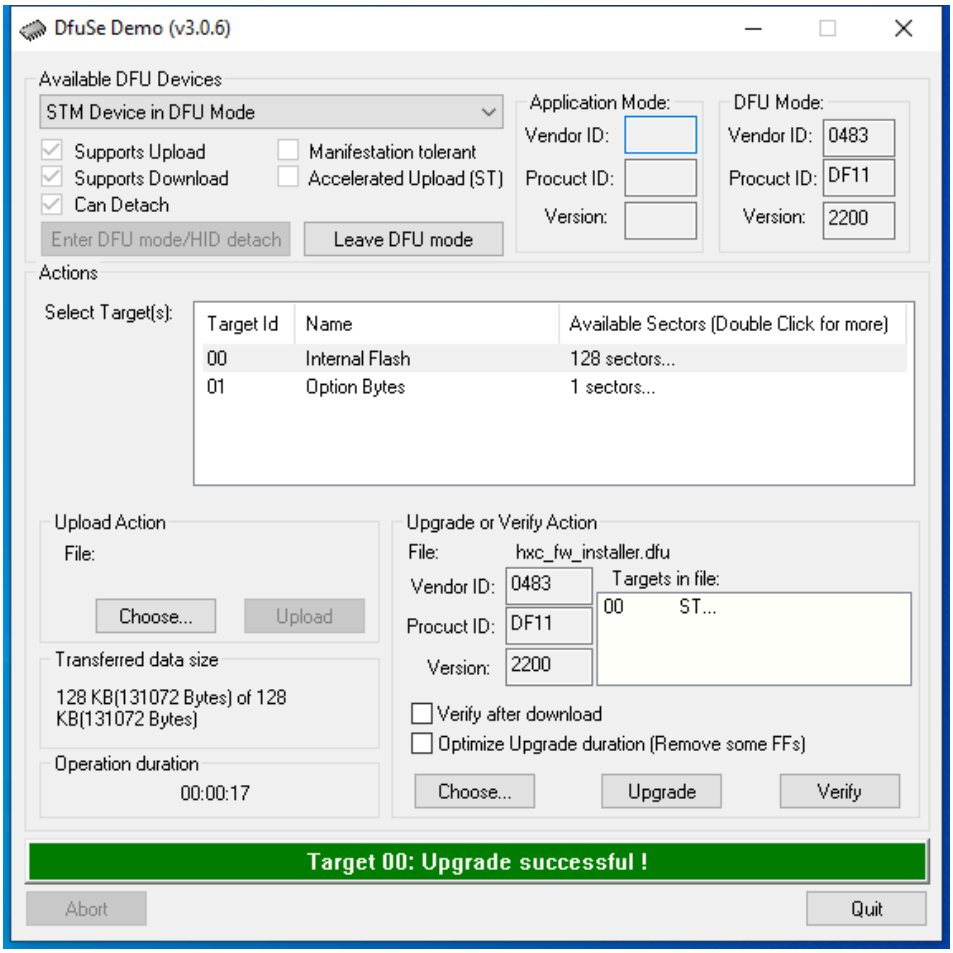


Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

- At this point you can disconnect the wires and remove the straps. Follow up the next steps provided in the email to validate the HxC firmware installation.

ARTERY Gotek USB A to USB A cable firmware installation

ARTERY Gotek jumper block

On ARTERY Goteks you need to connect together the pins 1 and 2 to strap the BOOT0 signal. You can use a jumper or a wire to do this. Soldering them is not necessary.

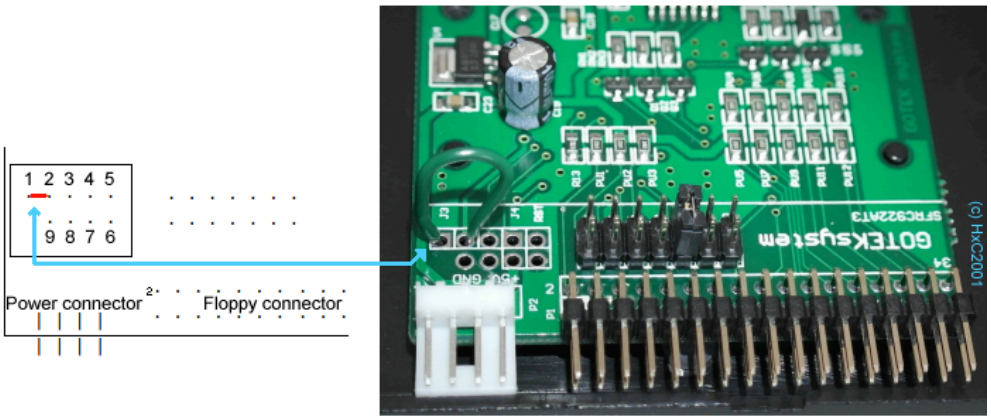


If your Gotek is using an ARTERY MCU you will need :

- A Gotek drive.
- A USB A to USB A cable.
- The DfuSe software from ARTERY
- 1 Jumper or a wire to strap the BOOT0 pin on the Gotek.

ARTERY Gotek ISP Programmer software

Download the ARTERY ISP Programmer software from ARTERY :


- Download : https://www.arterychip.com/download/TOOL/Artery_ISP_Programmer_V2.0.05.zip
- Alternate Download : Artery_ISP_Programmer_V2.0.05.zip
- Unpack the Artery_ISP_Programmer_V2.0.05.zip file.

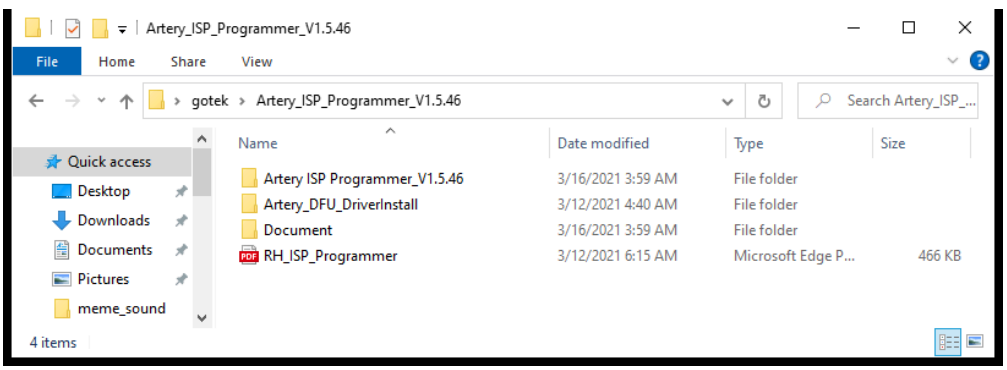



Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes

Search
partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

- Install the ARTERY driver by running the Artery_DFU_DriverInstall.exe file.

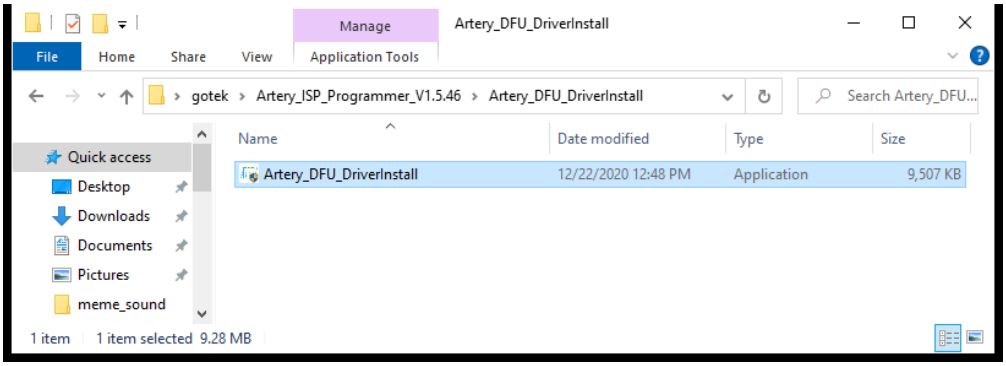

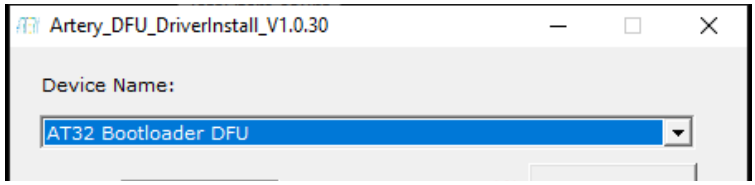

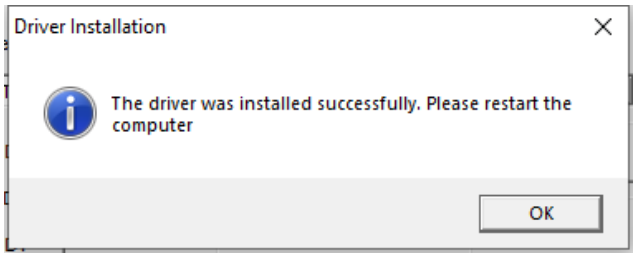

Note The computer restart doesn't seem to be necessary under Windows 10.

Update procedure


- Strap the BOOT0 signal as shown on the above picture.
- Connect the Gotek to your PC with the USB A USB A cable. (No other physical connection needed !)

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact




- The PC should then detect the Gotek. Once done you should see the device in the device manager.
- Start the "ArteryISPProgrammer.exe" software.
- Select the "USB DFU" port type (1). You see the Gotek in the list, Select it, Press "Next" (2).

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

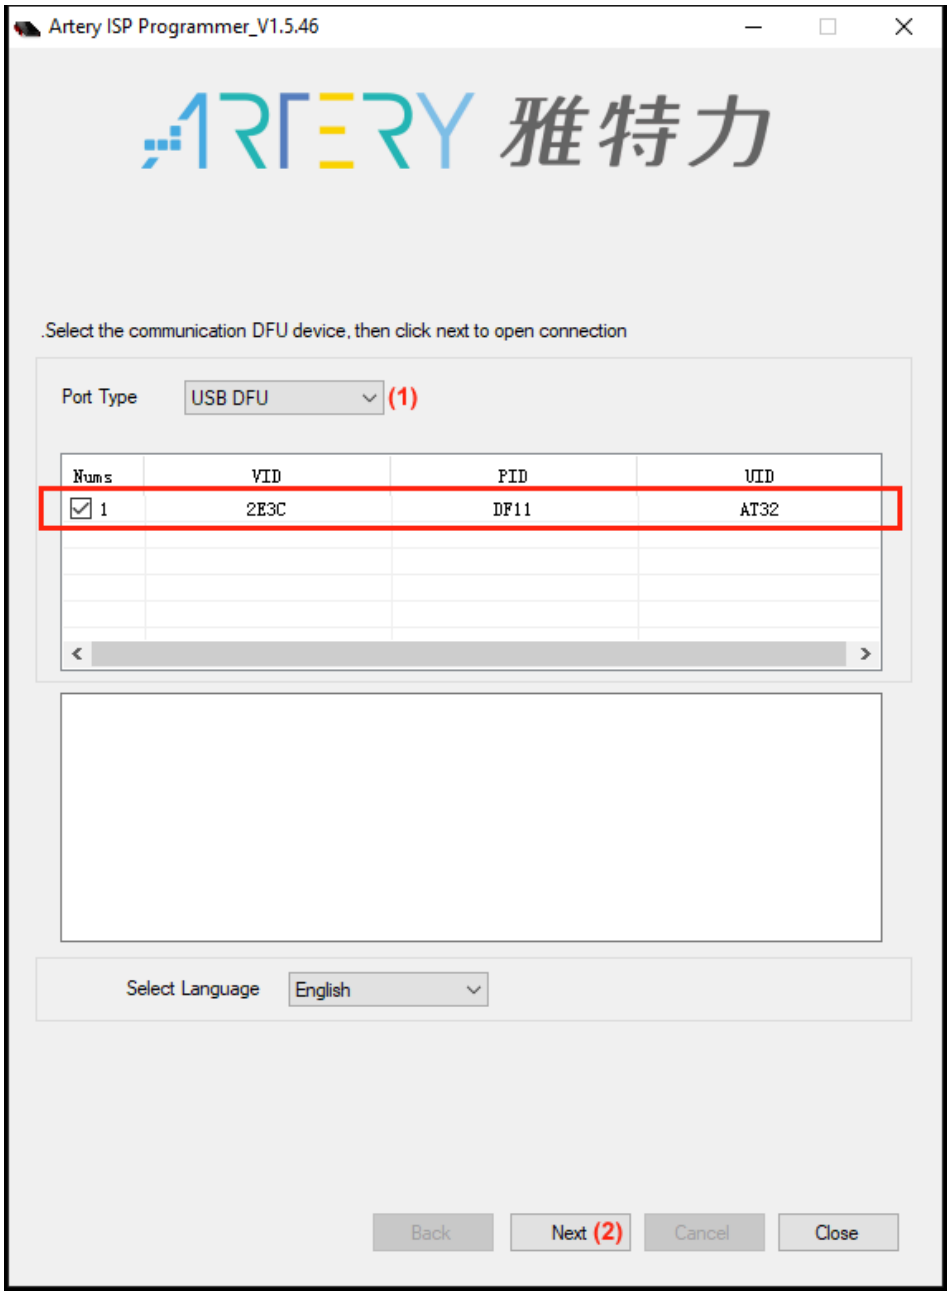


- Press "Next" (3).

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

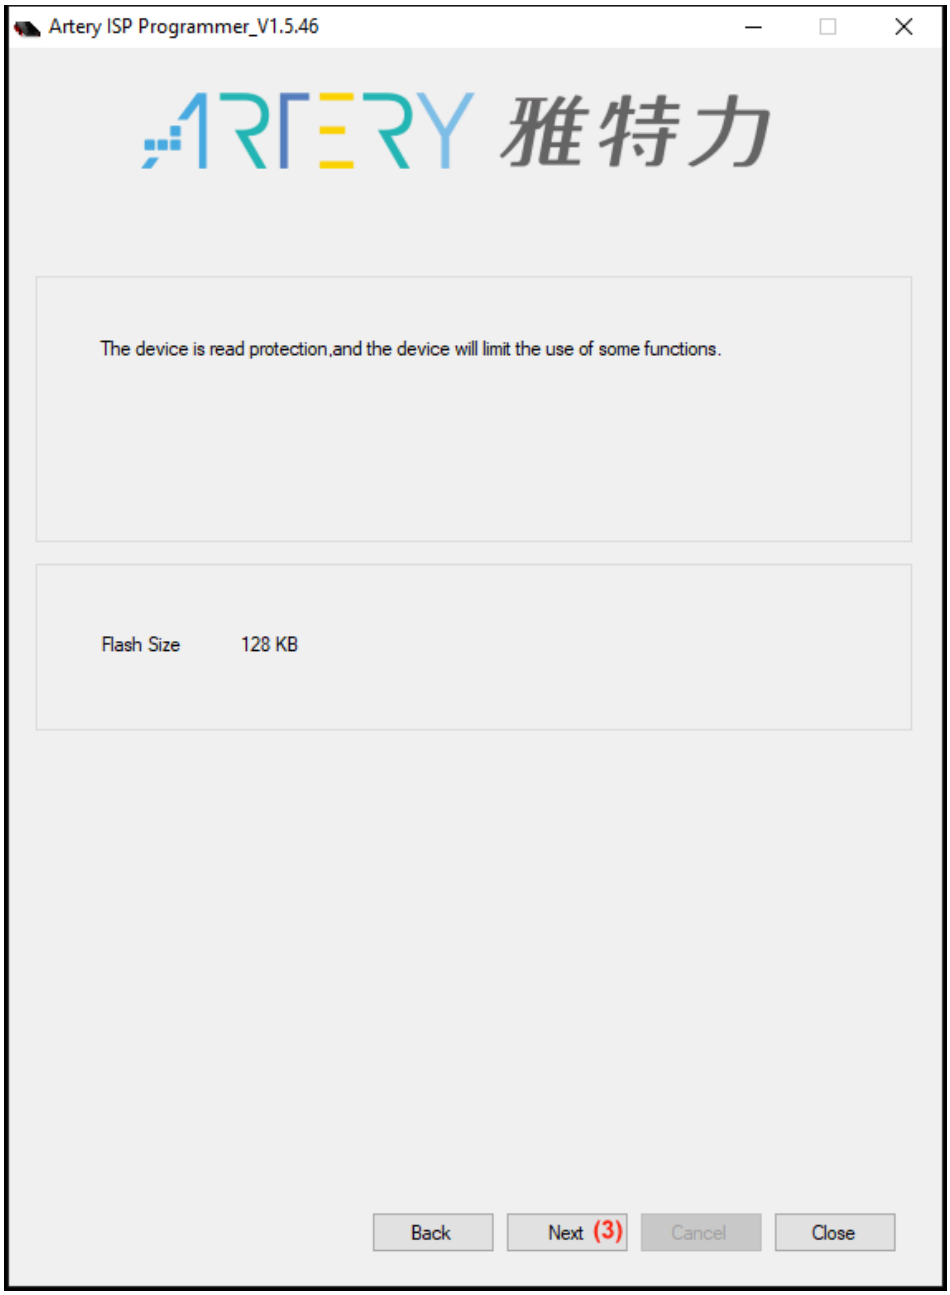


- Press "Next" (4).

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

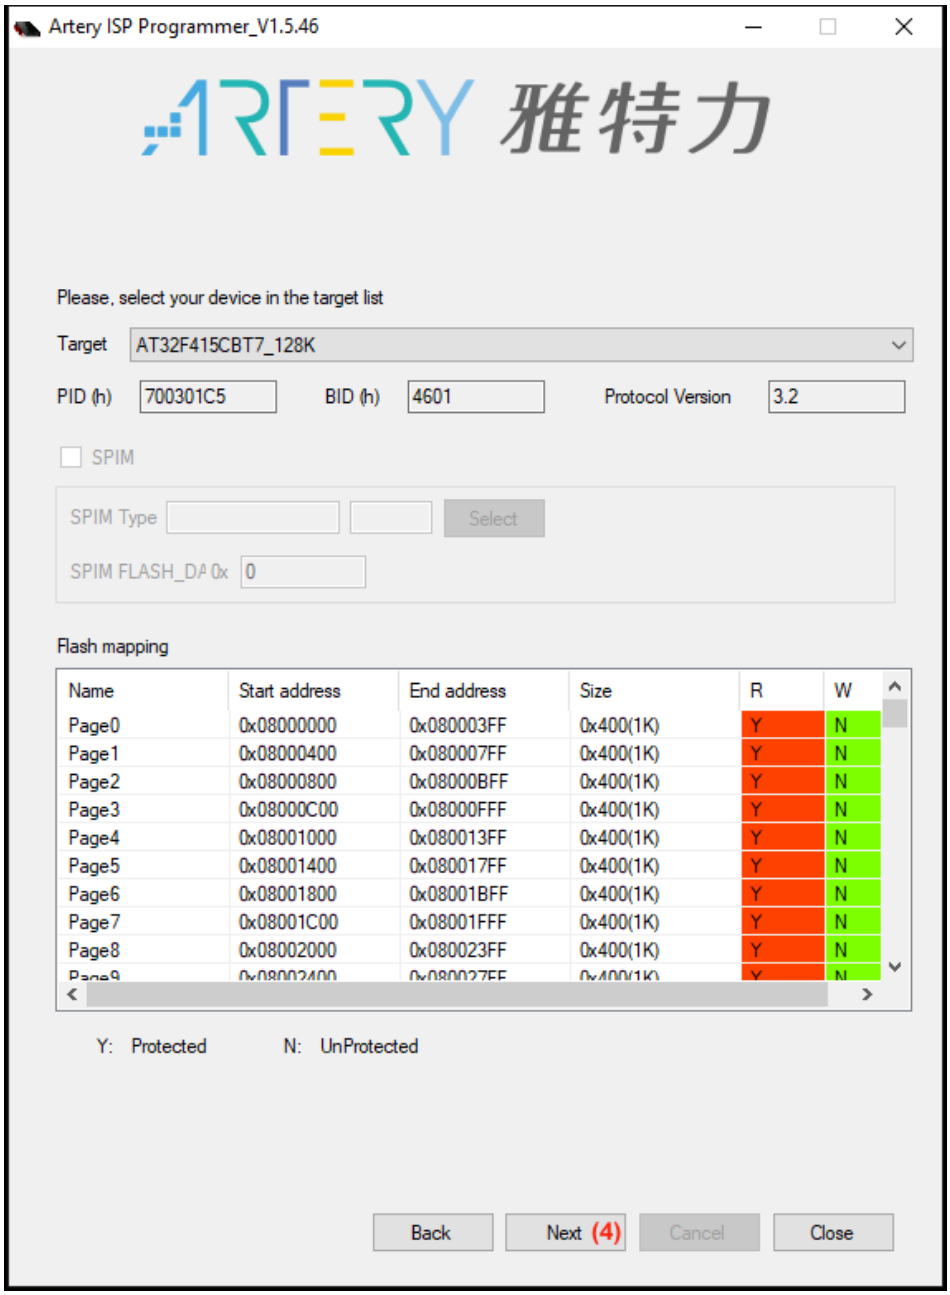


- Select "Enable/Disable Protection" (5). Choose "DISABLE" and "Read Protection", Press "Next" (6),

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

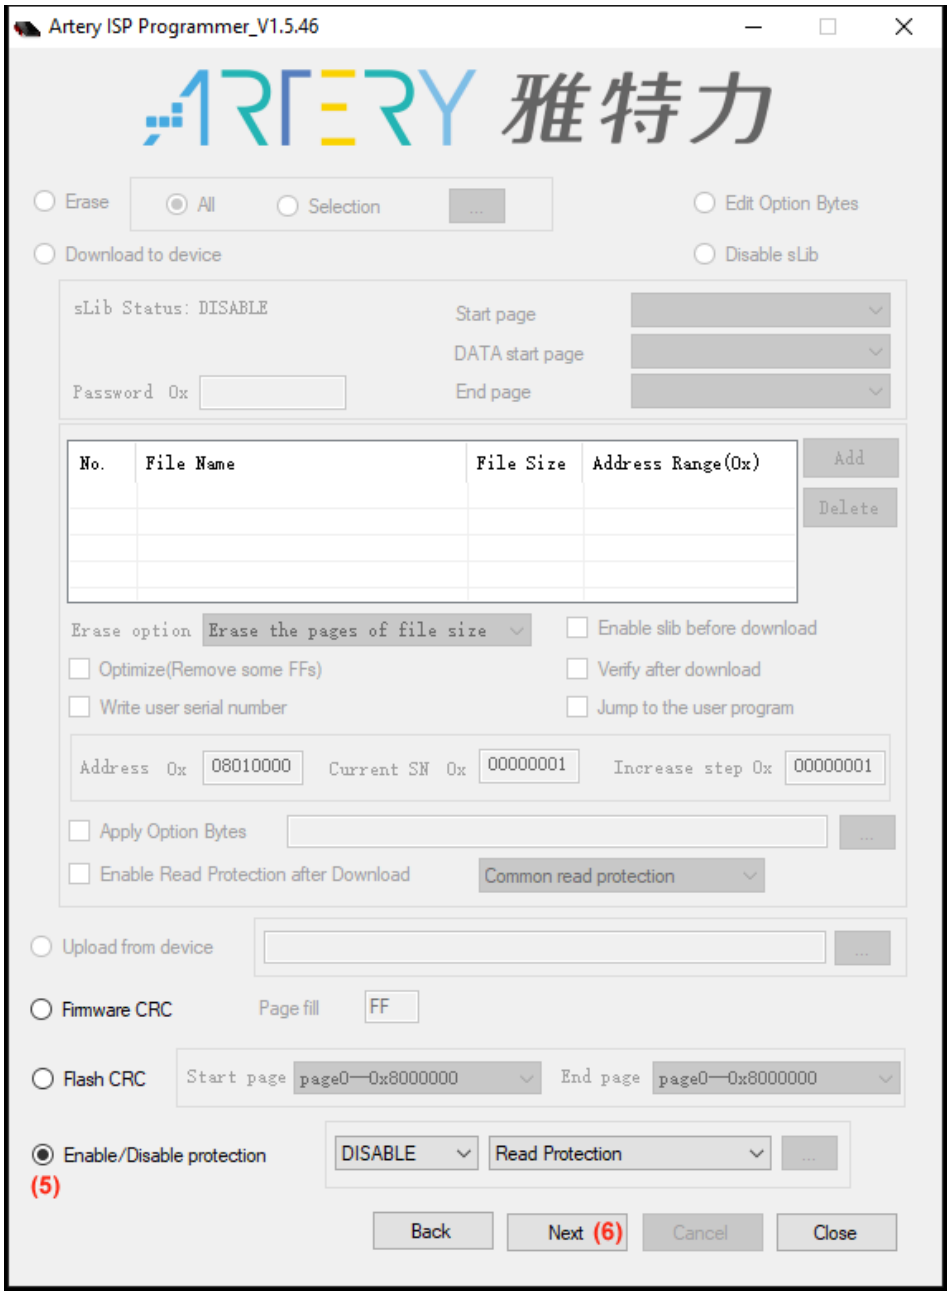


- Press "Yes" (7).

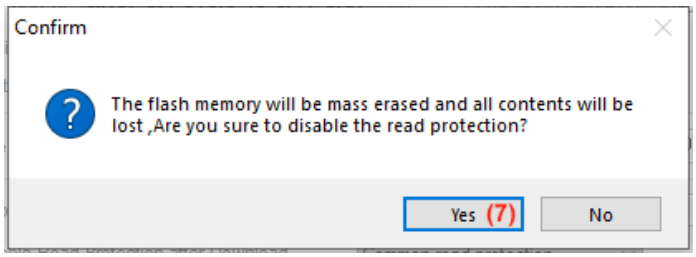


- Once the erase operation is done, press "Back" (8).

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

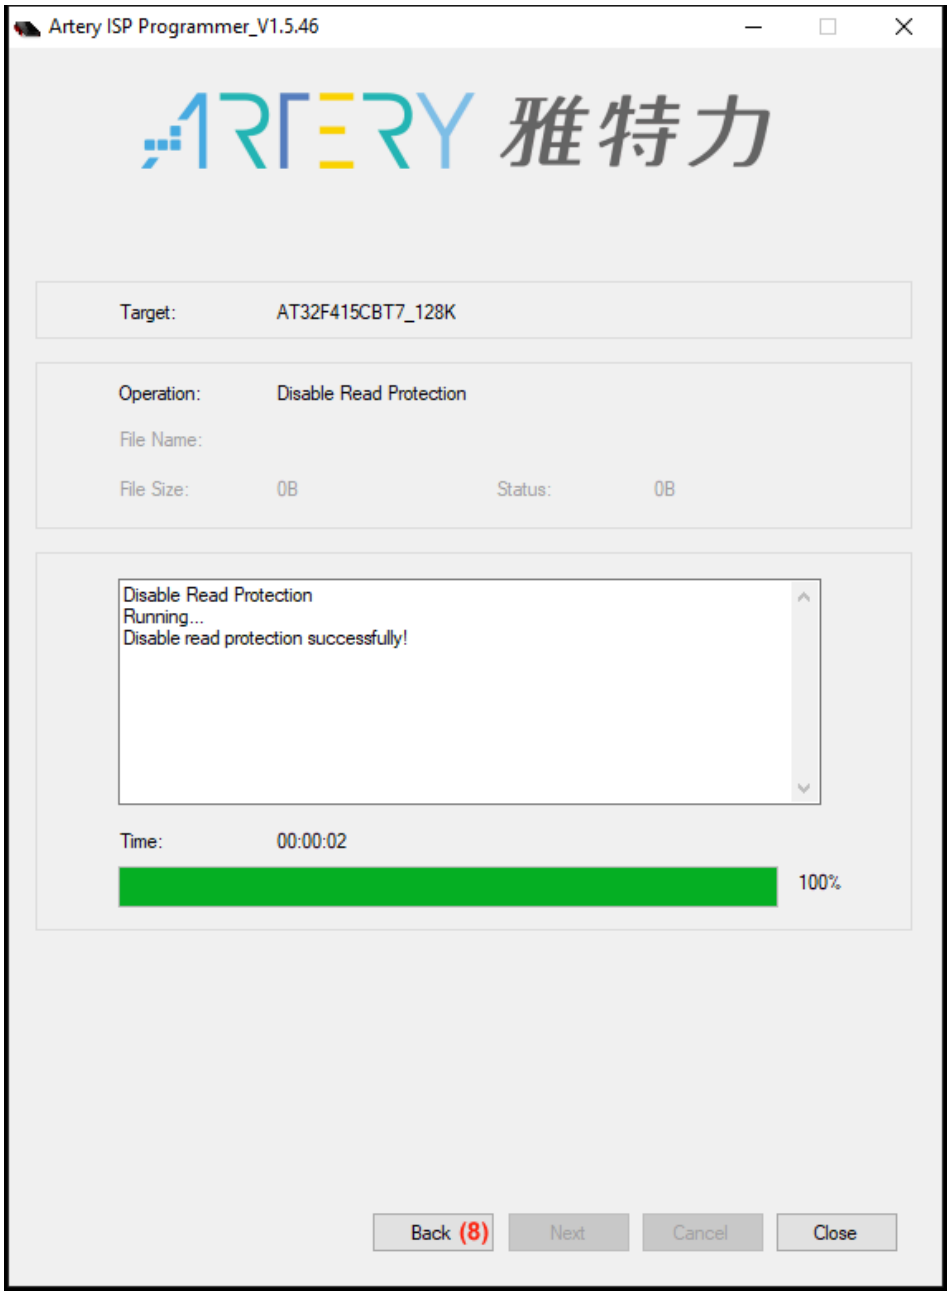


- Choose "Download to device" (9) and press the "Add" button (10) and select the **hxc_fw_installer.hex** file. Press "Next" (11).

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

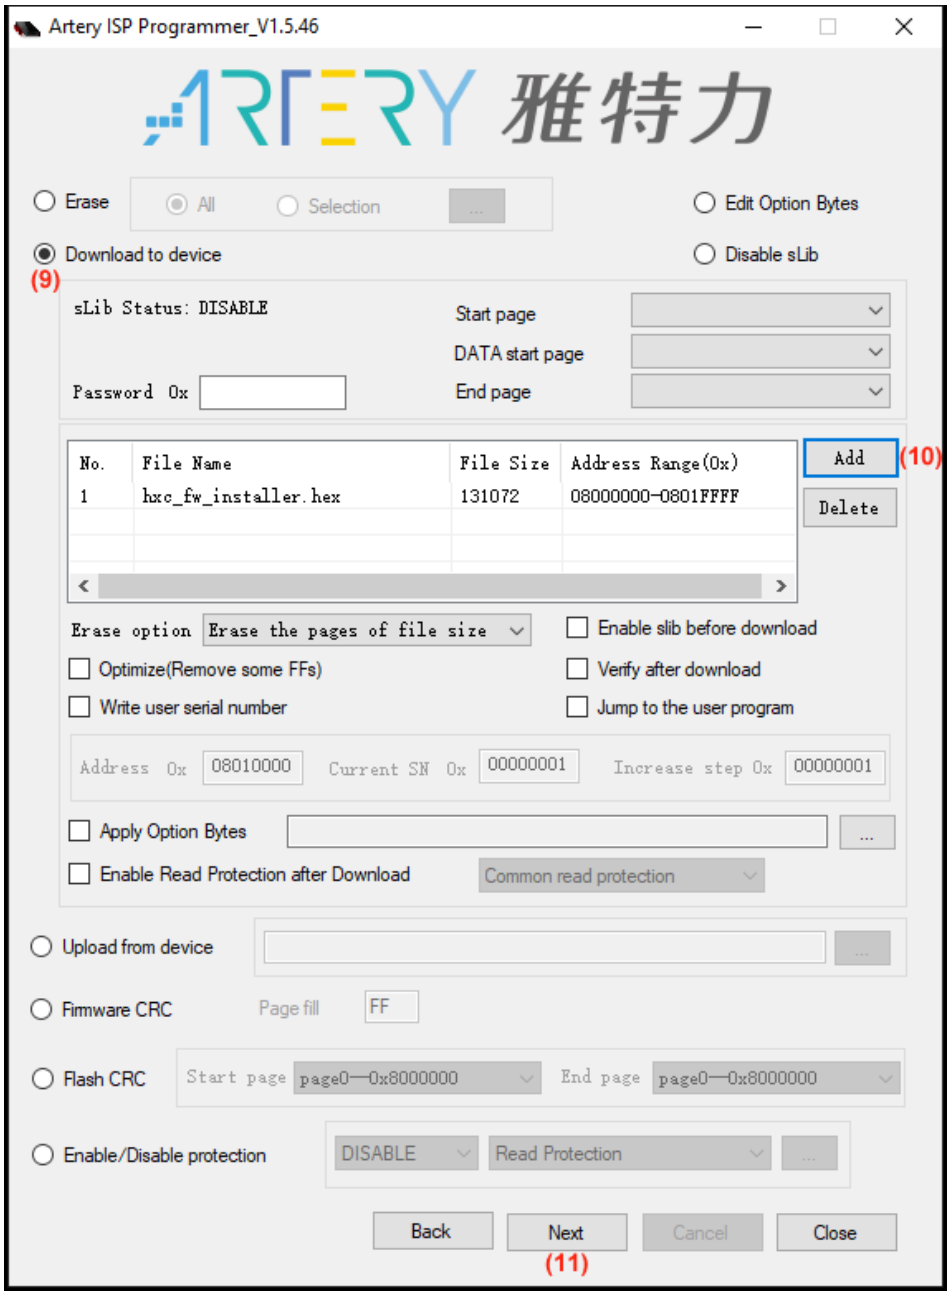


- Press "Ok" (12).

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

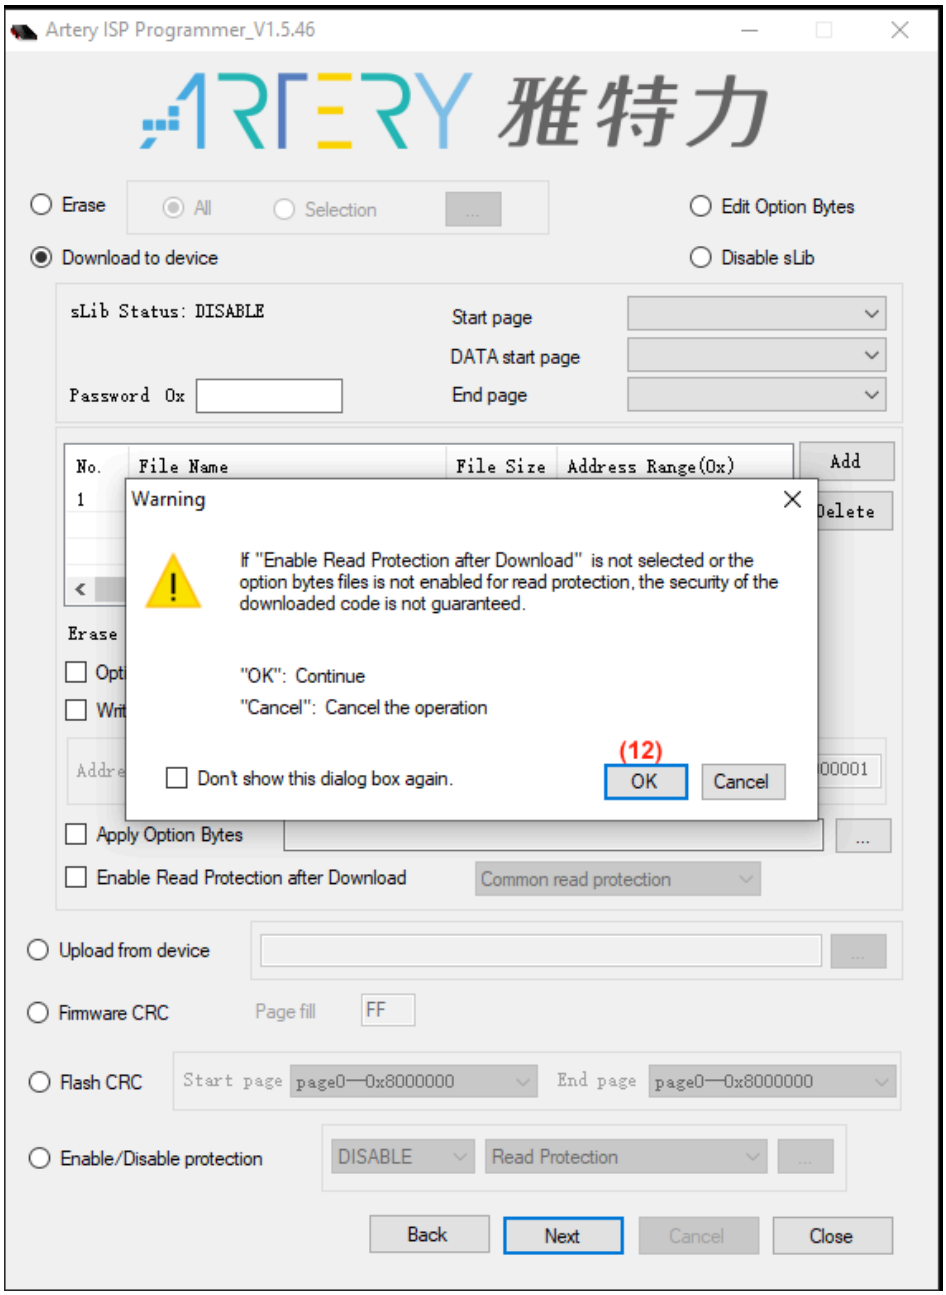


- After this the Gotek will be reprogrammed.

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

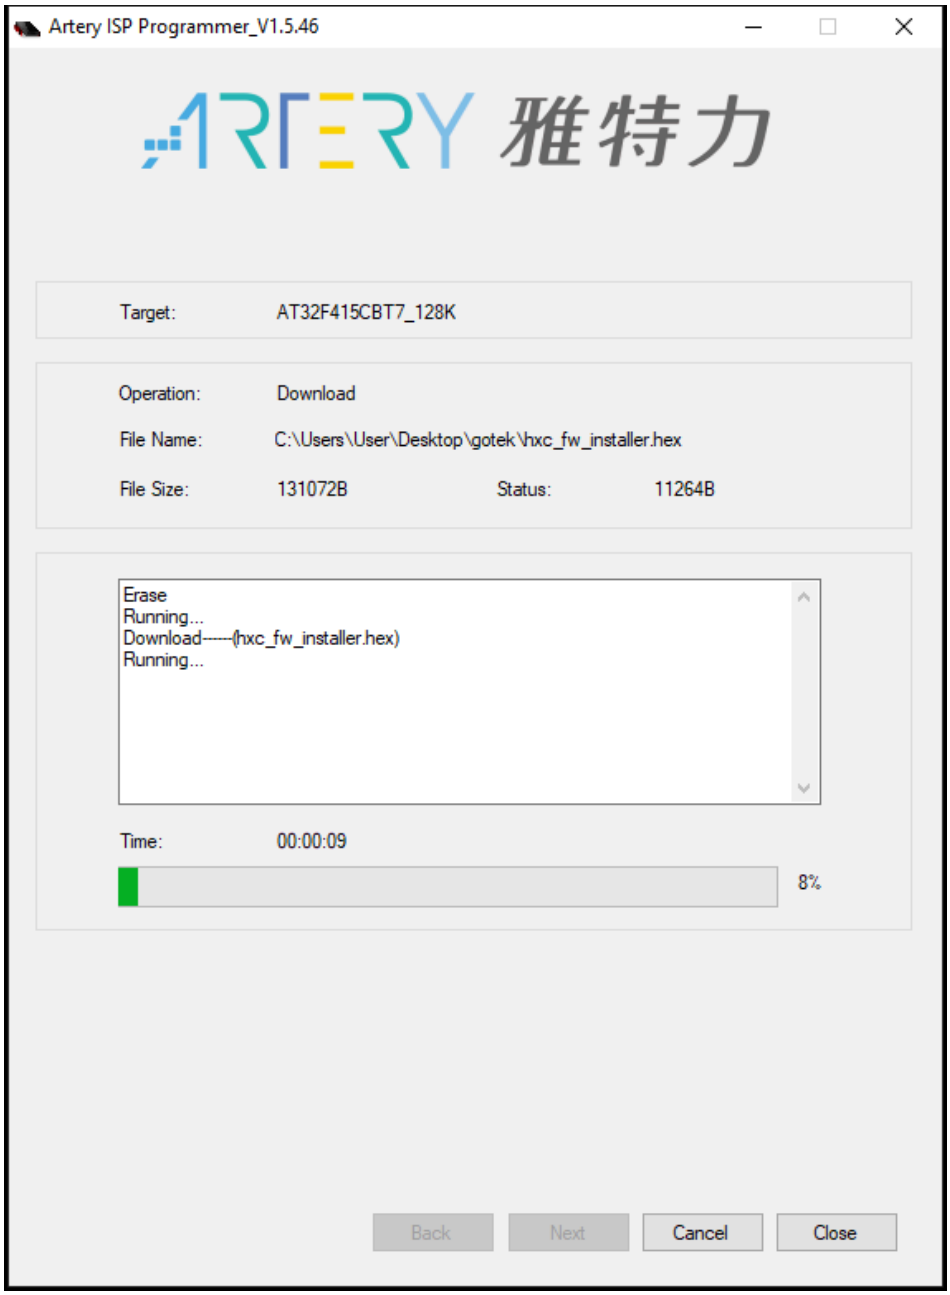

- Once done press "Close" (13)

Presentation
Introduction
Frequently asked questions
Firmware Installation
Bootloader installation
Firmware update
Settings
Settings
Quickdisk
Apple II
Usage
Usage modes
Emulation from images
Emulation from USB stick folder
Emulation from USB stick partitions
Add-ons
OLED add-on
LCD add-on
OSD add-on
Rotary & buttons add-on
Buzzer add-on
Troubleshooting
Troubleshooting
Test firmware
Support
Download
Firmware customization
Frequently asked questions
Contact

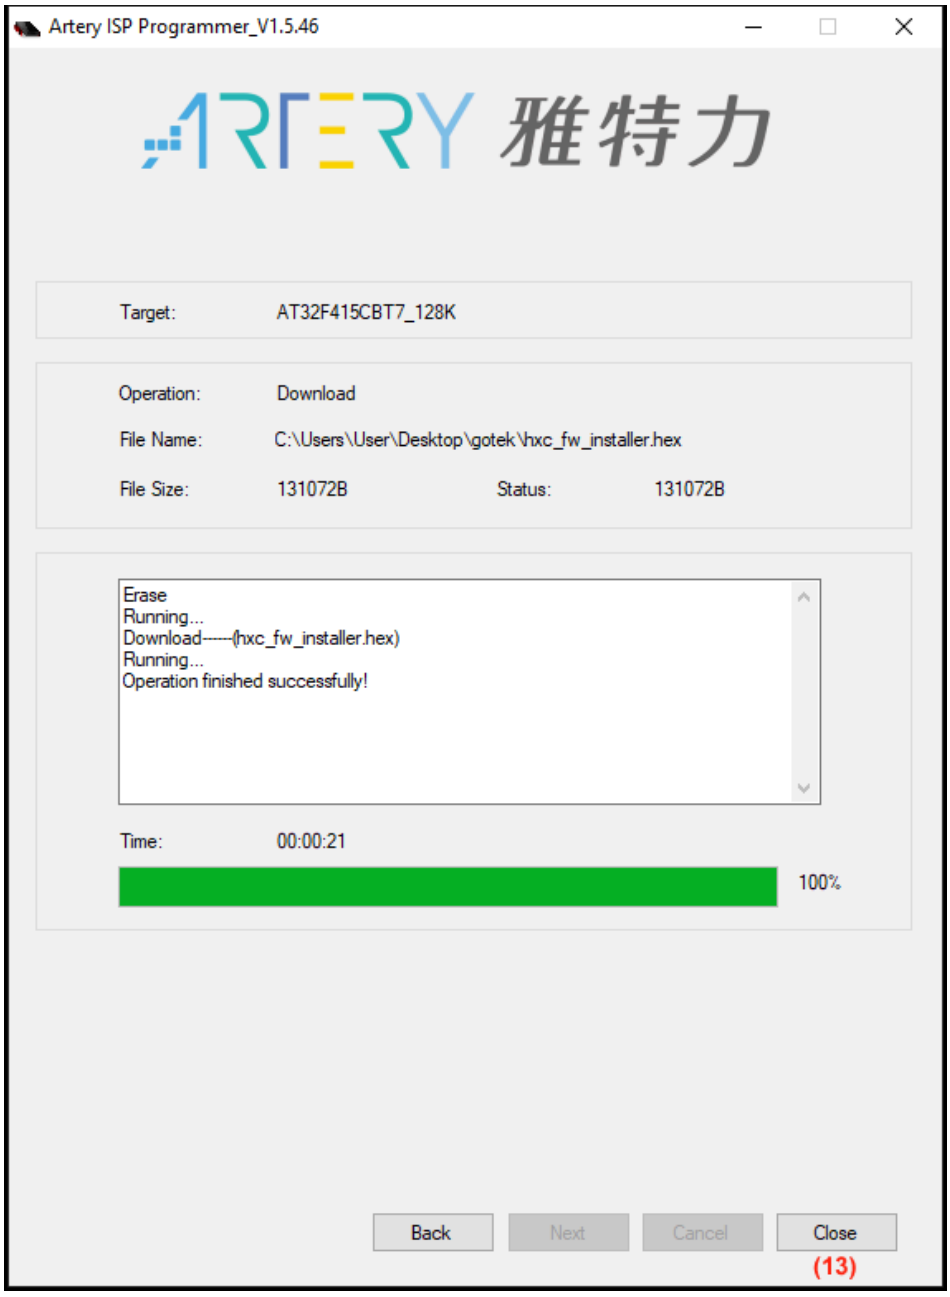

- At this point you can disconnect the wires and remove the strap. Follow up the next steps provided in the email to validate the HxC firmware installation.