

NABU Setup

User Manual

How to turn a Raspberry Pi into a server for the NABU computer: step-by-step installation, administration command, web panel, backups, and virtual printer.

NABU Setup version	1.3.0 (2026-10-05)
Manual revision	4
Release date	October 5, 2026
Repository	https://github.com/czayas/nabu-setup
Channel	https://www.youtube.com/@retroinfopy

Contents

1	Introduction	3
1.1	What NABU Setup is	3
1.2	The NABU Personal Computer	4
1.3	A short history of the NABU Network	4
1.4	The 2022 comeback and the community	5
1.5	The NABU Internet Adapter	5
2	Requirements	6
2.1	Hardware	6
2.2	Software	6
2.3	About the cable	7
3	Preparing the Raspberry Pi	7
3.1	Writing the system to the card	7
3.2	First boot	8
3.3	Updating the system	8
3.4	Checking the RS-422 adapter	8
4	Installing NABU Setup	8
4.1	Downloading the script	8
4.2	Running the script	9
4.3	Configuring the Internet Adapter	9
4.4	Turning on the NABU	10
4.5	Verifying the installation	10
5	The nabu command	11
5.1	nabu: opening the IA's interface	11
5.2	nabu status: server status	12
5.3	nabu list: log and errors	12
5.4	nabu start, nabu stop, and nabu restart	12
5.5	nabu backup: creating a backup	13
5.6	nabu update: updating the IA	13
5.7	nabu setup: updating NABU Setup	13
5.8	nabu poweroff: shutting down the Pi	14
5.9	nabu version and nabu help	14
6	The web panel	14
6.1	Signing in	15
6.2	Status indicators	16
6.3	Buttons	16
6.4	Printouts	16
6.5	Screen and Log	17

6.6	Changing the password	17
6.7	Security	17
7	The virtual printer	18
7.1	How it works	18
7.2	First test: LPRINT	19
7.3	Printing a program listing	19
7.4	Printing a text file	19
7.5	Printing from WordStar	19
7.6	Accented letters	20
7.7	Typeface and paper	22
7.8	What the printer understands	23
7.9	Where the PDFs are kept	23
7.10	Settings	24
7.11	Converting a file by hand	24
8	Backups	24
8.1	What they contain	24
8.2	When they are created	25
8.3	Restoring a backup	25
9	Updates	25
9.1	Updating NABU Setup	26
10	Troubleshooting	26
11	Reference	27
11.1	Files and folders	27
11.2	Services	28
11.3	Shutting down the Pi	28
11.4	Uninstalling	29
12	Resources and credits	29
12.1	Links	29
12.2	Credits	29
12.3	License	30
12.4	Sources for the historical overview	30
13	Revision history	30

1 Introduction

1.1 What NABU Setup is

NABU Setup is an installation script that turns a Raspberry Pi into a small server for the NABU computer. You run it once, it takes a few minutes, and it leaves everything in place for the NABU to load programs the way it did in 1983, only from the Internet.

This is what it installs:

- **The NABU Internet Adapter**, the program that serves the NABU. It runs as a system service: it starts on its own when the Pi boots, and it restarts if it closes.
- **The `nabu` command**, for managing the server from an SSH terminal.
- **A password-protected web panel**, for checking and controlling the server from a browser on a computer or a phone.
- **A virtual printer**: whatever the NABU sends to the printer from CP/M becomes a PDF, in a dot-matrix or letter-quality typeface, on continuous or blank paper.
- **Backups**, as .zip files, of your CP/M files and of the settings.

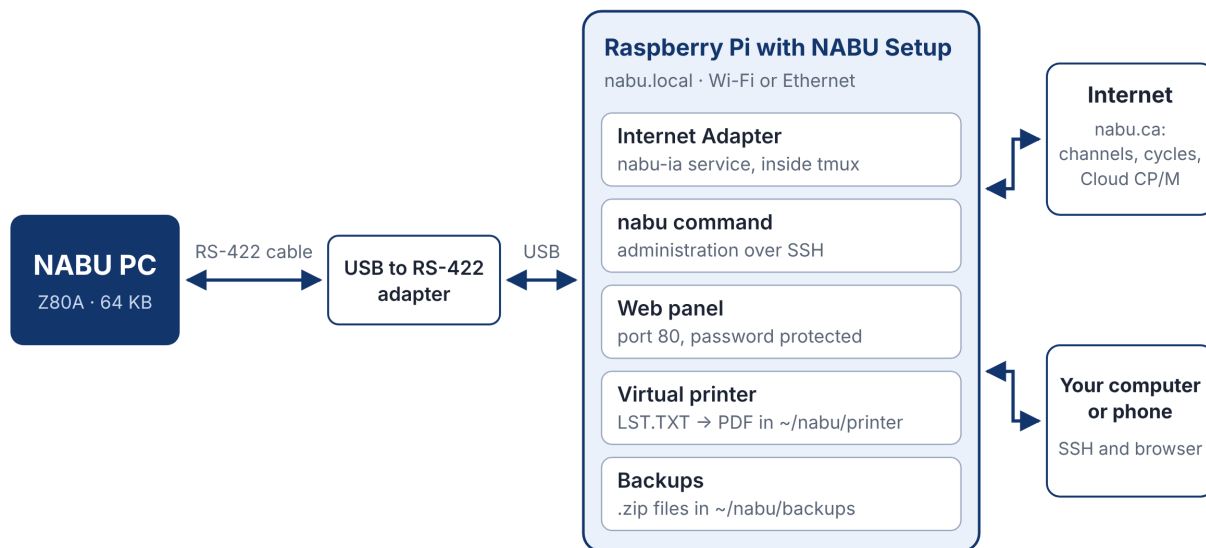


Figure 1. The parts of a NABU server installed with NABU Setup.

NABU Setup is an independent project by Retro Informática Paraguay. It neither replaces nor modifies the NABU Internet Adapter: it downloads it from the official site and gets it ready to use. It is not affiliated with nabu.ca or with the author of the Internet Adapter.

This manual covers NABU Setup 1.3.0, English edition (`nabu-setup-en.sh`). The script and the manual are also published in Spanish.

1.2 The NABU Personal Computer

The NABU PC is a Canadian home computer from 1983. Inside, it looks a lot like other machines of its day:

Component	Details
Processor	Zilog Z80A at 3.58 MHz
Memory	64 KB of RAM
Video	Texas Instruments TMS9918A, with 16 KB of its own memory
Sound	General Instrument AY-3-8910

That is the same processor, and the same video and sound chips, that the MSX standard uses, which is why so many MSX games have been ported to the NABU.

What set it apart is what it lacked: it had neither a disk drive nor a cassette interface. The NABU was designed to load all of its programs from a network, through an adapter connected to the cable TV line.

1.3 A short history of the NABU Network

NABU stands for *Natural Access to Bidirectional Utilities*, and it is also the name of the Babylonian god of wisdom and writing. The company was started in Ottawa, Canada, by entrepreneur John Kelly, around an idea well ahead of its time: delivering programs, games, news, and services to home computers over the cable television network.

The computers began shipping at the end of May 1983, and the NABU Network launched in Ottawa in October of that year, first for Ottawa Cablevision subscribers and, from early 1984, for Skyline Cablevision subscribers as well. The computer cost 950 Canadian dollars, or rented for 19.95 a month; the basic network service cost 9.95 a month.

The adapter received data on a cable channel at 6.312 Mbps, a huge speed for the time. The network broadcast every program one after another, in a cycle that repeated endlessly, and the NABU picked out of the cycle the program the user had chosen. That is where the name *cycles* comes from, which the community now uses for the collections of original programs.

In the spring of 1984 the network reached Alexandria, Virginia. By the end of that year it had about 1,500 subscribers in Ottawa and 700 in Alexandria, far short of what it needed to sustain itself. In November 1984 its main investor, Campeau Corporation, stopped funding it. A successor company kept the service running in Ottawa until August 1986.

1.4 The 2022 comeback and the community

The NABU was all but forgotten for more than thirty years. It came back thanks to a find: James Pellegrini had bought some 2,200 NABU computers when the company was liquidated, and kept them for decades, in their original boxes, in a barn in Massachusetts. In 2022 he put them up for sale on eBay at \$59.99.

In November of that year, videos by DJ Sures (on the 22nd) and by Adrian Black of Adrian's Digital Basement (on the 26th) led thousands of hobbyists to buy one. A problem showed up right away: without the original network, a NABU cannot load anything. The community solved it within weeks:

- **Leo Binkowski**, who had been a NABU programmer in the 1980s, contributed the original programs he had kept, including the 1984 cycles.
- **DJ Sures** released the NABU Internet Adapter, a program that stands in for the original network, and later Cloud CP/M, RetroNET, and a long list of new programs.
- Other hobbyists developed emulators, alternative servers, expansion cards, and new games.

Today the community gathers mostly in these places:

Site	What it offers
nabu.ca	DJ Sures's site: Internet Adapter, Cloud CP/M, RetroNET, tutorials, forums (forums.nabu.ca), and access to the Discord server
nabunetwork.com	News, historical archive, and a serial number registry
York University Computer Museum	Canadian museum that preserves the historical NABU collection
GitHub	The Internet Adapter's issue tracker and many community projects, such as the alternative server <code>nabud</code>

1.5 The NABU Internet Adapter

The NABU Internet Adapter, which this manual calls the *IA*, is a program by DJ Sures that emulates the NABU Network servers and the original network adapter. The NABU connects over an RS-422 cable to the computer running the IA, and the IA hands it the programs it asks for.

With the IA, a NABU can use:

- the original NABU Network cycles;
- channels with new programs and games made by the community;
- **Cloud CP/M**, a version of CP/M 2.2 that keeps its disks on the server instead of using floppy drives;

- **RetroNET**, with chat, telnet, and file storage.

The IA is available for Windows, Linux, and macOS. On Linux it has a menu-driven text interface, which is the one NABU Setup uses. The script always downloads the latest release from `cloud.nabu.ca`.

2 Requirements

2.1 Hardware

Component	Minimum	Notes
Raspberry Pi	Any model with an ARMv7 or ARMv8 processor: Pi 2, 3, 4, 5, or Zero 2 W	The Pi 1, Zero, and Zero W will not work: their ARMv6 processor cannot run the IA
Memory	512 MB	That is the memory of the model used for testing
microSD card	8 GB	16 GB or more is recommended
Power supply	The official one for your model	For a Pi 3, 5 V and 2.5 A. A weak supply causes USB failures
USB to RS-422 adapter	One	nabu.ca recommends the DTech brand
Cable to the NABU	One, with a 5-pin DIN connector	Built by following the <i>Make NABU Cable</i> page at nabu.ca
Network	Wi-Fi or Ethernet, with Internet access	For installing and for using the cloud programs
Another computer or a phone	With an SSH client and a browser	For installing and managing the server

And, of course, a NABU PC connected to a TV or monitor.

Important. NABU Setup was developed and tested on a Raspberry Pi 3 Model A+ (512 MB) running 64-bit Raspberry Pi OS Lite. It should work the same way on the other compatible models, but that has not been tested.

2.2 Software

- **Raspberry Pi OS Lite**, the version without a desktop. The 64-bit version is recommended; the script also recognizes the 32-bit one.
- **Raspberry Pi Imager**, on your computer, to write the microSD card.

- An **SSH** client. Linux, macOS, and Windows already include the `ssh` command. On Android you can use Termux.

The script installs everything else it needs on its own: `tmux`, `unzip`, `wget`, and `python3`. It uses no Python libraries beyond the ones that ship with the system.

2.3 About the cable

The cable between the RS-422 adapter and the NABU is the most delicate part of the build. These are nabu.ca's recommendations:

- Keep the RS-422 run as short as possible. If you need distance, extend the USB side.
- Use twisted-pair cable, such as Ethernet cable: one pair for transmit and one for receive.
- Connect the shield to ground at one end only.
- Keep it away from power cords.

The wiring diagram is at <https://nabu.ca/Make-NABU-Cable>.

3 Preparing the Raspberry Pi

3.1 Writing the system to the card

1. Install **Raspberry Pi Imager** on your computer and open it.
2. Choose your Raspberry Pi model.
3. For the operating system, choose **Raspberry Pi OS Lite (64-bit)**. It is in the *Raspberry Pi OS (other)* group.
4. Choose the microSD card as the target.
5. When the program offers to customize the installation, accept and fill in the following:
 - **Hostname:** `nabu`. That way the server will answer at `nabu.local`.
 - **Username and password:** the ones for your account on the Pi. The examples in this manual use the user `nabu`.
 - **Wi-Fi:** your network's name and password, and your country.
 - **Time zone and keyboard:** the ones for your region.
 - **SSH:** enabled.
6. Write the card.

Note. The exact names of these options vary a little between Raspberry Pi Imager releases, but the information you need to fill in is always the same.

3.2 First boot

1. Insert the card into the Pi.
2. Plug the RS-422 adapter into a USB port.
3. Connect the power supply. The first boot takes a couple of minutes.
4. On your computer, open a terminal and connect:

```
ssh nabu@nabu.local
```

If `nabu.local` does not respond, look up the Pi's IP address in your router's device list and use that instead, for example `ssh nabu@192.168.0.50`.

3.3 Updating the system

Once you are on the Pi, update the packages and reboot:

```
sudo apt update && sudo apt full-upgrade -y  
sudo reboot
```

Connect over SSH again once the Pi has finished booting.

3.4 Checking the RS-422 adapter

```
ls /dev/ttyUSB*
```

You should see `/dev/ttyUSB0`. If the command says there is no such file, check that the adapter is plugged in properly.

4 Installing NABU Setup

4.1 Downloading the script

On the Pi, download the English edition from the repository:

```
wget https://raw.githubusercontent.com/czayas/nabu-setup/main/nabu-setup-en.sh
```

To check which version you downloaded:

```
bash nabu-setup-en.sh --version
```

4.2 Running the script

```
bash nabu-setup-en.sh
```

Run it as your regular user, without `sudo`. The script asks for administrator rights only in the steps that need them.

The first thing it does is ask you for a **password for the web panel**. Type it twice; it is not shown on screen. The panel user is always `nabu`, even if your user on the Pi is a different one.

After that it works on its own. You will see something like this:

```
NABU Setup 1.3.0 (2026-10-05)

Password for the web panel (user: nabu):
Type it again:
==> Installing packages
==> Giving nabu access to the serial port and the system log
==> Downloading the Internet Adapter (linux-arm64.zip)
    Program: /home/nabu/nabu/NABU-Internet-Adapter-84
==> Linking libddl.so in the IA's folder
==> tmux configuration for the IA
==> Saving /etc/nabu-ia.conf
==> Creating the nabu-ia systemd service
==> Allowing service control and shutdown without a password (for the web panel)
==> Installing the administration command: nabu
==> Installing the backup tool
==> Installing the virtual printer (LST.TXT to PDF)
==> Saving the panel password (only its PBKDF2 hash)
==> Installing the web panel
==> Creating the nabu-web systemd service
==> Creating the nabu-print systemd service

Installation complete. Reboot the Pi so the new permissions take effect:
    sudo reboot
```

When it finishes, reboot the Pi:

```
sudo reboot
```

The reboot is needed the first time so that your user can use the serial port.

4.3 Configuring the Internet Adapter

You do this step only once. Connect over SSH again and open the IA's interface:

```
nabu
```

Important. Your terminal window must be at least 100 columns by 36 rows. If it is smaller, the IA's interface is drawn incorrectly. Enlarge the window or reduce the font size.

Inside the IA you move around with the arrow keys and Tab, toggle checkboxes with the space bar, and confirm with Enter. You can also use the mouse.

1. Go to [**Settings**].
2. On the **Serial** tab, type `/dev/ttyUSB0` as the port. Leave the baud rate at its original value, 111861.
3. Look through the Settings tabs for the checkbox **Start NABU serial listener when loaded (NABU over usb rs422)** and check it. With that, the IA opens the serial port on its own every time it starts.
4. Save with [**Save**].
5. Leave the interface **without closing the IA**: press Ctrl-b, then the d key.

Note. The IA's interface belongs to the Internet Adapter, not to NABU Setup, and may change from one release to the next. The names in this section are the ones in release 2026.05.

For the settings to take effect, restart the IA:

```
nabu restart
```

4.4 Turning on the NABU

With the cable connected and the IA running, turn on the NABU. As it starts, it requests its program over the cable, and the IA sends it.

- If the IA has the *headless* menu enabled, as it was in the test installation, the NABU shows the RETRONET menu and you choose what to load from its own keyboard.
- If you turn that off in Settings, the NABU directly loads whichever channel is selected in the IA's list.

To get back to the menu from any program, press the NABU's RESET button.

4.5 Verifying the installation

```
nabu status
```

If the service shows as active, `/dev/ttyUSB0` is listed, and the power supply reads OK, the server is ready. Also open `http://nabu.local` in a browser to check the web panel.

5 The nabu command

The whole server is managed with a single command.

Command	What it does
nabu	Opens the Internet Adapter's interface
nabu status	Shows the server status
nabu list	Shows the service log and the IA's errors
nabu start	Starts the IA
nabu stop	Stops the IA
nabu restart	Restarts the IA
nabu backup	Creates a backup
nabu update	Updates the IA to the latest release
nabu setup	Updates NABU Setup to the latest published release
nabu poweroff	Shuts the Pi down safely
nabu version	Shows the NABU Setup version and release date
nabu help	Shows the help

5.1 nabu: opening the IA's interface

With no arguments, the command takes you to the IA's screen, which keeps running even when nobody is looking at it. From there you choose channels, change settings, and watch what the NABU is asking the server for.

To leave, press **Ctrl-b** and then **d**. The blue bar at the bottom of the screen reminds you. The IA keeps running.

Note. Do not leave with the IA's [Exit] button: that closes the program. It is not serious, because the service starts it again five seconds later, but the NABU loses its connection in the meantime.

If the IA is stopped, the command says so:

```
The Internet Adapter is not running. Try: nabu start
```

5.2 nabu status: server status

```
nabu status
```

Sample output:

```
● nabu-ia.service - NABU Internet Adapter (in a tmux session)
   Loaded: loaded (/etc/systemd/system/nabu-ia.service; enabled; ...)
   Active: active (running) since Sat 2026-10-03 09:12:41 -03; 5h ago

crw-rw---- 1 root dialout 188, 0 Oct  3 09:12 /dev/ttyUSB0
Virtual printer: running (printouts in ~/nabu/printer: 4)
temp=47.2'C
Power supply: OK
```

Line	What it tells you
Active:	Whether the IA is running (active), stopped (inactive), or failed (failed)
/dev/ttyUSB0	That the RS-422 adapter is plugged in. If it is missing, it reads RS422 adapter: NOT detected
Virtual printer	Whether the print service is running and how many PDFs are stored
temp=	The processor temperature
Power supply	OK, or PROBLEMS if the Pi has detected undervoltage or overheating since it booted

5.3 nabu list: log and errors

```
nabu list
```

It shows the last 30 lines of the service log and, if there are any, the last 20 lines of `~/nabu/ia-error.log`, the file that collects the errors the IA writes. It is the first place to look when the IA will not start.

5.4 nabu start, nabu stop, and nabu restart

They start, stop, and restart the IA. While the IA is stopped, the NABU cannot load programs. The web panel and the virtual printer are separate services and keep running.

5.5 nabu backup: creating a backup

```
nabu backup
```

```
Backup created: /home/nabu/nabu/backups/nabu-backup-2026-10-03-1811.zip (9 files, 31 KB)
Backups kept in /home/nabu/nabu/backups: 3 (maximum 5)
```

What backups contain and how to restore them is explained in the [Backups](#) section.

5.6 nabu update: updating the IA

```
nabu update
```

It downloads the latest IA release, creates a backup, stops the IA, installs the new release over the old one, and starts it again. Your files, your settings, and the printouts folder are left untouched.

5.7 nabu setup: updating NABU Setup

```
nabu setup
```

It downloads the latest published NABU Setup release from the repository, in the same language as the installed one, and shows both versions:

```
Downloading https://raw.githubusercontent.com/czayas/nabu-setup/main/nabu-setup-en.sh
Installed: NABU Setup 1.3.0 (2026-10-05)
Published: NABU Setup 1.3.0 (2026-10-05)
You already have the latest version. Install it again? [y/N]
```

If you already have the latest, as in this example, or if the installed one is newer than the published one, it asks before going on. If the published one is newer, it runs the installer with no further questions.

The rest is the same as a manual installation; the details are in the [Updating NABU Setup](#) section.

Note. Do not confuse this command with `nabu update`, which updates the Internet Adapter.

5.8 nabu poweroff: shutting down the Pi

```
nabu poweroff
```

It stops the services, closes the open files, and shuts the system down. Once the Pi's green LED stops blinking, a few seconds later, you can cut the power.

Always use it before unplugging the power supply or flipping a switch on the cable. The [Shutting down the Pi](#) section explains why.

5.9 nabu version and nabu help

```
nabu version
```

```
NABU Setup 1.3.0 (2026-10-05)  
https://github.com/czayas/nabu-setup
```

It shows the installed NABU Setup version and its release date. `nabu help` shows the list of commands, the web panel's address, and the printouts folder.

6 The web panel

The panel lets you control the server without opening a terminal. It is designed for a phone screen, but it works in any browser.

6.1 Signing in

Open `http://nabu.local` in a browser. If that address does not respond, use the Pi's IP address. The browser asks for a username and password: the user is `nabu`, and the password is the one you chose during installation.

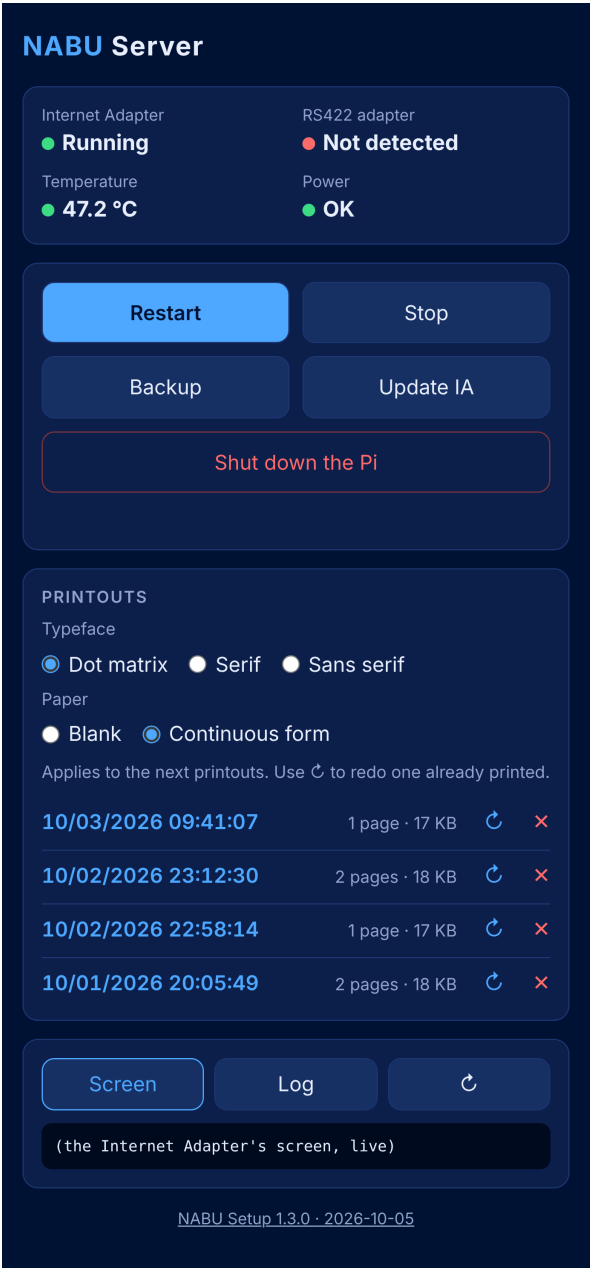


Figure 2. The web panel on a phone screen. Screenshot taken in a test environment.

6.2 Status indicators

The first card sums up the state of the server and refreshes every ten seconds. Green means everything is fine.

Indicator	What it shows
Internet Adapter	Running, Starting, Stopped, or Failed
RS422 adapter	The detected port (<code>tttyUSB0</code>), or <i>Not detected</i>
Temperature	The processor's. It turns yellow from 70 °C (158 °F) and red from 80 °C (176 °F)
Power	OK, or <i>Problems</i> if the Pi has detected undervoltage

6.3 Buttons

- **Restart** restarts the IA.
- **Stop** stops it, after asking for confirmation. While the IA is stopped, the same button reads **Start**.
- **Backup** creates a backup and downloads it to the device you are using the panel from.
- **Update IA** does the same as `nabu update`. It may take a few minutes; when it finishes, the panel shows the result.
- **Shut down the Pi** does the same as `nabu poweroff`, after asking for confirmation. The panel stops responding right away: wait until the Pi's green LED stops blinking before cutting the power.

6.4 Printouts

At the top are the virtual printer's two options:

- **Typeface:** *Dot matrix*, *Serif*, or *Sans serif*.
- **Paper:** *Blank* or *Continuous form*.

An option is saved as soon as you tap it, and it applies to whatever is printed from then on. The [Typeface and paper](#) section shows each one.

Below is the list of printouts, newest first, with the date, time, page count, and size. Tap one and the PDF opens in another tab. To the right of each one there are two buttons:

- The **circular arrow** redoes that printout with the typeface and paper chosen at that moment, without printing again from the NABU. The printout keeps its date and time.
- The red **X** deletes it, after asking for confirmation.

The panel shows the 50 most recent printouts; older ones remain in the `~/nabu/printer` folder.

6.5 Screen and Log

- **Screen** shows, as text, what is on the IA's interface at that moment. It refreshes every five seconds. It is for watching, not for operating the IA: that is what the `nabu` command is for.
- **Log** shows the same as `nabu list`.
- The  button refreshes the view right away.

The NABU Setup version and release date appear at the bottom of the panel.

6.6 Changing the password

Run the installation script again. When it asks whether you want to change the password, answer `y`:

```
bash nabu-setup-en.sh
The web panel already has a password. Change it? [y/N] y
```


6.7 Security

The panel uses unencrypted HTTP. It is meant for your home network.

- Do not expose it to the Internet: do not open or forward port 80 on your router.
- Choose a password you do not use anywhere else.
- The password is not stored on the Pi. Only its hash, computed with PBKDF2-SHA256, is kept in `/etc/nabu-web.conf`.

7 The virtual printer

Cloud CP/M has a printer device, LST:. The IA saves whatever the NABU sends to that device in a text file called LST.TXT. NABU Setup's virtual printer watches that file and turns each print job into a PDF. At first it looks like a sheet of continuous paper fresh out of a dot-matrix printer; letter-quality typefaces and blank paper are also available.

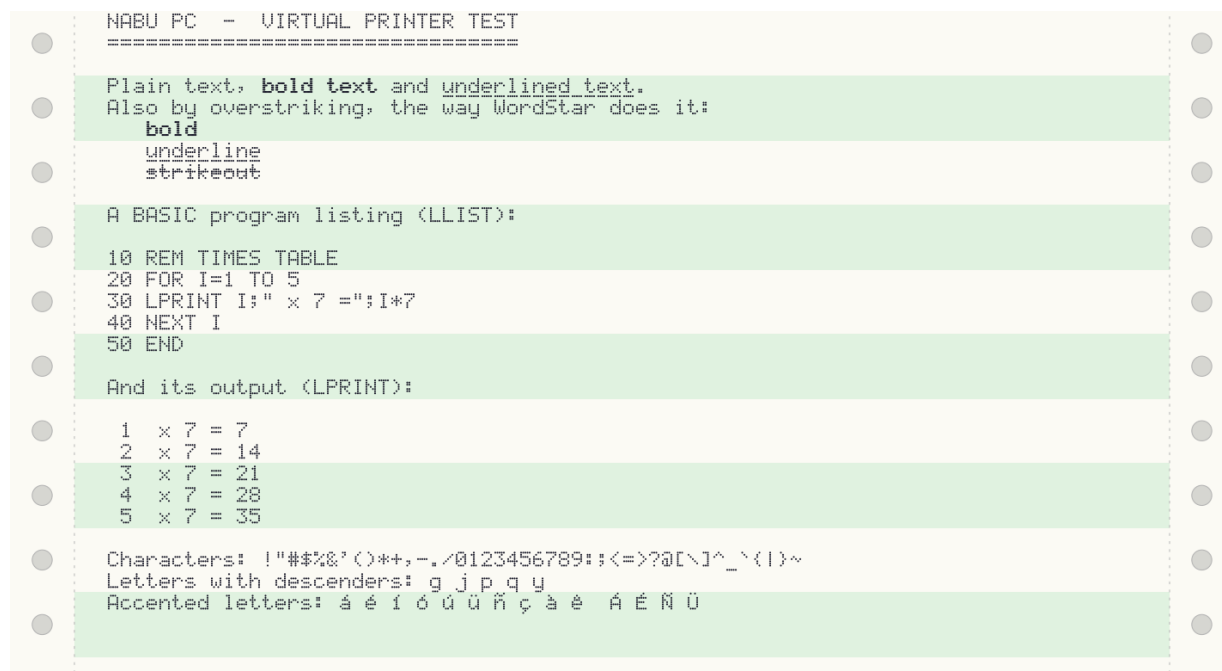

```

NABU PC - VIRTUAL PRINTER TEST
=====

Plain text, bold text and underlined text.
Also by overstriking, the way WordStar does it:
  bold
  underline
  strikeout

A BASIC program listing (LLIST):

10 REM TIMES TABLE
20 FOR I=1 TO 5
30 LPRINT I;" x 7 =" ;I*7
40 NEXT I
50 END

And its output (LPRINT):

 1 x 7 = 7
 2 x 7 = 14
 3 x 7 = 21
 4 x 7 = 28
 5 x 7 = 35

Characters: !"#$%&'()*+,-./0123456789:;<=>?@[\]^_`{|}~
Letters with descenders: g j p q y
Accented letters: á é í ó ú û ñ ç à è Á Ê Ñ Ò

```

Figure 3. Part of a page produced by the virtual printer.

7.1 How it works

1. A program on the NABU prints to LST:.
2. The IA appends that text to the end of LST.TXT, inside its Store folder.
3. Once five seconds go by with no new text, the virtual printer considers the print job finished.
4. It creates a PDF in ~/nabu/printer with the date and time in its name, for example print-2026-10-03-094107.pdf, using the typeface and paper chosen on the web panel.
5. The printout appears in the *Printouts* section of the web panel.

The printer never modifies LST.TXT: it only remembers how far it has read.

7.2 First test: LPRINT

On the NABU, load Cloud CP/M and run the BASIC interpreter:

```
MBASIC
```

Inside BASIC, type:

```
LPRINT "HELLO FROM THE NABU"  
SYSTEM
```

LPRINT sends the text to the printer, and SYSTEM returns to CP/M. Wait a few seconds and open the web panel: the printout is at the top of the list.

7.3 Printing a program listing

In MBASIC, LLIST prints the program currently loaded:

```
LOAD "PROGRAM"  
LLIST
```

It also accepts a range of lines, for example LLIST 100-200.

7.4 Printing a text file

From CP/M, the PIP command copies a file to the printer device:

```
PIP LST:=LETTER.TXT
```

It works with any text file, even one on another drive: PIP LST:=D:DIR.DIR.

Note. Cloud CP/M does not support the Ctrl-P key combination, which in other versions of CP/M echoes everything shown on screen to the printer.

7.5 Printing from WordStar

Cloud CP/M includes WordStar on drive A:, user area 6. WordStar prints to LST:, so every document you print ends up as a PDF.

1. From A:0>, switch user areas and start the program:

```
USER 6  
WS
```

2. On the opening menu, press **D** to open a document and type its name, for example **D:LETTER.TXT**. The **D:** prefix saves it on drive **D:** instead of **A:**, which belongs to the cloud.
3. Type the text. WordStar wraps to the next line on its own: press **Enter** (the **GO** key on the NABU) only at the end of each paragraph.
4. Save with **^KD**, which also returns to the opening menu.
5. Press **P**, type the document's name, and press **Esc** instead of **Enter**. That skips the questions and starts printing.

The **^** sign stands for the **Ctrl** key: **^KD** is **Ctrl-K** followed by the letter **D**.

Keys	Action
^PB	Turns bold on and off
^PS	Turns underline on and off
^PH	Prints the next character on top of the previous one
^B	Reforms the paragraph after an edit
^KS	Saves and lets you keep typing
^KD	Saves and returns to the opening menu

The PDF keeps the margins, the justified text, bold, underline, and the page number WordStar adds at the bottom.

Note. Printing from WordStar was tested on a real NABU, with the WordStar that ships with Cloud CP/M.

7.6 Accented letters

CP/M programs work in 7-bit ASCII, which has no accented letters. The technique of the day is the typewriter's: print the letter and then the accent on top of it. The virtual printer recognizes that overstrike and draws a single accented letter. The letter is stored that way in the text of the PDF too, so you can search for it and copy it.

In WordStar, **^PH** makes the next character print on top of the previous one:

To get	Type
á é í ó ú	the vowel, ^PH, and ' ^
ü	u, ^PH, and " ^
ñ	n, ^PH, and - ^
Ñ	N, ^PH, and - ^

WordStar's screen does not show the accented letter, but something like n^H-. You see the result when you print.

The NABU keyboard has no ~ key. That is why the printer also makes an ñ from a hyphen or a ^ over the n. A run of hyphens over a piece of text is still strikeout. If you type from a telnet client, n, ^PH, and ~ gives the same result.

These are all the marks it recognizes, over lowercase and capital letters:

Mark	Accent	Letters
'	Acute	á é í ó ú ý
`	Grave	à è ì ò ù
^	Circumflex	â ê î ô û
~	Tilde	ñ ã õ
"	Diaeresis	ä ë ï ö ü ÿ
,	Cedilla	ç

The same method works from other programs, using the backspace character. For example, in MBASIC:

```
LPRINT "Asuncio";CHR$(8);"'n, Espan";CHR$(8);"-a"
```

Note. The ï and ÿ signs cannot be made by overstriking.

7.7 Typeface and paper

The virtual printer has three typefaces and two kinds of paper. You choose them in the *Printouts* section of the web panel, and they apply to the printouts that follow.

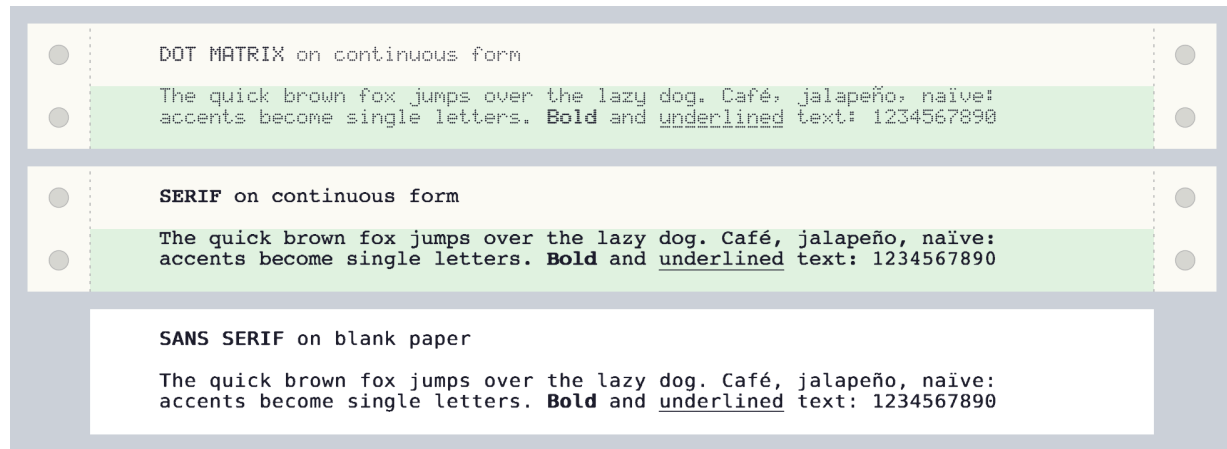


Figure 4. The three typefaces: dot matrix and serif on continuous form, and sans serif on blank paper.

Typeface	What it looks like
Dot matrix	The draft typeface of a 9-pin printer. This is the initial one
Serif	Letter quality, with serifs, like a typewriter's
Sans serif	Letter quality, without serifs

Paper	What it looks like
Continuous form	A 9.5 by 11 inch sheet with green bars and sprocket-hole strips. This is the initial one
Blank	A plain letter-size sheet, 8.5 by 11 inches

All three typefaces have the same width, 10 characters per inch, so columns and justified text come out the same with any of them. The letter-quality ones imitate a 24-pin printer: they are made of smaller, overlapping dots that only show when you zoom far into the page.

Redoing a printout

Next to each PDF, the printer keeps the data exactly as the NABU sent it, in a file with the same name and the .lst extension. With that data, the circular arrow on the web panel redoes the printout with the typeface and paper chosen at that moment. There is no need to print again from the NABU.

You can do the same from a terminal:

```
python3 /usr/local/lib/nabu/nabu-print.py --reprint print-2026-10-03-094107.pdf
```

Note. Printouts made with a release earlier than 1.3.0 do not have that data, so they do not show the arrow.

7.8 What the printer understands

The page is 80 columns by 66 lines, like an 11-inch sheet at 10 characters per inch. Longer lines wrap onto the next line.

What the program sends	Result
ASCII text, from space to ~	Printed as is
Carriage return, line feed, form feed	Honored
Tab	Moves to the next column that is a multiple of 8
Backspace	Moves back one column, to print on top
ESC E and ESC F (or ESC G and ESC H)	Turn bold on and off
ESC - 1 and ESC - 0	Turn underline on and off
ESC @	Resets the printer
Other Epson control codes	Discarded without cluttering the page

It also recognizes **overstriking**, the technique word processors such as WordStar use on simple printers: they return to the start of the line and print on top of it. The same text twice comes out bold; underscores, underlined; hyphens, struck out; an accent over a letter, the accented letter.

7.9 Where the PDFs are kept

In the ~/nabu/printer folder on the Pi, each one next to the .lst file with its original data. Besides opening them from the panel, you can copy them to your computer:

```
scp "nabu@nabu.local:nabu/printer/*.pdf" .
```

There are three things worth knowing about this folder:

- **It is not included in backups**, so they stay small.
- **It is not deleted when you update** the IA or reinstall NABU Setup.
- **It does not clean itself up.** You can delete printouts one at a time from the web panel, or delete the files; for example, the ones from September 2026, along with their original data:

```
rm ~/nabu/printer/print-2026-09-*
```

7.10 Settings

The options are at the top of the file `/usr/local/lib/nabu/nabu-print.py`:

Option	Original value	What it is for
WAIT	5	Seconds without new text before a print job is considered finished
COLS	80	Columns per line
LPP	66	Lines per page

Edit the file with `sudo nano` and restart the service:

```
sudo systemctl restart nabu-print
```

Note. When you install a new release of NABU Setup, this file is replaced and the settings go back to their original values.

The typeface and the paper are not among these options: you choose them on the web panel, and they are saved in `~/nabu/printer/.settings.json`, which does not change when you install a new release.

7.11 Converting a file by hand

The same program converts any text file into a PDF, with the typeface and paper chosen on the web panel:

```
python3 /usr/local/lib/nabu/nabu-print.py input.txt output.pdf
```

8 Backups

8.1 What they contain

A backup is a .zip file with your IA data:

- the Cloud CP/M drives, with all of their files;
- the programs you have added to the *Local Source* folder;
- the IA's settings.

Left out are the IA program itself, the download cache, the log files, and the virtual printer's PDFs. All of that can be downloaded or generated again.

Backups are saved in `~/nabu/backups` with the date and time in their name. The five most recent are kept, and older ones are deleted automatically. That folder is not included in backups either.

Note. Up to release 1.2.0, backups were saved in `~/backups`. When you install 1.3.0, any backups in that folder are moved to the new one automatically.

8.2 When they are created

- When you run `nabu backup`.
- When you press **Backup** on the web panel, which also downloads it to your device.
- Automatically before every `nabu update`.

NABU Setup does not schedule periodic backups. If you want one a week, add a line with `crontab -e`; this one runs on Sundays at 4 a.m.:

```
0 4 * * 0 /usr/local/bin/nabu backup
```

Important. The backups are on the same microSD card as the original data. If the card fails, both are lost. Every so often, download one from the panel or copy it to your computer:

```
scp "nabu@nabu.local:nabu/backups/*.zip" .
```

8.3 Restoring a backup

Stop the IA, unzip the backup into your home folder, and start it again:

```
nabu stop
unzip -o ~/nabu/backups/nabu-backup-2026-10-03-1811.zip -d ~
nabu start
```

The files in the backup replace the ones with the same name. Newer files that were not in the backup are not deleted.

9 Updates

Three things on the server are updated separately.

What	How	When
The Internet Adapter	<code>nabu update</code> or the Update IA button	When nabu.ca publishes a new release
NABU Setup	<code>nabu setup</code>	When there is a new release in the repository
The Pi's system	<code>sudo apt update && sudo apt full-upgrade -y</code>	Every so often

9.1 Updating NABU Setup

```
nabu setup
```

The command downloads the latest published release and runs its installer. When it asks about the panel password, press Enter to keep the one you have. The installer replaces the `nabu` command, the panel, the printer, and the backup tool. It does not download the IA again or restart it, and there is no need to reboot the Pi.

Use `nabu version` to check which version ended up installed.

`nabu setup` needs a terminal, because the installer asks questions; that is why it has no button on the web panel.

Updating by hand

The `nabu setup` command exists since version 1.2.0. To update an earlier installation, or to switch from one language to the other, download the script and run it just like the first time:

```
wget -O nabu-setup-en.sh \
  https://raw.githubusercontent.com/czayas/nabu-setup/main/nabu-setup-en.sh
bash nabu-setup-en.sh
```

To switch to Spanish, use `nabu-setup-es.sh` in both places.

10 Troubleshooting

Symptom	Likely cause and fix
nabu says the IA is not running	Run <code>nabu start</code> . If it stops again, check <code>nabu list</code>
The IA will not start and the log mentions <code>Curses.endwin</code>	The link to <code>libdl.so</code> is missing. Run NABU Setup again; it creates it
The IA's interface looks garbled	The terminal window is too small. It needs 100 columns by 36 rows. Enlarge it and run <code>tmux -L nabu resize-window -t nabu -x 100 -y 35</code>
RS422 adapter: NOT detected	Check the USB connection and run <code>ls /dev/ttyUSB*</code>
The IA cannot open <code>/dev/ttyUSB0</code> right after installing	The Pi still needs a reboot so your user gets access to the serial port
The NABU does not load anything	Use <code>nabu status</code> to confirm the IA is running, check the port and the <i>serial listener</i> checkbox in Settings, and check the cable
The NABU hangs partway through a load	It is almost always the cable: shorten the RS-422 run and keep it away from power cords
<code>nabu.local</code> does not respond	Use the Pi's IP address. You can find it on your router or, on the Pi, with <code>hostname -I</code>
The panel does not accept the password	Run the script again and choose a new one
Power supply: PROBLEMS	The power supply is not delivering enough current. Use the official one for your model
The PDF for a print job does not show up	Wait five seconds after printing. Use <code>nabu status</code> to confirm the printer is running, and check <code>journalctl -u nabu-print -n 20</code>
The script says the processor is ARMv6	That Pi model cannot run the IA. You need a Pi 2 or later, or a Zero 2 W

If the problem lies with the Internet Adapter itself or with a NABU program, the places to ask are the nabu.ca forums and Discord.

11 Reference

11.1 Files and folders

Location	Contents
~/nabu/	The Internet Adapter and its data
~/nabu/NABU Internet Adapter/Store/	Cloud CP/M drives and LST.TXT
~/nabu/NABU Internet Adapter/Local Source/	Local programs
~/nabu/NABU Internet Adapter/Cache/	Downloads from the cloud
~/nabu/printer/	The virtual printer's PDFs, their original data (.lst), and the typeface and paper choice
~/nabu/ia-error.log	The IA's errors
~/nabu/backups/	Backups
/usr/local/bin/nabu	Administration command
/usr/local/lib/nabu/	Web panel, virtual printer, and backup tool
/etc/nabu-ia.conf	Paths, plus the NABU Setup version and date
/etc/nabu-web.conf	Panel port and password hash
/etc/sudoers.d/nabu	Permission to control the IA service and shut down the Pi without a password

11.2 Services

Service	Role
nabu-ia	The Internet Adapter, inside a tmux session
nabu-web	The web panel, on port 80
nabu-print	The virtual printer

All three start with the Pi. You can check them with `systemctl status` and read their log with `journalctl -u`, followed by the service name.

11.3 Shutting down the Pi

Cutting the power while the system is running can damage the contents of the microSD card. If the cut happens during a write, the file being saved may be left incomplete and, less often, the card may corrupt data that had nothing to do with that write. The riskiest moments are an update, the creation of a backup, and any file being saved from the NABU.

That is why you should always shut the system down before unplugging the power supply or flipping a switch on the cable. There are three ways, and all three do the same thing:

- the **Shut down the Pi** button on the web panel;
- the `nabu poweroff` command;
- the system command `sudo poweroff`.

Then wait until the Pi's green LED stops blinking, and only then cut the power. The Pi cannot cut its own power: once the system has shut down, it sits halted, with the red LED on and minimal power draw.

To turn it back on, cut the power and restore it. Powering on carries no risk.

11.4 Uninstalling

These commands remove everything NABU Setup installed and leave your data untouched:

```
sudo systemctl disable --now nabu-ia nabu-web nabu-print
sudo rm /etc/systemd/system/nabu-ia.service /etc/systemd/system/nabu-web.service
sudo rm /etc/systemd/system/nabu-print.service /etc/sudoers.d/nabu
sudo rm /etc/nabu-ia.conf /etc/nabu-web.conf /usr/local/bin/nabu
sudo rm -r /usr/local/lib/nabu
sudo systemctl daemon-reload
```

To also delete the IA, your CP/M files, the printouts, and the backups, remove the ~/nabu folder. That part cannot be undone.

12 Resources and credits

12.1 Links

- NABU Setup repository: <https://github.com/czayas/nabu-setup>
- Retro Informática Paraguay on YouTube: <https://www.youtube.com/@retroinfopy>
- NABU Internet Adapter: <https://nabu.ca/downloads-nabu-internet-adapter>
- Using a real NABU with the IA: <https://nabu.ca/use-real-nabu-pc-computer-hardware-tutorial>
- Cloud CP/M: <https://nabu.ca/cloud-cpm>
- Cable for the NABU: <https://nabu.ca/Make-NABU-Cable>

12.2 Credits

The NABU Internet Adapter, Cloud CP/M, and RetroNET are the work of DJ Sures. NABU Setup only automates their installation on a Raspberry Pi and adds administration tools.

The virtual printer's letter-quality typefaces were derived from Courier 10 Pitch and DejaVu Sans Mono, two freely licensed typefaces. Their copyright notices are in the NOTICE.md file of the repository.

NABU Setup and this manual are a project by Retro Informática Paraguay.

12.3 License

NABU Setup and its documentation are distributed under the BSD 2-Clause License. You may use, modify, and redistribute them, as long as you keep the copyright notice and the license text. The full text is in the repository's LICENSE file.

The license covers NABU Setup only. The NABU Internet Adapter is a separate program, with its own terms, which the script downloads from its author's site.

12.4 Sources for the historical overview

- Historical Society of Ottawa, *The NABU Network*: <https://www.historicalsocietyottawa.ca/publications/ottawa-stories/significant-technological-changes-in-the-city/the-nabu-network>
- York University Computer Museum, *NABU Adaptor*: <https://museum.eecs.yorku.ca/items/show/12>
- Wikipedia, *NABU Network*: https://en.wikipedia.org/wiki/NABU_Network
- NabuNetwork.com, *A brief history on the 2022 NABU Computer Fever*: <https://www.nabunetwork.com/a-brief-history-on-the-2022-nabu-computer-craze/>
- Gizmodo, *Why 2,000 NABU PCs appeared on eBay*: <https://gizmodo.com/why-2-000-nabu-pcs-appeared-on-ebay-1850586784>
- Microsoft Learn, *.NET IoT Libraries*, on the Raspberry Pi models .NET supports: <https://learn.microsoft.com/en-us/dotnet/iot/intro>

13 Revision history

Revision	Date	NABU Setup	Changes
1	2026-10-03	1.0.0	First release
2	2026-10-04	1.1.0	Safe shutdown: nabu poweroff command and Shut down the Pi button on the web panel
3	2026-10-04	1.2.0	nabu setup command for updating NABU Setup
4	2026-10-05	1.3.0	Accented letters on the virtual printer, printing from WordStar, choice of typeface and paper, deleting and redoing printouts from the web panel, and backups in ~/nabu/backups