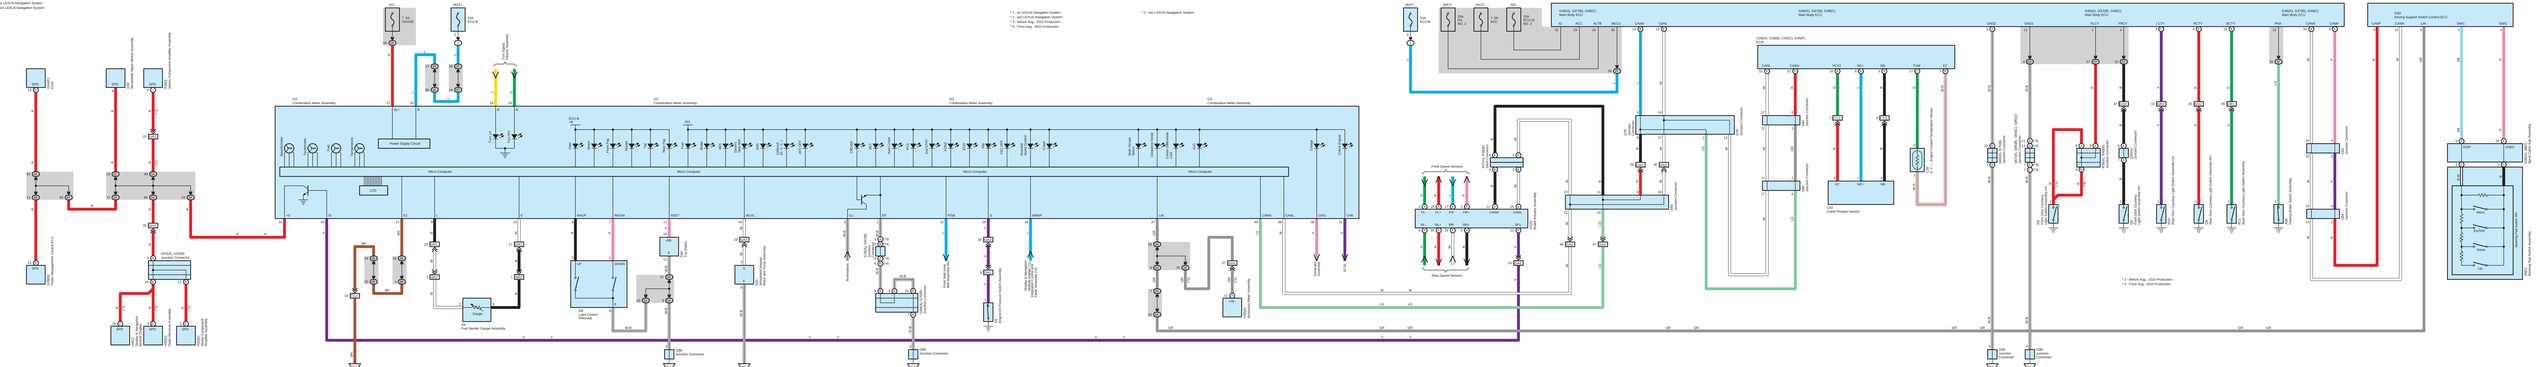
*1 : w/ LEXUS Navigation System
*2 : w/o LEXUS Navigation System
*3 : Before Aug. 2010 Production
*4 : From Aug. 2010 Production
Combination Meter Assembly
Power Supply Circuit
Micro Computer
Fuel Sender Gauge Assembly
Junction Connector
Steering Lock Unit
Engine Immobilizer Control Unit
Front Speaker Assembly
Rear Speaker Assembly
Front Speed Sensor
Rear Speed Sensor
Crank Position Sensor
Cooling Fan Motor Assembly
Cooling Fan Relay
Cooling Fan Relay No.1
Cooling Fan Relay No.2
Cooling Fan Relay No.3
Main Body ECU
Driving Support Switch Control ECU
Steering Lock Unit
Engine Immobilizer Control Unit
Front Door Lock Assembly
Rear Door Lock Assembly
Front Door Key Cylinder Light Switch Assembly
Rear Door Key Cylinder Light Switch Assembly
Front Door Inside Handle Assembly
Rear Door Inside Handle Assembly
Front Door Outside Handle Assembly
Rear Door Outside Handle Assembly
Front Door Lock Control Actuator
Rear Door Lock Control Actuator
Front Door Lock Assembly
Rear Door Lock Assembly
Front Door Glass Sash Switch Assembly
Rear Door Glass Sash Switch Assembly
Front Door Glass Hole Switch Assembly
Rear Door Glass Hole Switch Assembly
Front Door Glass Hole Motor Assembly
Rear Door Glass Hole Motor