Tandy 1000 External Gotek Adapter Instructions

The Adapter is Keyed and can only be installed one way – line up the power connector and floppy connector and gently but firmly insert into the back of the Gotek Drive. Make sure you select the correct drive letter for your Gotek before installation – the Jumper needs to be S1 for external use with EX/HX machines.

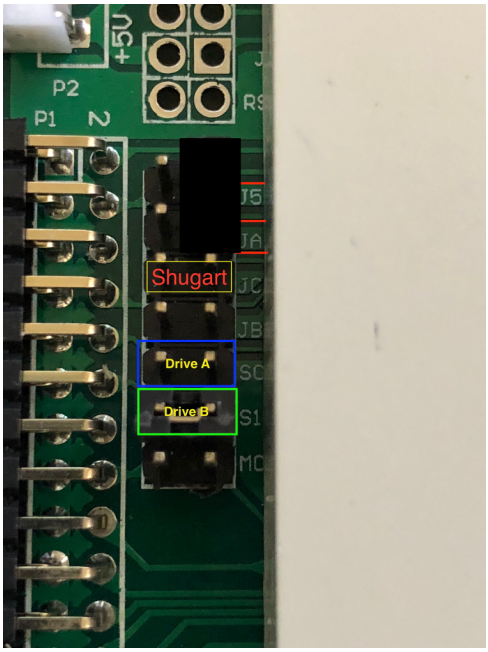

Connector JC =
PC mode when Closed
Shugart mode when Open

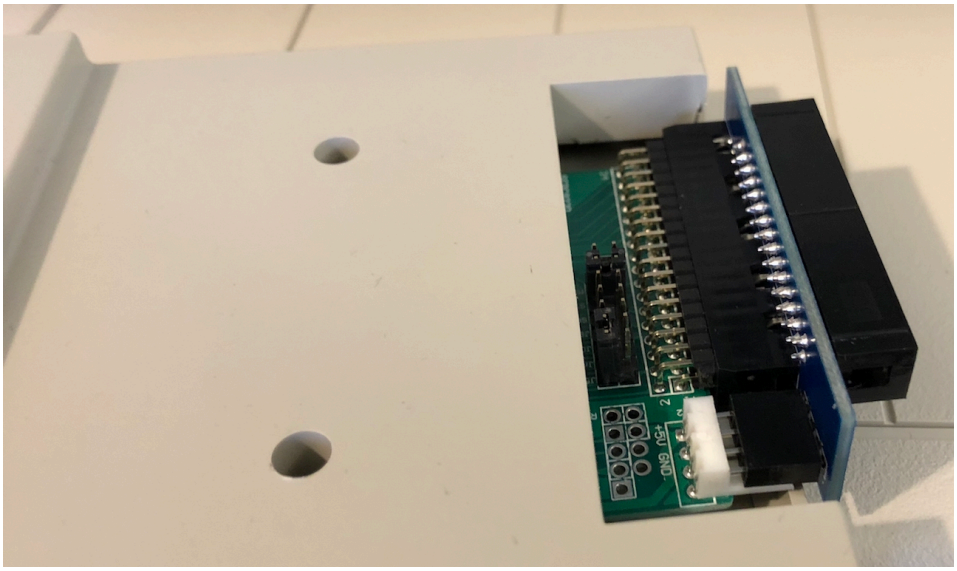

Thanks for buying my product, I hope it provides you with as much enjoyment as I had making them.

Regards dJOS

Tandy 1000 EX & HX External 3.5” Adapter Instructions

The Adapter is Keyed and can only be installed one way – most brands of 3.5” Floppy drives have the notch at bottom integrated into the PCB itself.

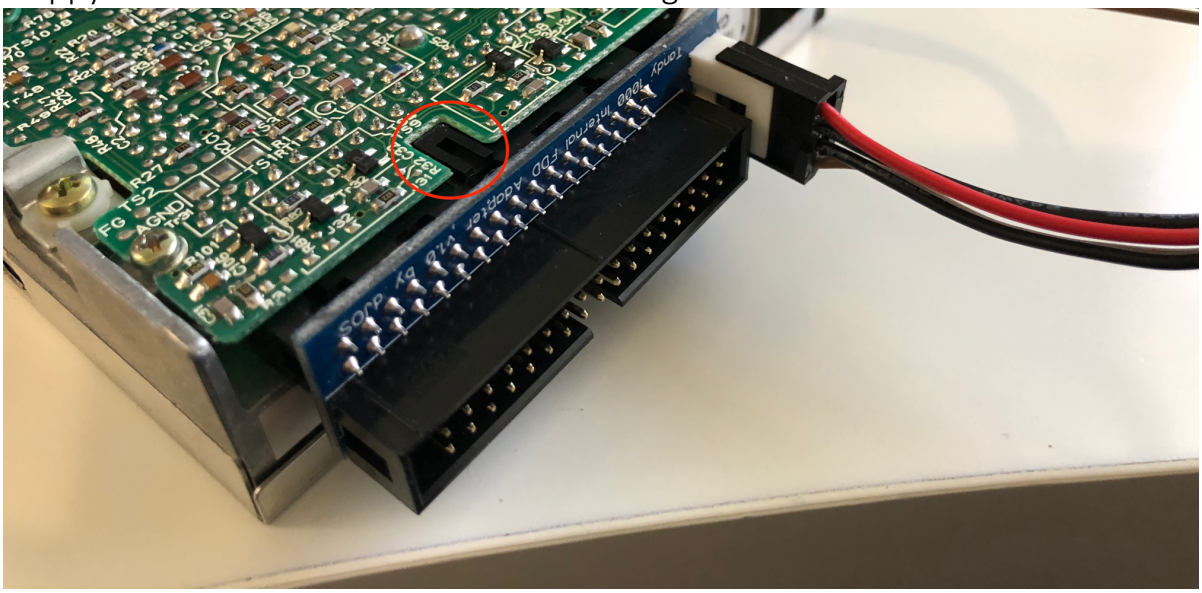

Make sure you select the correct drive letter for your Floppy Drive before installation. On most drives, DS0 = A, DS1 = B – the Jumper needs to be on DS1 (Drive B) for external use with EX and HX machines.

The Floppy Power Cable needed is the same as those used on Amiga 500 and Atari ST Computers.

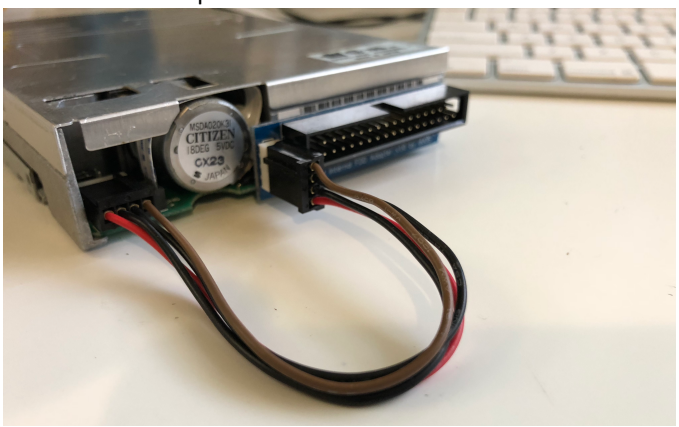

Thanks for buying my product, I hope it provides you with as much enjoyment as I had making them.

Regards dJOS

Tandy 1000 EX & HX External 5.25” Adapter Instructions

The Adapter is NOT Keyed but MUST only be installed one way – with the writing upside down (I really must fix the silk-screen).

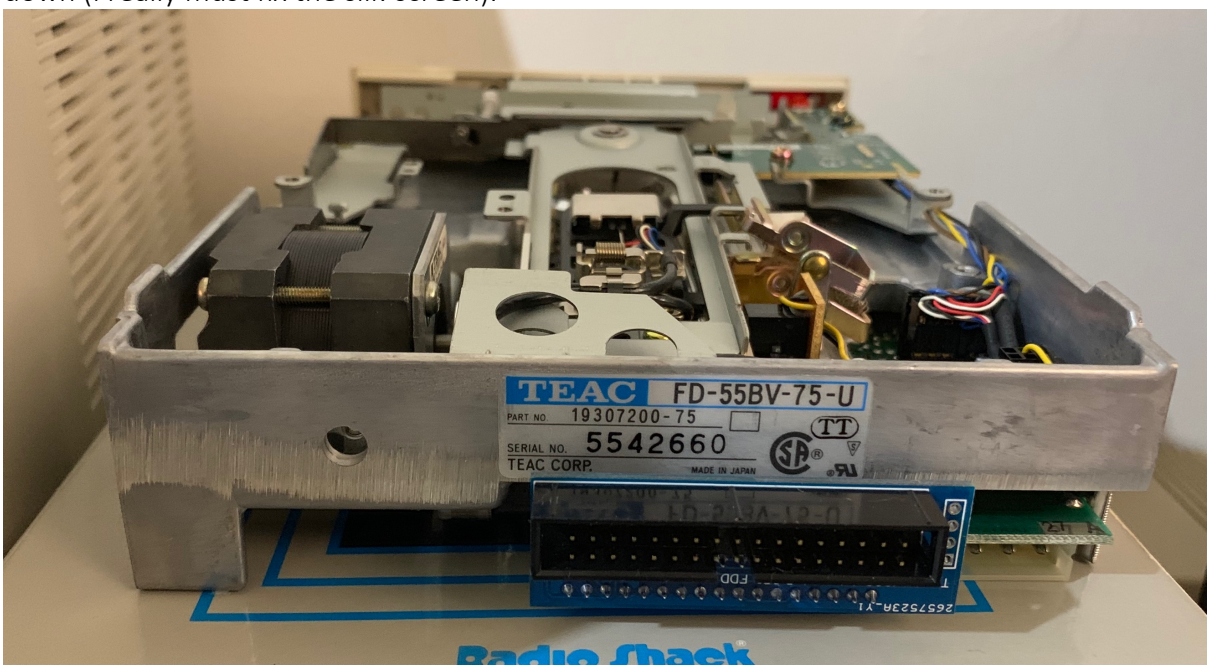

Make sure you select the correct drive letter for your Floppy Drive before installation. On most drives, DS0 = A, DS1 = B etc. The Jumper needs to be on DS1 (Drive B) for external use with EX and HX machines.

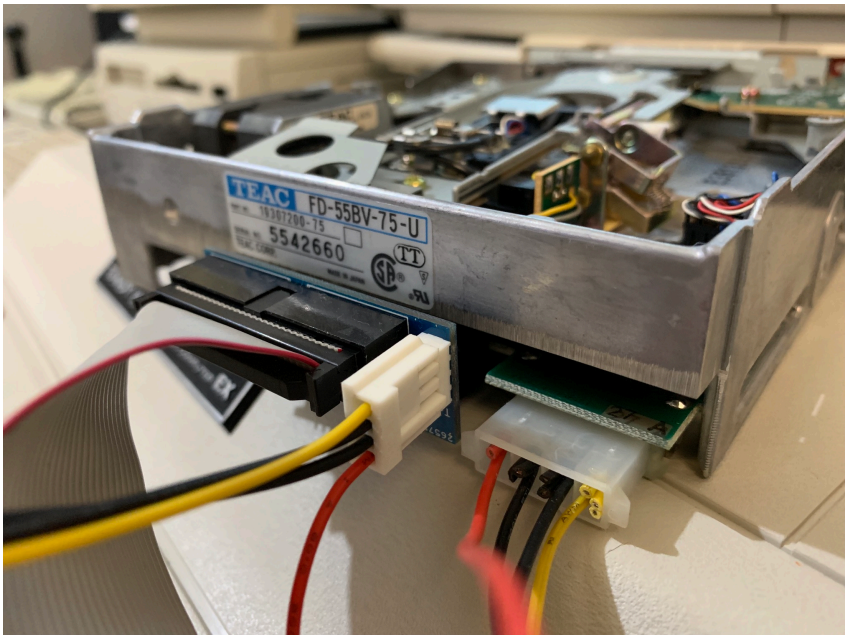

Thanks for buying my product, I hope it provides you with as much enjoyment as I had making them.
Regards dJOS