


Monitor Device System-Level Information



For supported software information, click here.


To monitor device system-level information on a Versa Operating SystemTM (VOSTM) device:

- 1. In Director view:
 - a. Select the Configuration tab in the top menu bar.
 - b. Select Devices > Devices in the horizontal menu bar.
 - c. Select a device in the main pane. The view changes to Appliance view.
- 2. Select the Monitor tab in the top menu bar.
- 3. Select the provider organization in the left menu bar.
- 4. Select the System tab in the horizontal menu bar.

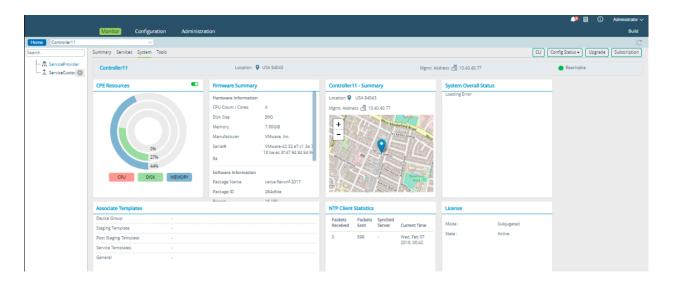


This screen displays information about the following system-level resources:


• CPE Resources—Displays CPU, disk, and memory usage for all devices.

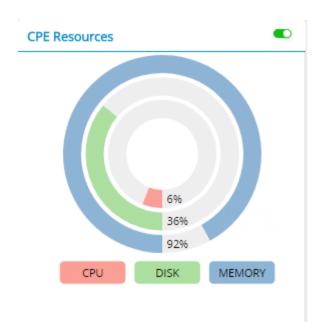


• Firmware Summary—Displays the hardware and software system-level information.

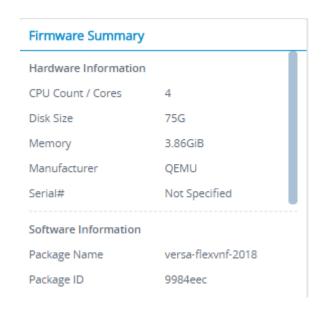

• Device Summary—Displays a map showing the device location and address.

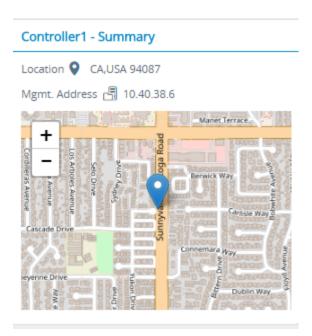

• System Overall Status—Displays the status of all processes running on the system.

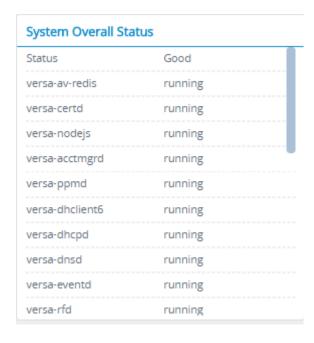

• Associate Templates—Displays the names of the templates associated with the device.

Associate Templates			

• NTP Client Statistics—Displays the NTP and time statistics.

NTP Client Statistics			
Packets Received	Packets Sent	Synched Server	Current Time
0	0	-	Thu, Feb 08 2018, 20:51

• License—Displays the license mode and status.

License	
Mode :	Subjugated
State :	Active

Supported Software Information

Releases 20.2 and later support all content described in this article.