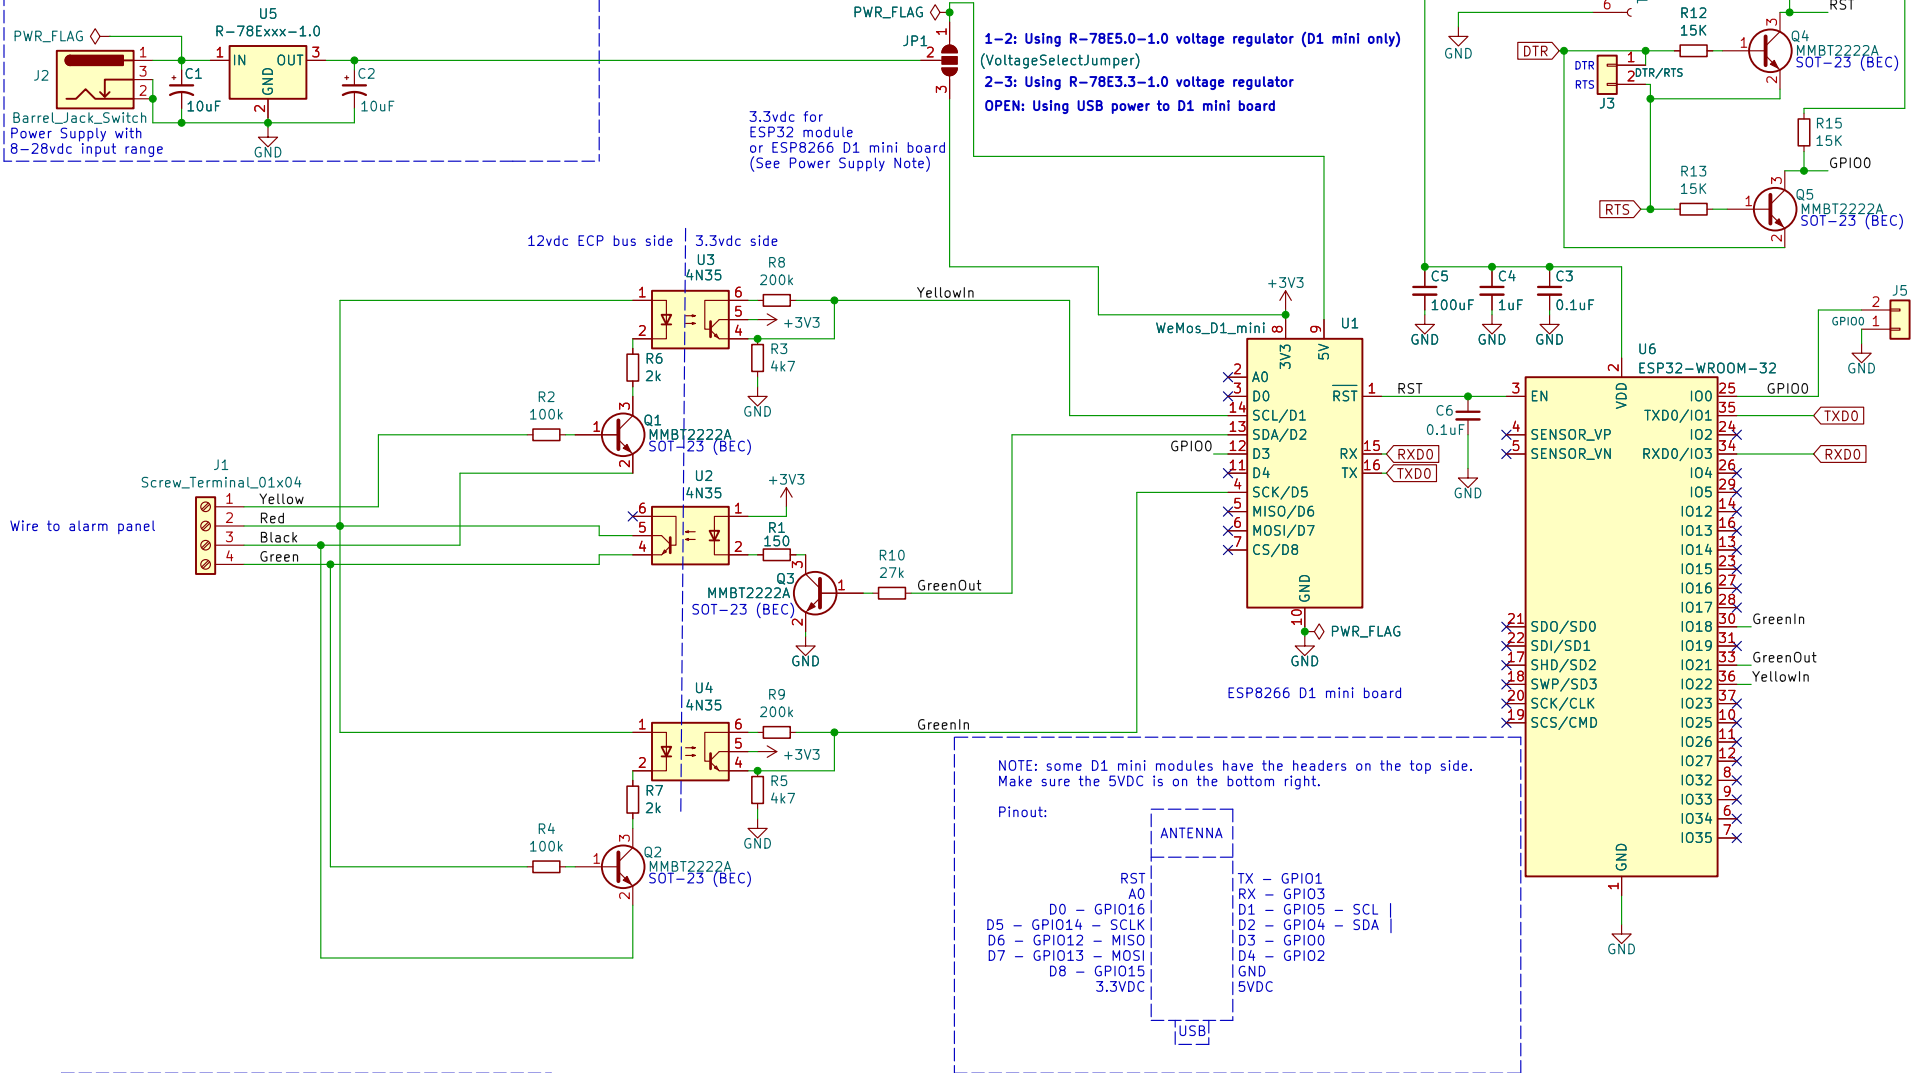


POWER SUPPLY NOTES:

If using ESP8266 D1 mini board, use 5v Power Supply (R-78E5.0-1.0) or 3.3v (R-78E3.3-1.0) and jumper JP1 accordingly (see note)
- or you can supply power using USB to U1 and leave JP1 open
If using ESP32-WROOM-32 module, use 3.3v Power Supply (R-78E3.3-1.0) and jumper pads 2-3 on JP1

**NOTE:**

The software is created and maintained by Alain Turbide
See <https://github.com/Dilbert66/esphome-vistaECP>
for software, setup instructions, etc

ECP 4-wire interface
for Honeywell (Ademco) Alarm Panels
such as Vista 20P
using either an ESP32 module
or an ESP8266 D1 mini board
Dan Baker danbaker411@gmail.com

Based on a modified (by Andrew Selle : eselle) version
of Alain Turbide : Dilbert66's original schematic

Sheet: /
File: vistaECP.kicad_sch

Title: ECP interface for Honeywell Vista 20P Alarm Panels + others

Size: USLetter Date: 2022-07-01
KiCad E.D.A. 10.0.6

Rev:
Id: 1/1