Remote Pressure Sensor Wiring

Waveshare ESP32-S3 Touch AMOLED 1.75 - H2 8-pin header, back side view

Orientation: back of remote facing you, USB-C connector on the right, 8-pin header along the bottom.

Pressure Sensor Cable

0-2 MPa sensor, 0.4-2.4V output

SUP / +5V IN	sensor power
OUT / SIGNAL	pressure voltage
GND	common ground

Battery Charging Input

Use a regulated 5V source:

+5V -> H2 pin 8 / VBUS

GND -> H2 pin 7 / GND

MX1.25 battery stays on battery connector.

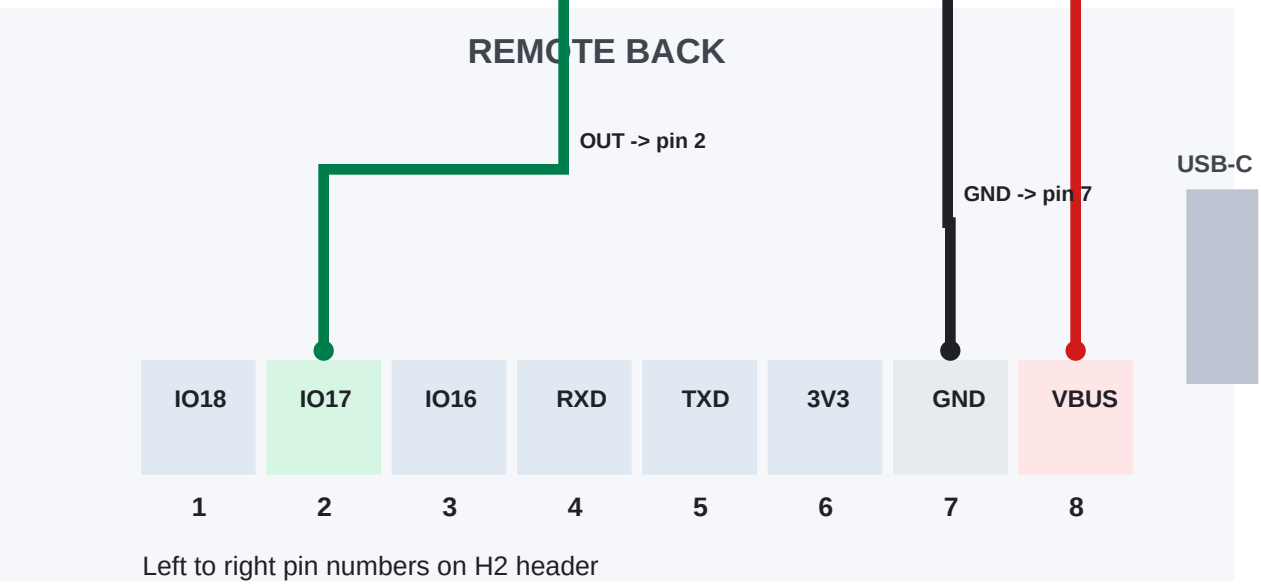

Left to right pin numbers on H2 header

Connections

Sensor SUP / +5V	H2 pin 8	VBUS / 5V power
Sensor OUT	H2 pin 2	IO17 ADC input, firmware pressure signal
Sensor GND	H2 pin 7	GND, common with remote
External 5V charger +	H2 pin 8	VBUS / PMIC charge input
External 5V charger -	H2 pin 7	GND, common with battery charger

Notes

Do not feed 5V into IO17 or any GPIO. Sensor OUT must stay in the 0.4-2.4V range.

To charge the MX1.25 battery, feed regulated 5V only into H2 pin 8 and GND into H2 pin 7.

Do not connect the LiPo battery to H2. It must stay on the MX1.25 battery connector.

Generated from firmware setting: kPressureSensorAdcPin = GPIO17.

Source pinout: Waveshare ESP32-S3-Touch-AMOLED-1.75 documentation and schematic.