Remote Pressure Sensor Wiring

Waveshare ESP32-S3 Touch AMOLED 1.75 - H2 8-pin header, back side view

Orientation: back of remote facing you, USB-C connector on the right, 8-pin header along the bottom.

Pressure Sensor Cable

0-2 MPa sensor, 0.4-2.4V output

SUP / +5V IN	sensor power
OUT / SIGNAL	pressure voltage
GND	common ground

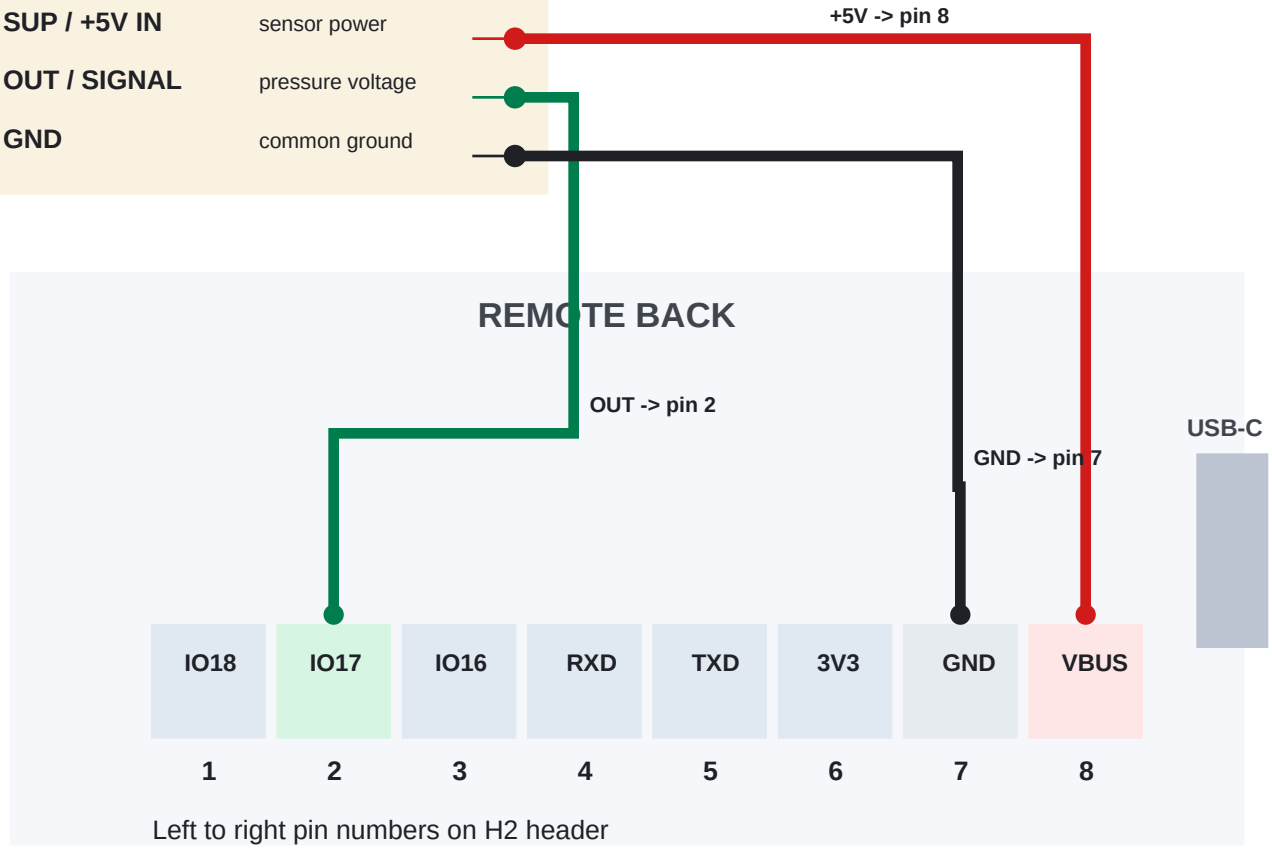

Left to right pin numbers on H2 header

Connections

Sensor SUP / +5V	H2 pin 8	VBUS / 5V power
Sensor OUT	H2 pin 2	IO17 ADC input, firmware pressure signal
Sensor GND	H2 pin 7	GND, common with remote

Notes

Do not feed 5V into IO17. Sensor OUT must stay in the 0.4-2.4V range.
VBUS is 5V from USB-C. For battery-only profiling, use a small 5V boost supply for the sensor.
If your cable colors differ, follow the sensor labels: SUP, OUT, and GND.

Generated from firmware setting: kPressureSensorAdcPin = GPIO17.
Source pinout: Waveshare ESP32-S3-Touch-AMOLED-1.75 documentation and schematic.