Автономная некоммерческая образовательная организация высшего образования Центросоюза Российской Федерации «Сибирский университет потребительской кооперации»

ОТЧЁТ

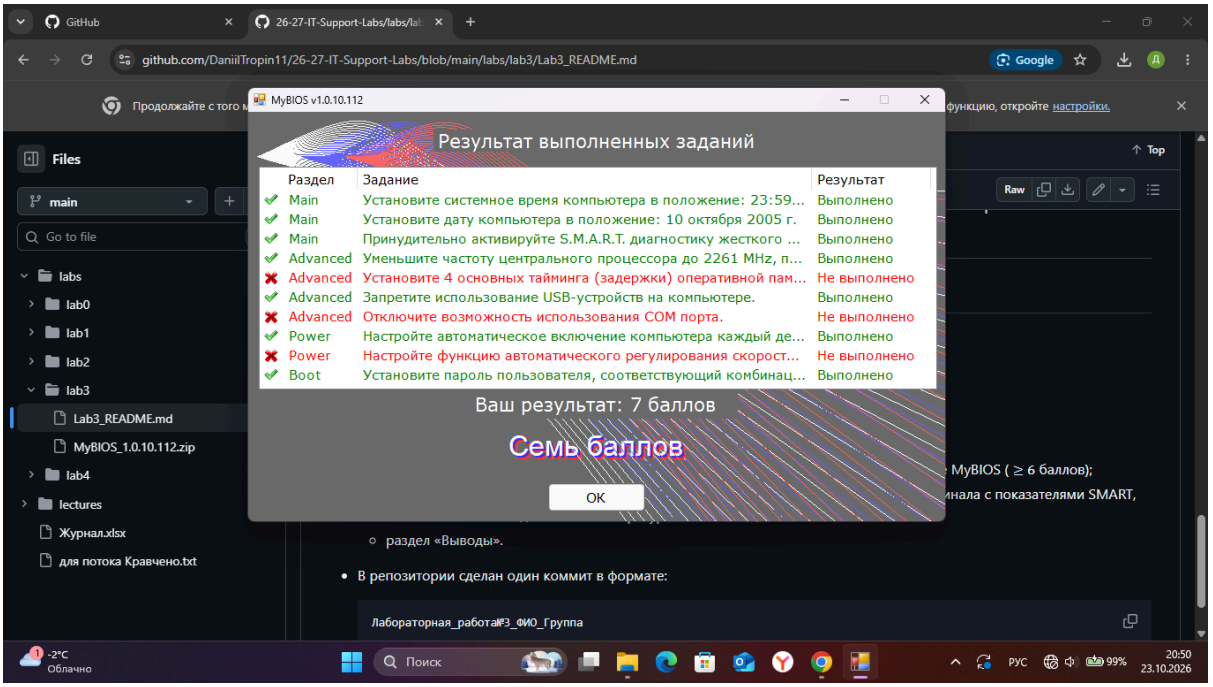
по лабораторной работе №3

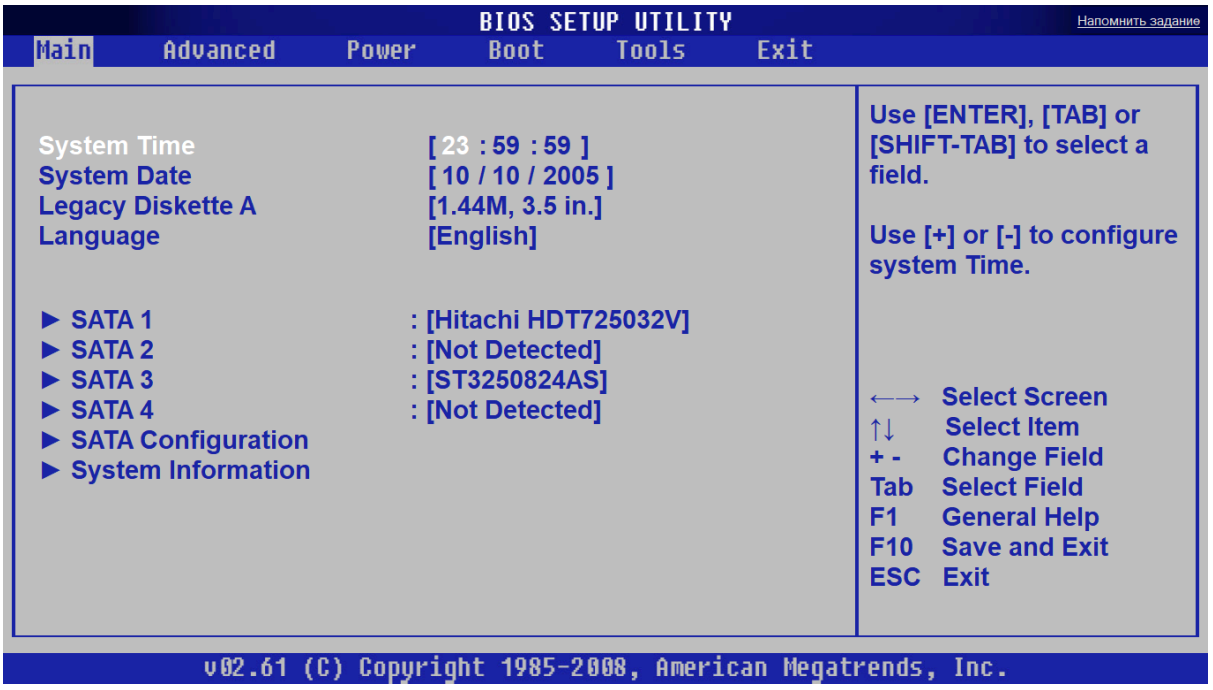
“Работа с базовой системой ввода-вывода (BIOS) и диагностика накопителей (SMART)”

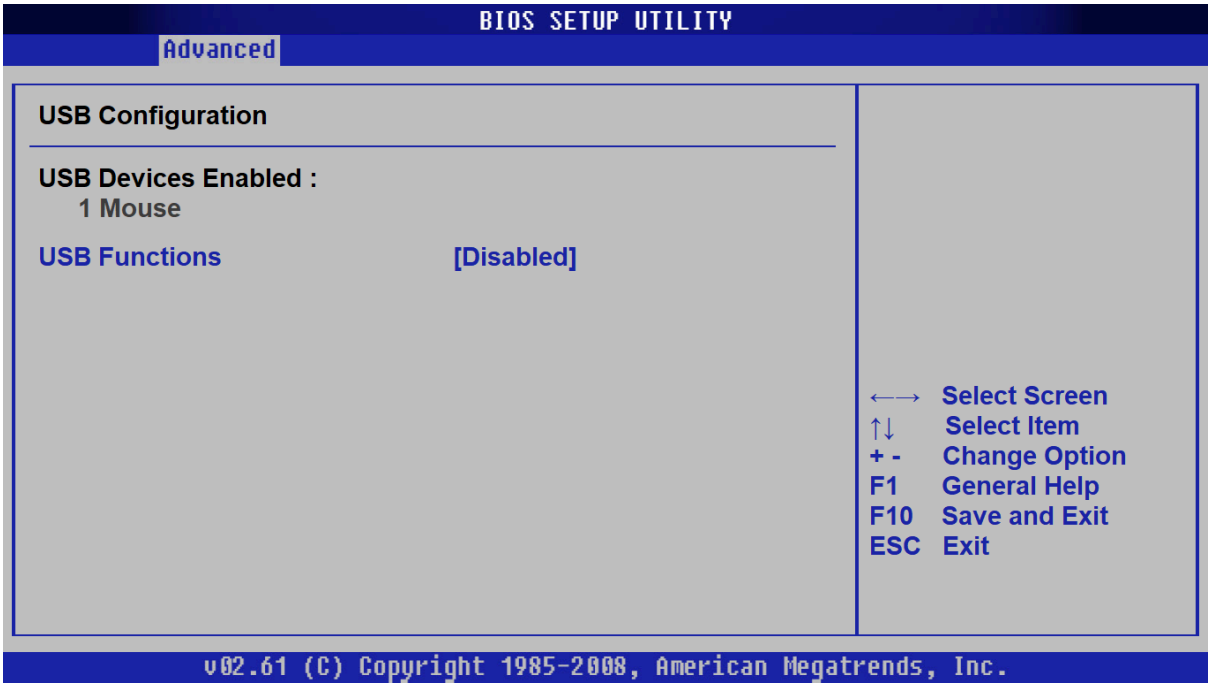
Дисциплина: Инженерно-техническая поддержка ИС

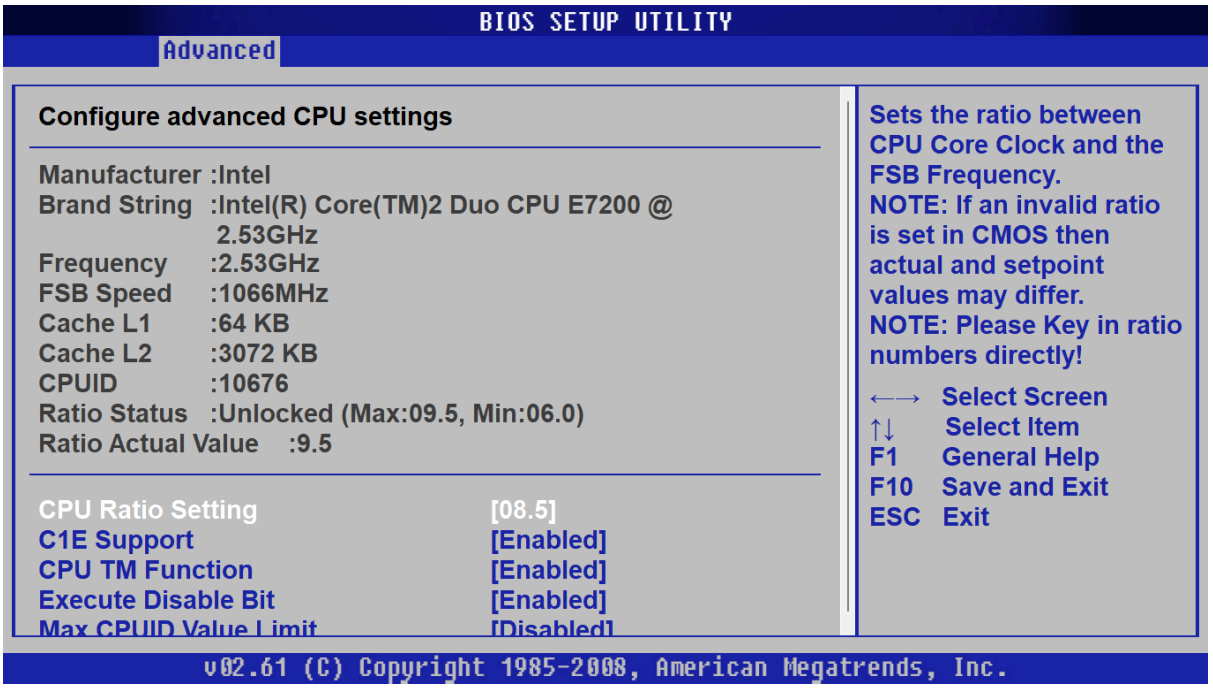
Выполнил студент: Артемьев Данил Витальевич
Группа/курс: ИСП-34, 4 курс
Шифр студента: ISPO0123004

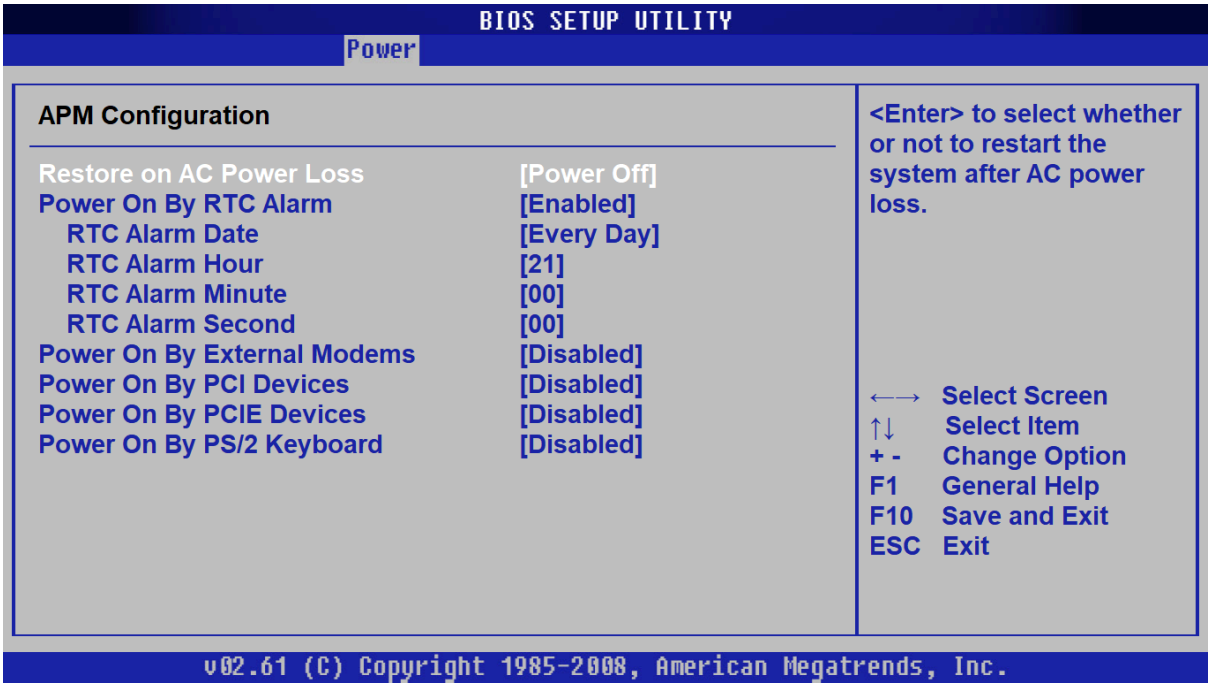
Задание 1.

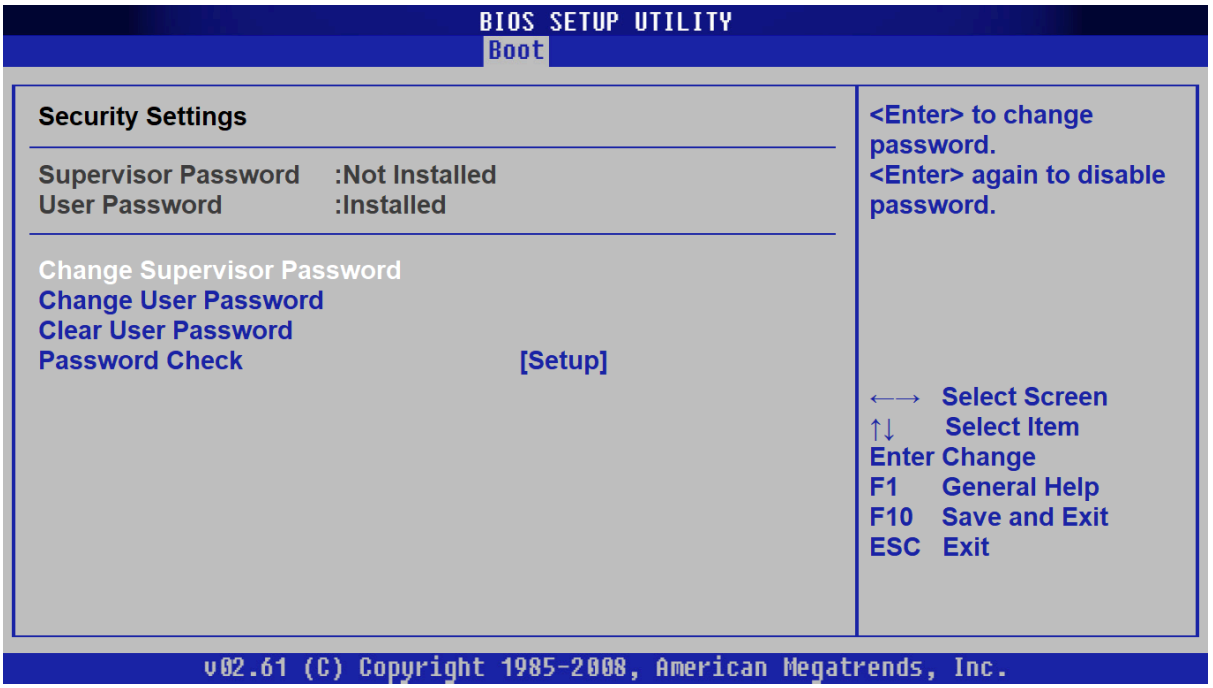

MyBIOS v1.0.10.112
Результат выполненных заданий
Раздел Задание Результат
Main Установите системное время компьютера в положение: 23:59... Выполнено
Main Установите дату компьютера в положение: 10 октября 2005 г. Выполнено
Main Принудительно активируйте S.M.A.R.T. диагностику жесткого ... Выполнено
Advanced Уменьшите частоту центрального процессора до 2261 MHz, п... Выполнено
Advanced Установите 4 основных тайминга (задержки) оперативной пам... Не выполнено
Advanced Запретите использование USB-устройств на компьютере. Выполнено
Advanced Отключите возможность использования COM порта. Не выполнено
Power Настройте автоматическое включение компьютера каждый де... Выполнено
Power Настройте функцию автоматического регулирования скорост... Не выполнено
Boot Установите пароль пользователя, соответствующий комбинац... Выполнено
Ваш результат: 7 баллов
Семь баллов
OK


BIOS SETUP UTILITY
Напомнить задание
Main Advanced Power Boot Tools Exit
System Time [23 : 59 : 59]
System Date [10 / 10 / 2005]
Legacy Diskette A [1.44M, 3.5 in.]
Language [English]
► SATA 1 : [Hitachi HDT725032V]
► SATA 2 : [Not Detected]
► SATA 3 : [ST3250824AS]
► SATA 4 : [Not Detected]
► SATA Configuration
► System Information
Use [ENTER], [TAB] or [SHIFT-TAB] to select a field.
Use [+] or [-] to configure system Time.
←→ Select Screen
↑↓ Select Item
+ - Change Field
Tab Select Field
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C) Copyright 1985-2008, American Megatrends, Inc.

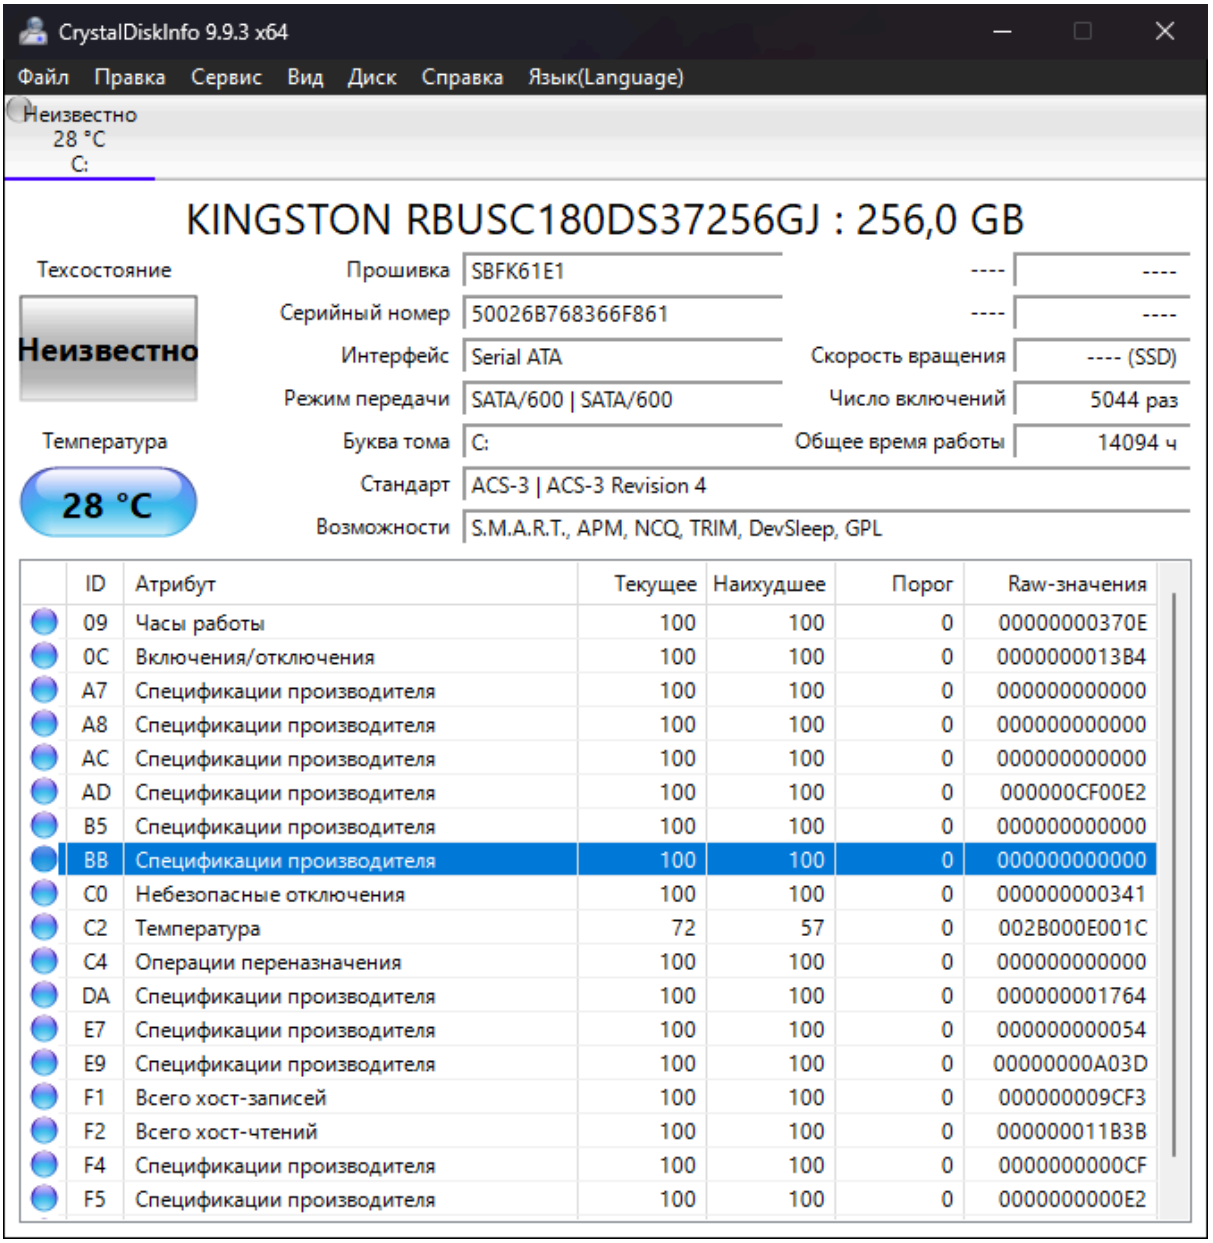

BIOS SETUP UTILITY
Advanced
USB Configuration
USB Devices Enabled :
1 Mouse
USB Functions [Disabled]
←→ Select Screen
↑↓ Select Item
+ - Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C) Copyright 1985-2008, American Megatrends, Inc.


BIOS SETUP UTILITY
Advanced
Configure advanced CPU settings
Manufacturer :Intel
Brand String :Intel(R) Core(TM)2 Duo CPU E7200 @ 2.53GHz
Frequency :2.53GHz
FSB Speed :1066MHz
Cache L1 :64 KB
Cache L2 :3072 KB
CPUID :10676
Ratio Status :Unlocked (Max:09.5, Min:06.0)
Ratio Actual Value :9.5
CPU Ratio Setting [08.5]
C1E Support [Enabled]
CPU TM Function [Enabled]
Execute Disable Bit [Enabled]
Max CPUID Value Limit [Disabled]
Sets the ratio between CPU Core Clock and the FSB Frequency.
NOTE: If an invalid ratio is set in CMOS then actual and setpoint values may differ.
NOTE: Please Key in ratio numbers directly!
←→ Select Screen
↑↓ Select Item
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C) Copyright 1985-2008, American Megatrends, Inc.


BIOS SETUP UTILITY
Power
APM Configuration
Restore on AC Power Loss [Power Off]
Power On By RTC Alarm [Enabled]
RTC Alarm Date [Every Day]
RTC Alarm Hour [21]
RTC Alarm Minute [00]
RTC Alarm Second [00]
Power On By External Modems [Disabled]
Power On By PCI Devices [Disabled]
Power On By PCIE Devices [Disabled]
Power On By PS/2 Keyboard [Disabled]
<Enter> to select whether or not to restart the system after AC power loss.
←→ Select Screen
↑↓ Select Item
+ - Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C) Copyright 1985-2008, American Megatrends, Inc.


BIOS SETUP UTILITY
Boot
Security Settings
Supervisor Password :Not Installed
User Password :Installed
Change Supervisor Password
Change User Password
Clear User Password
Password Check [Setup]
<Enter> to change password.
<Enter> again to disable password.
←→ Select Screen
↑↓ Select Item
Enter Change
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C) Copyright 1985-2008, American Megatrends, Inc.

Задание 2.



ID	Атрибут	Текущее	Наихудшее	Порог	Raw-значения
09	Часы работы	100	100	0	00000000370E
0C	Включения/отключения	100	100	0	0000000013B4
A7	Спецификации производителя	100	100	0	000000000000
A8	Спецификации производителя	100	100	0	000000000000
AC	Спецификации производителя	100	100	0	000000000000
AD	Спецификации производителя	100	100	0	000000CF00E2
B5	Спецификации производителя	100	100	0	000000000000
BB	Спецификации производителя	100	100	0	000000000000
C0	Небезопасные отключения	100	100	0	000000000341
C2	Температура	72	57	0	002B000E001C
C4	Операции переназначения	100	100	0	000000000000
DA	Спецификации производителя	100	100	0	000000001764
E7	Спецификации производителя	100	100	0	000000000054
E9	Спецификации производителя	100	100	0	00000000A03D
F1	Всего хост-записей	100	100	0	000000009CF3
F2	Всего хост-чтений	100	100	0	000000011B3B
F4	Спецификации производителя	100	100	0	0000000000CF
F5	Спецификации производителя	100	100	0	0000000000E2