Quick Start Guide

Using App

© 2016 Group 5G

Smart Meter
Smart Receptacle

SMSR 5G

1

Opening App

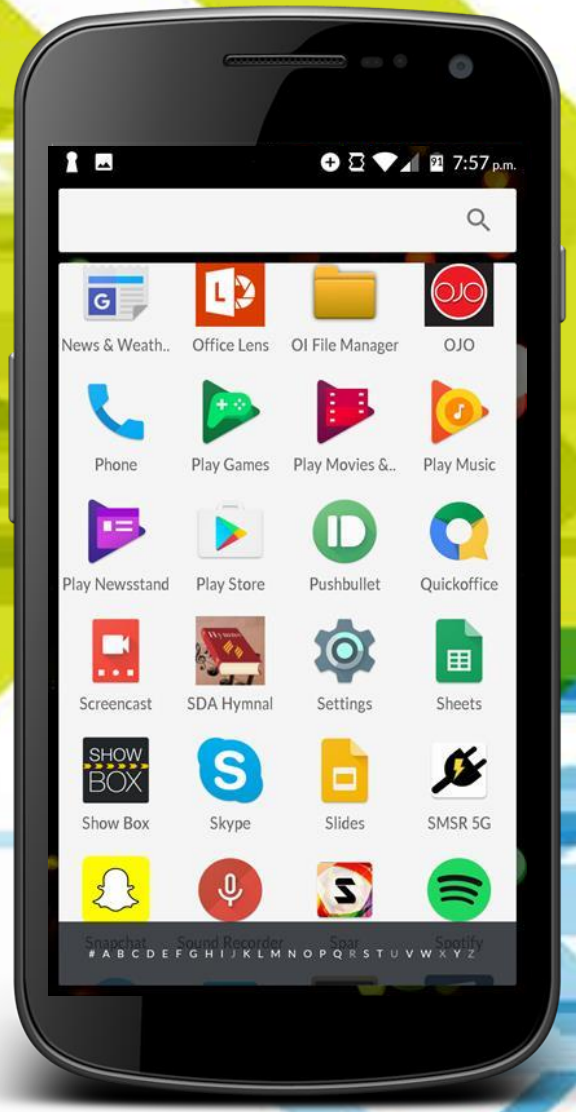

Open the Application

Click on the SMSR 5G Application icon from your application drawer

SMSR 5G

2

Set Up App

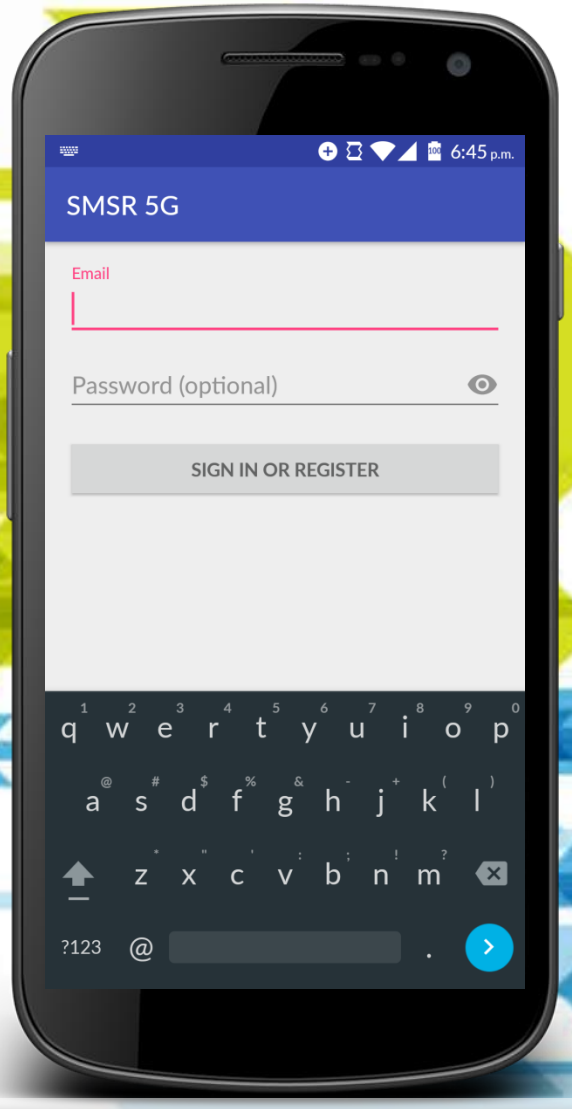

Login To App

Using account credentials provided by subscriber

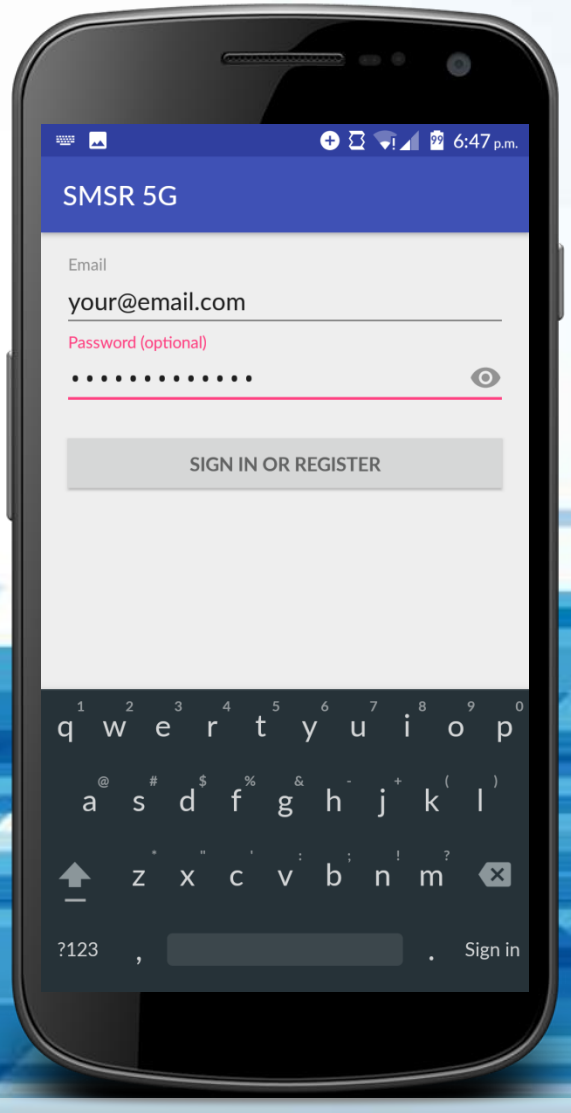

Login To App

Using account credentials provided by subscriber

SMSR 5G

3

Change Key

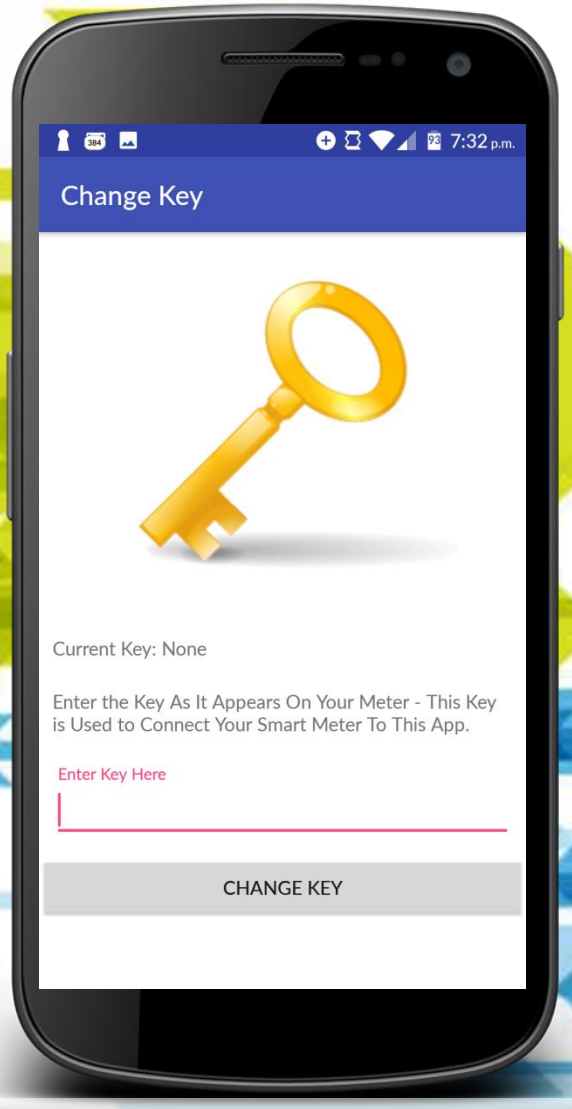

Connect to Meter

Using meter key provided by subscriber

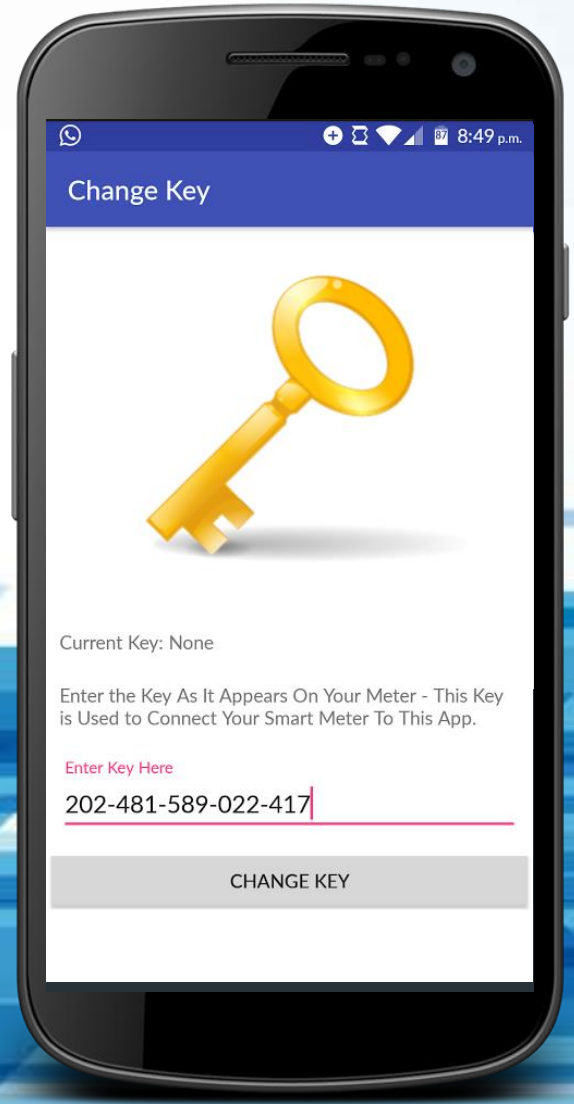

Connect to Meter

Using meter key provided by subscriber

SMSR 5G

4

Set Cost Per Watt

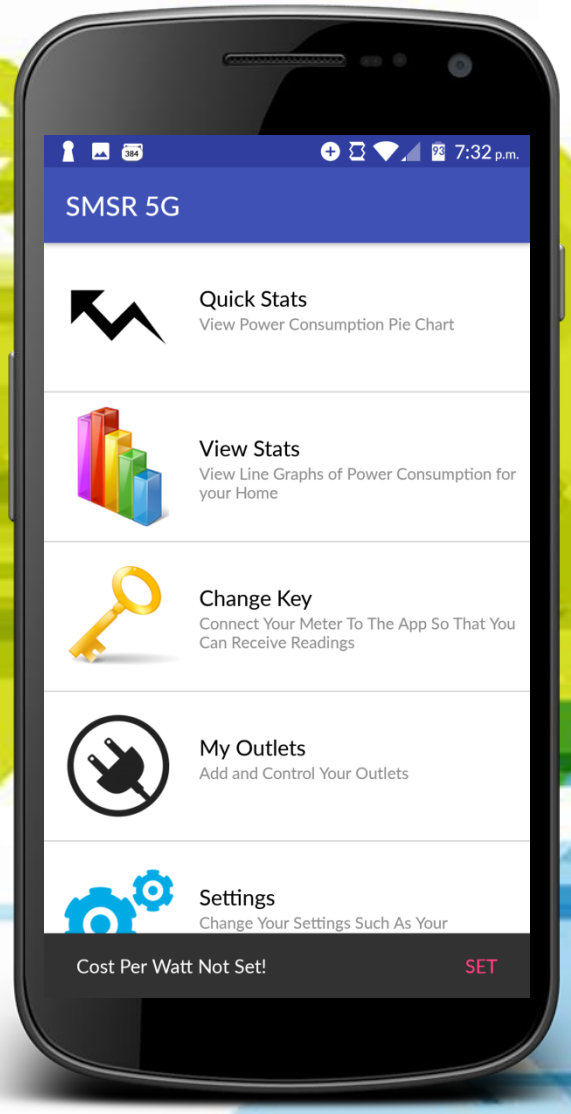

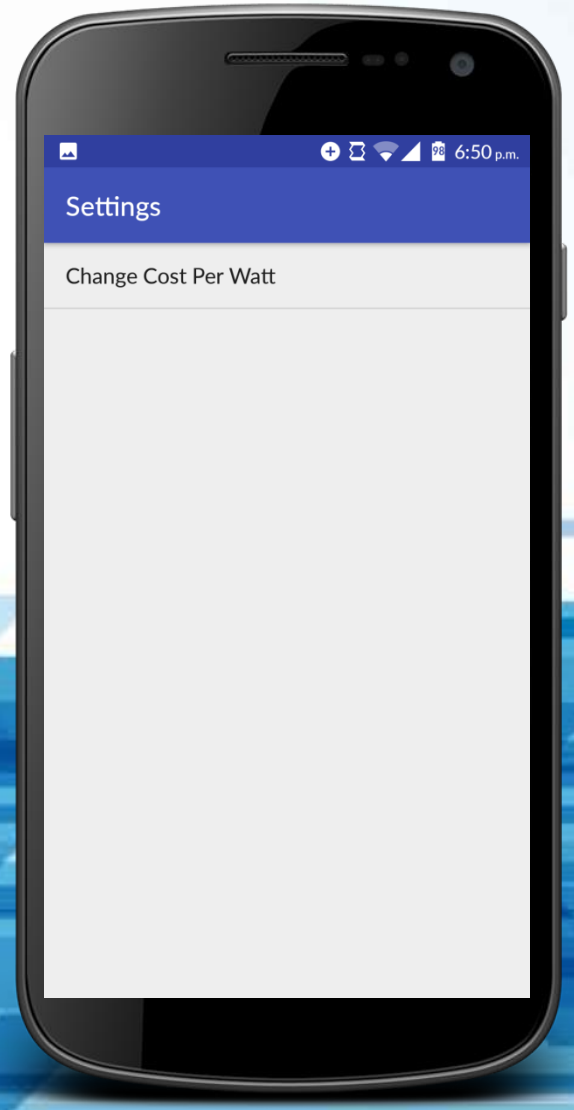

SMSR 5G

Set Cost Per Watt

Click on SET to enter the setting to change the cost per watt.

Set Cost Per Watt

Click on Change Cost Per Watt

4

Set Cost Per Watt

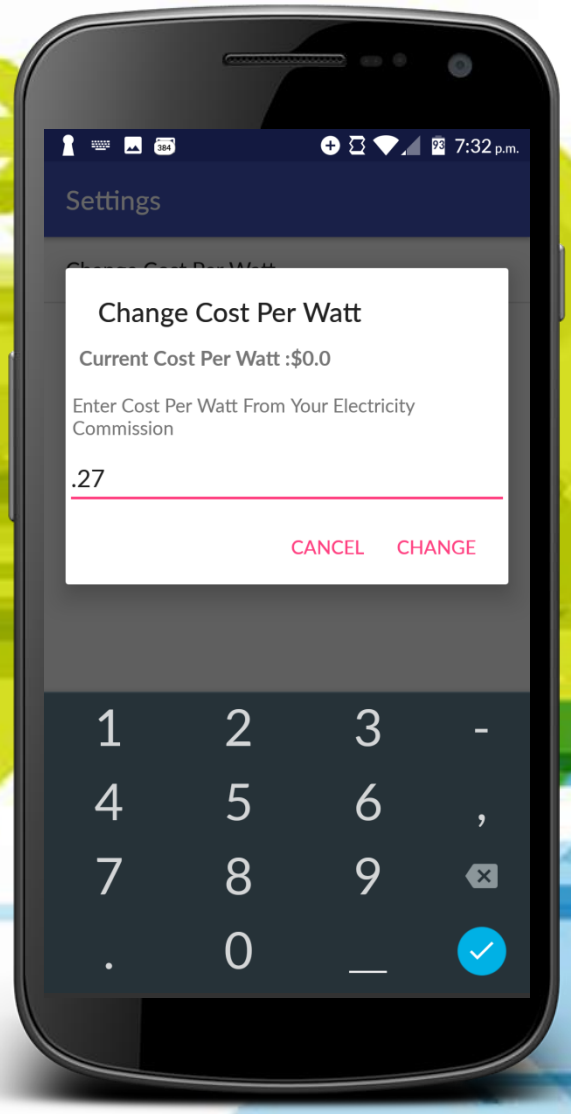

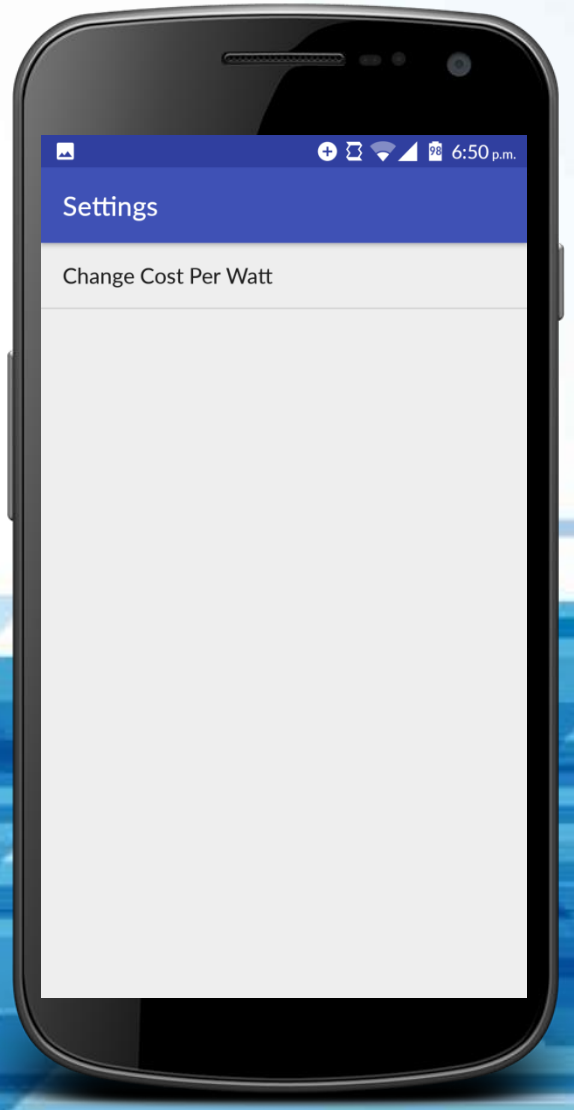

SMSR 5G

Set Cost Per Watt

Utility Company Power Consumption Charging Rate

Cost Per Watt Set

5

Quick Stats

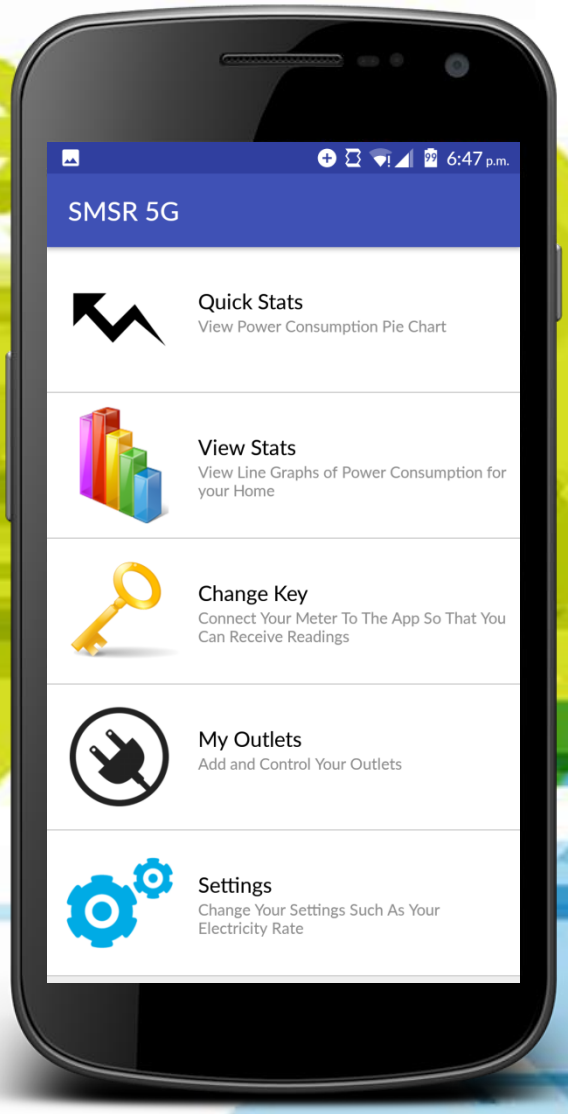

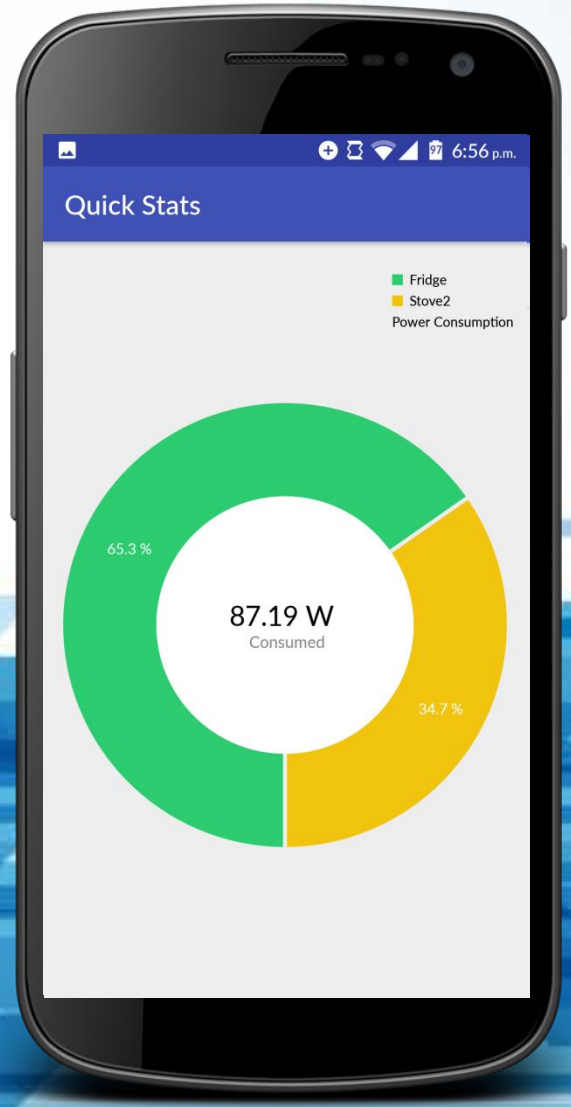

SMSR 5G

View Quick Stats

Click on Quick stats to view power consumption pie chart

Quick Stats Chart

View Appliances and their percentage consumptions of the total

6

View Stats

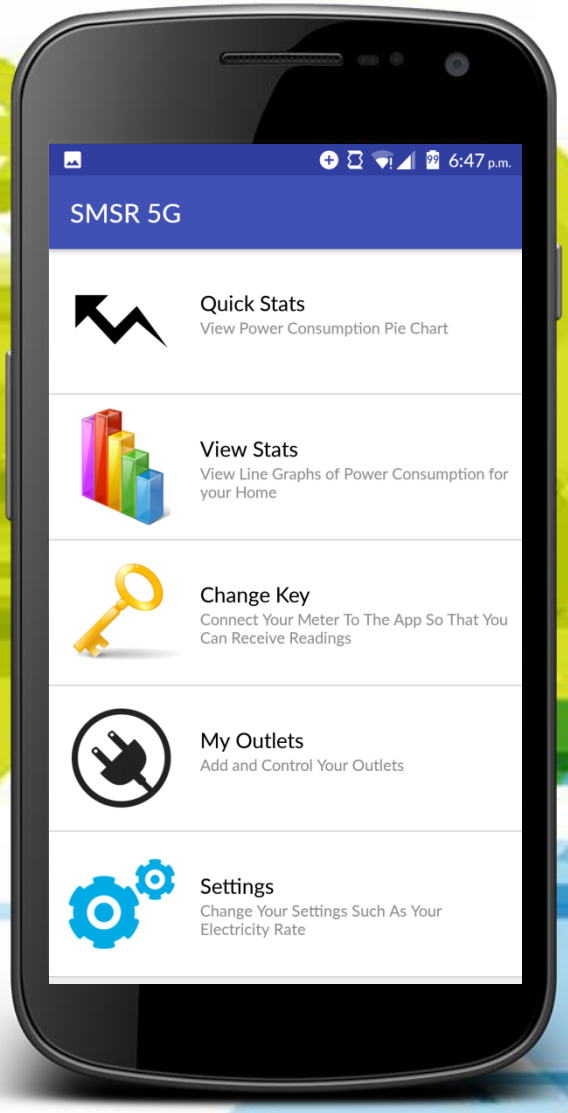

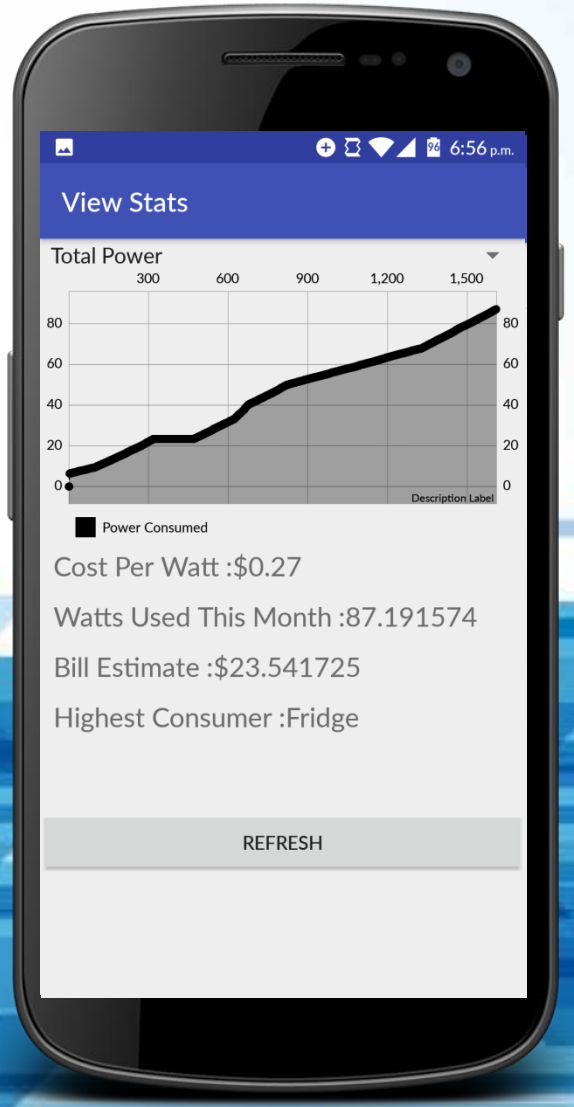

SMSR 5G

View Stats

Click on View Stats to view power consumption line graphs

View Stats

View line graph of total power consumption and information summary

6

View Stats

SMSR 5G

View Stats

Click on drop down arrow to view individual appliance power consumption line graphs

View Stats

View line graph of individual appliance power consumption

7

My Outlets

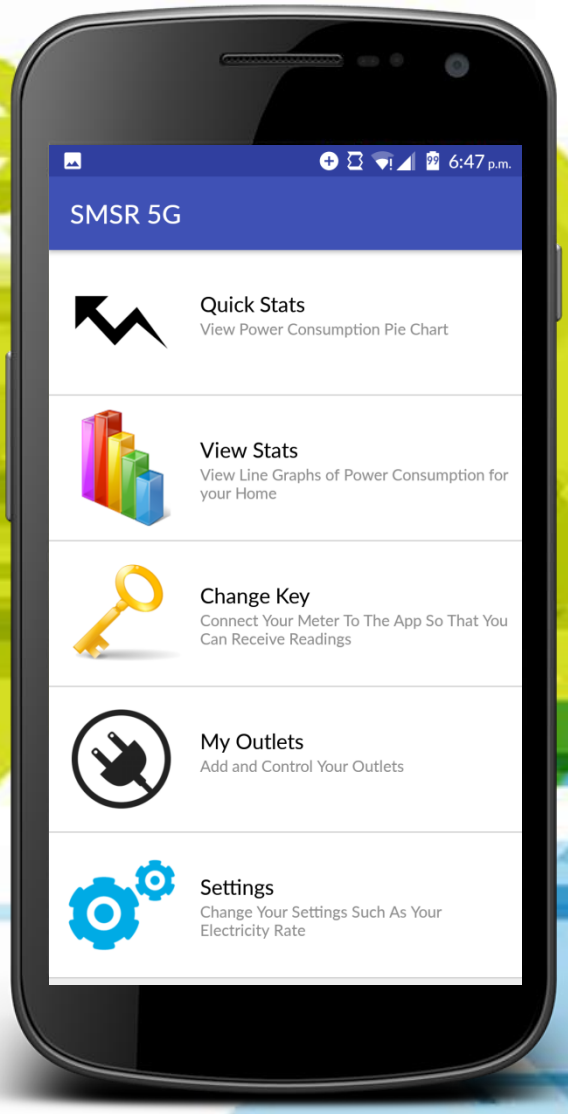

My Outlets

Click on My Outlets for outlet addition and control

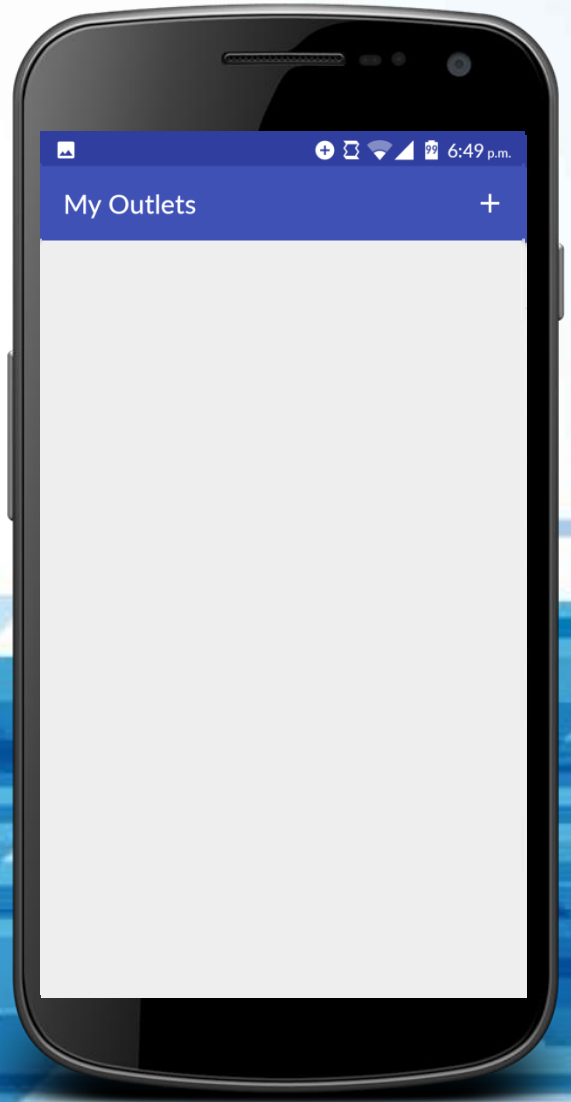

My Outlets

Click on the + sign to add outlets

SMSR 5G

7

My Outlets

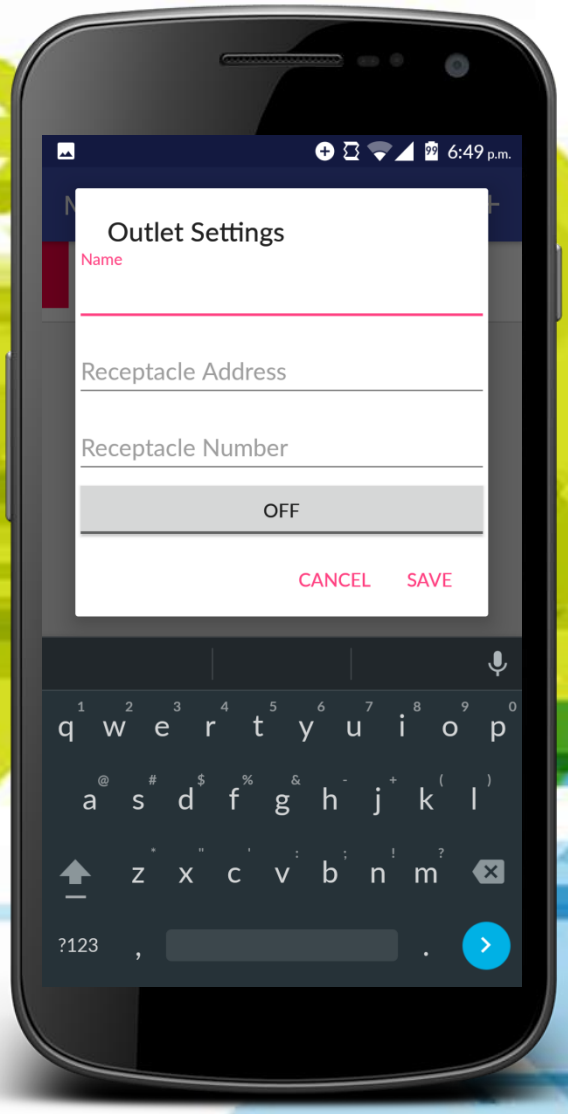

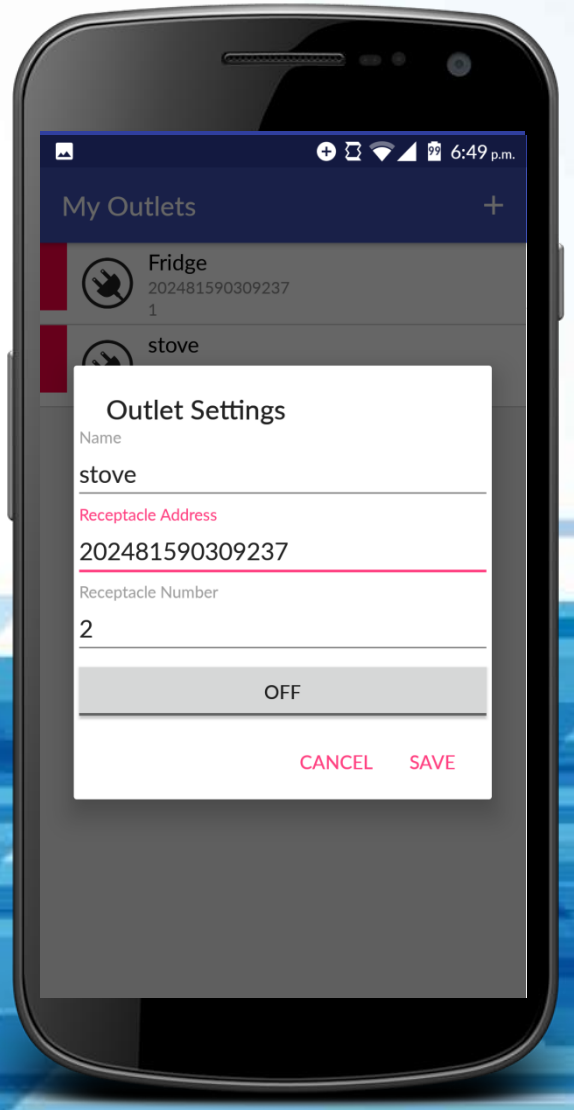

SMSR 5G

My Outlets

Name and number the outlet and enter the receptacle number on the receptacle face

My Outlets

Press Save to confirm information

7

My Outlets

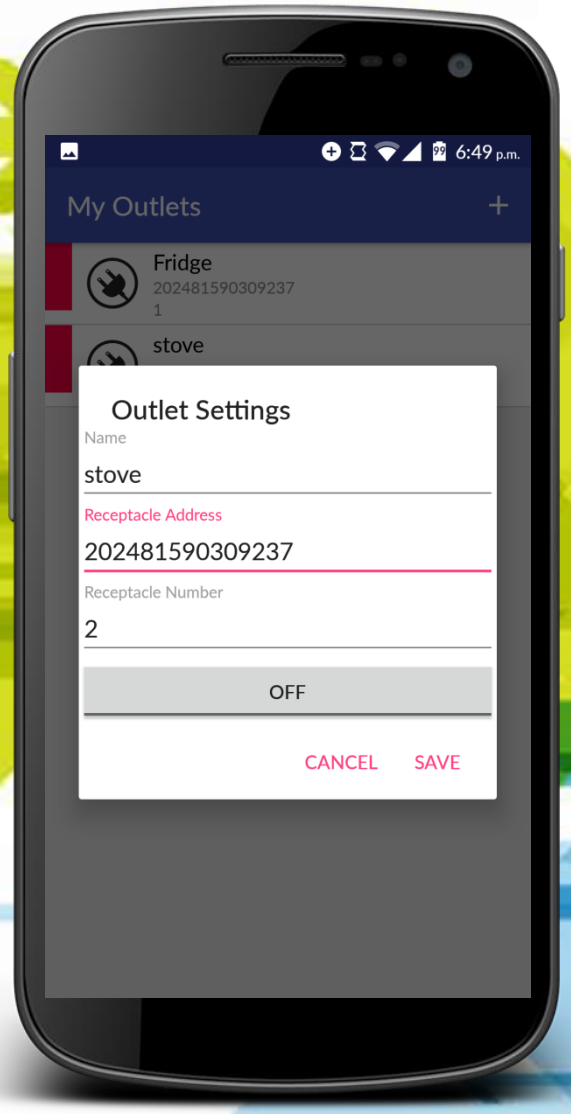

My Outlets

Click on the OFF button to toggle receptacle to ON

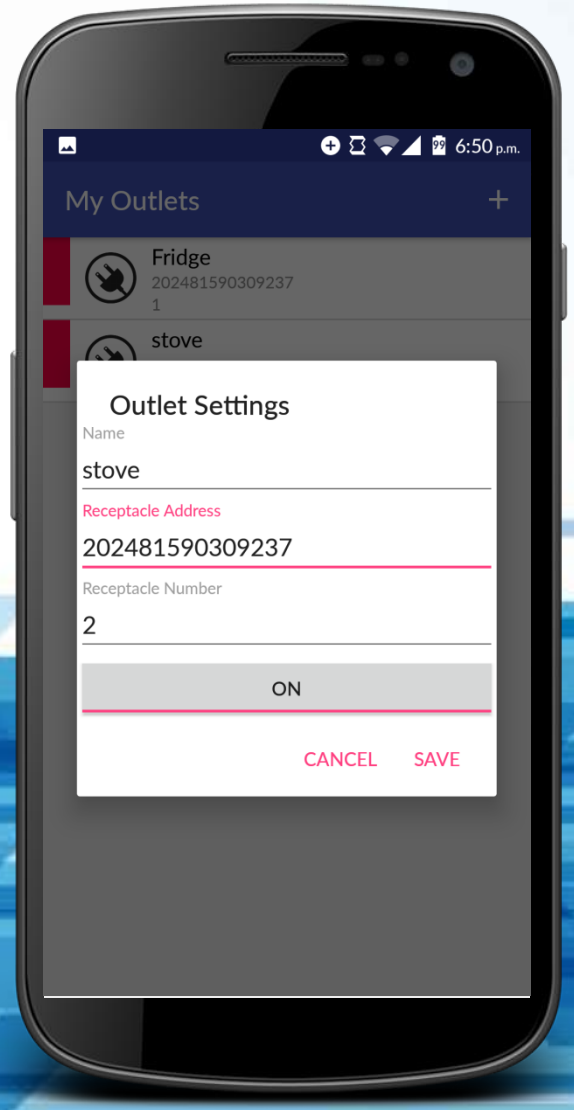

My Outlets

Press Save to confirm changes and turn the receptacle on

SMSR 5G

7

My Outlets

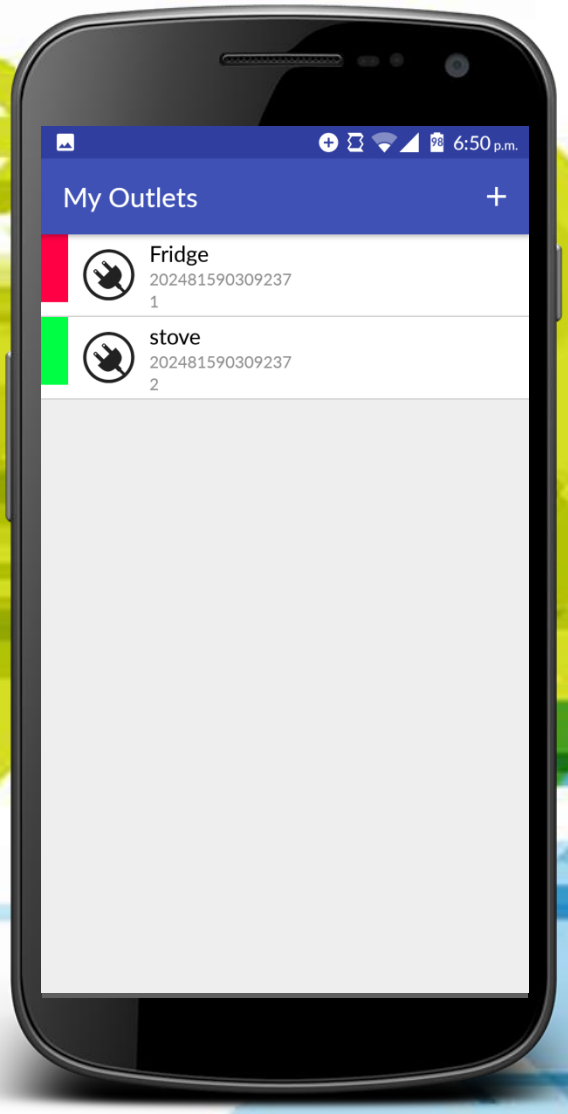

My Outlets

Red signifies OFF while green signifies ON

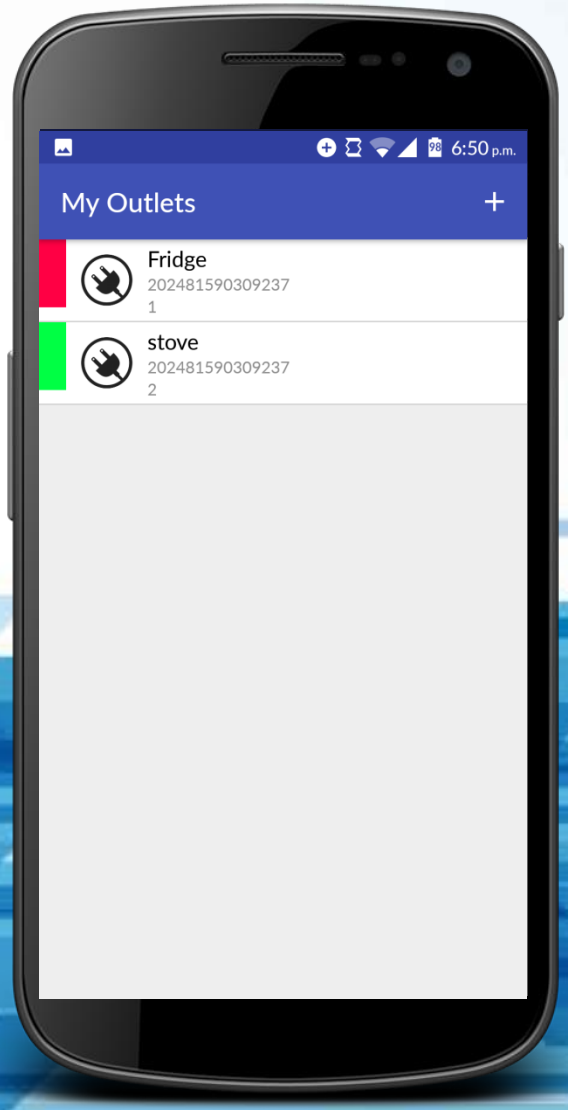

My Outlets

Click on current outlets to edit or click on + to add additional outlets

SMSR 5G

8

Settings

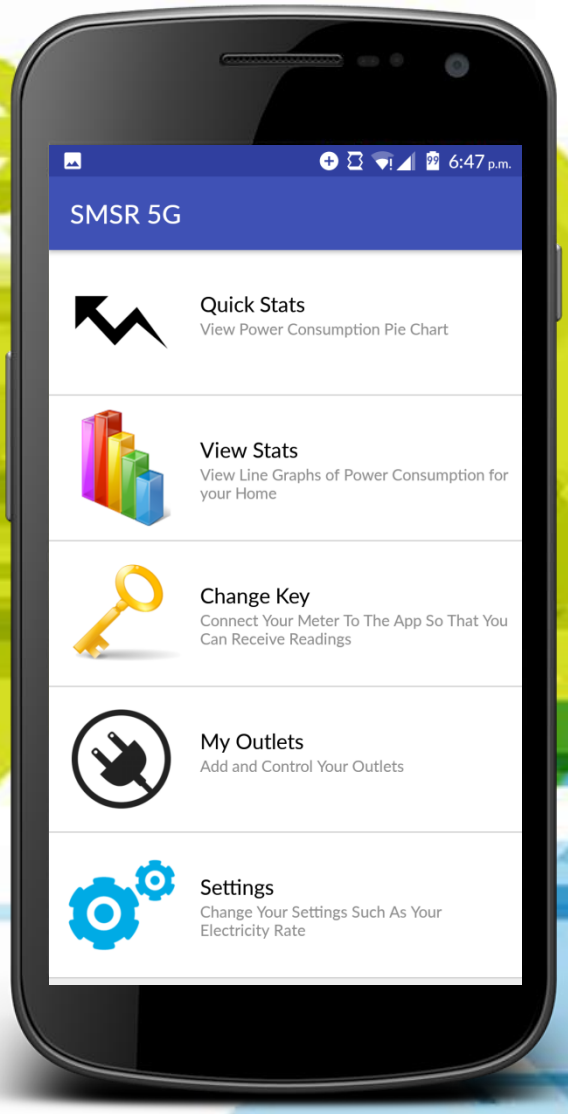

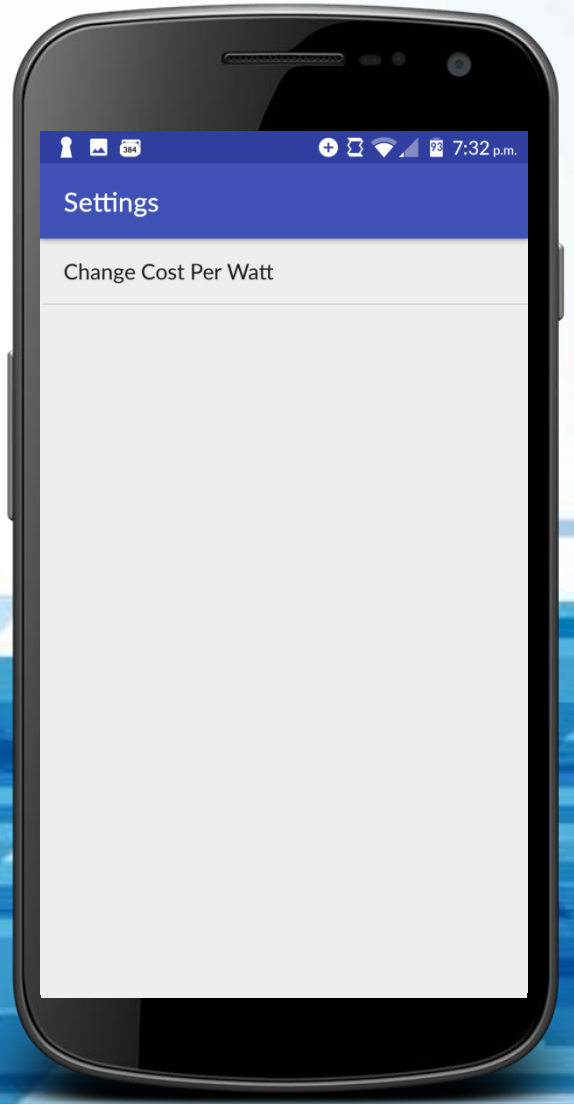

SMSR 5G

Settings

Click on settings to alter the application settings

Settings

Settings allow for the changing of the cost per watt