Identification Numbers

Record Product Identification Number

Each machine has its own unique Product Identification

Number (PIN). The PIN number is broken down as follows:

1	Р	Υ	5	1	1	5	М	#	М	E	4	0	1	3	7	6
WMC	Build Factory		Machine Series	Engine hp		Machine Family	Check	Calendar	Factory Optional	Build Sequence						
			Model Number				•	Letter	Year	Information	Serial Number					

WMC: World Manufacturing Code.

Build Factory: represents manufacturing location.

Machine Series: represents machine series.

Engine hp: represents approximate engine horsepower.

Machine Family: represents overall machine configuration.


Check Letter: calculated based on values and positions of the other characters in the PIN.

Calendar Year: represents calendar year of manufacture (2010 = A, 2031: 1, 2040: A again).

Factory Optional Information

Build Sequence: represents the consecutive number of machines built with the same machine series through operator's station identifiers.

Serial Number: made up of an operator's station identifier and build sequence; example shown 401376.

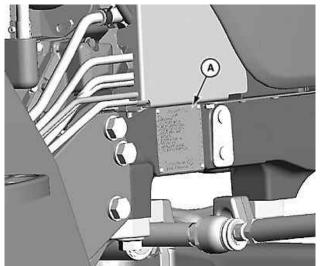


LV18519—UN—30JUL13

Product Identification Number (PIN) plate is on the right front support member of the machine.

Product Identification Number

LGCKF7U,0000C6C-19-11MAY21

Record Front Axle Serial Number

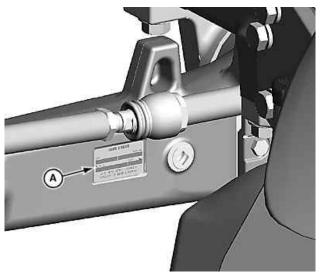


LV18529—UN—30JUL13

The serial number plate is on the rear side of the lefthand axle housing.


Front Axle Serial Number __

HK75640,0001110-19-14SEP20

Record Engine Serial Number (4.5 Liter 4 Cylinder Engine)

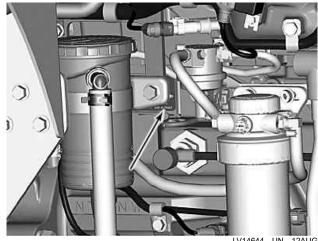

LV14644--UN--12AUG11

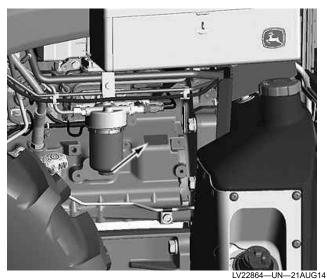


The serial number is placed in two locations. The plate is on the right-hand side of the engine block, behind the OCV filter bracket. The sticker is on the left-hand side of the engine to the right of the fuel filter.

Engine Serial Number_____

HK75640,0001111-19-14SEP20

Record Engine Serial Number (2.9 Liter 3 Cylinder Engine)

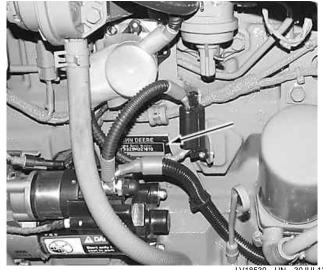

The serial number plate is on the right-hand side of the engine block, behind starter.

Engine Serial Number

HK75640,0001112-19-14SEP20

Record Transmission Serial Number



PULV000135-UN-22OCT07

The serial number plate is located behind the right-hand hitch lift arm on the differential housing.

Transmission Serial Number_____

HK75640,0001113-19-14SEP20

Record Cab Serial Number




APY40992—UN—10DEC20

The serial number label is located behind the operator's seat underneath the rear window.

Cab Serial Number _____

LGCKF7U,00008C6-19-14DEC20

Keep Proof of Ownership

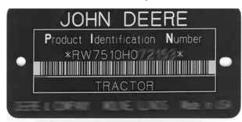



TS1680-UN-09DEC03

- 1. Maintain in a secure location an up-to-date inventory of all product and component serial numbers.
- Regularly verify that identification plates have not been removed. Report any evidence of tampering to law enforcement agencies and order duplicate plates.
- 3. Other steps you can take:
 - Mark your machine with your own numbering system
 - Take color photographs from several angles of each machine

DX,SECURE1-19-18NOV03