
Differential and Rear Axle Maintenance

Lubricate Rear Axle Bearings

MAINTENANCE INTERVAL Every 600 Hours

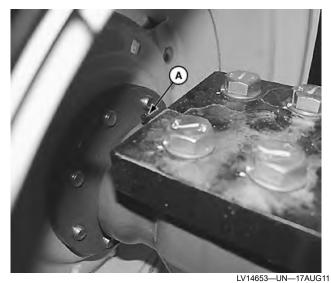

A-Grease Point

EV 14035—01V—17A001

NOTE: Service more often if operated in wet and muddy conditions.

Lubricate rear axle grease points (A) on left and righthand sides of the axle with several shots of multipurpose grease. (See Fuel, Lubricants, and Coolants section.)

HK75640,00010B4-19-14SEP20