MANUAL TRANSMISSION - NSG370 (Continued)

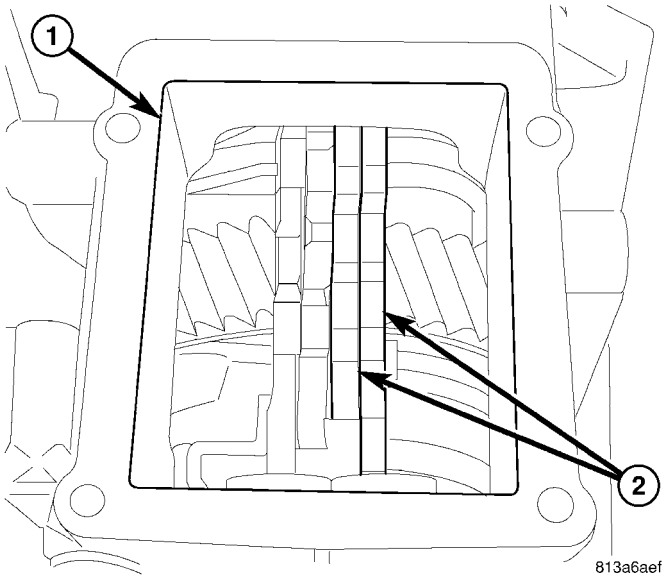

Fig. 9 SHIFT TOWER OPENING

1 - SHIFT TOWER OPENING
2 - SHIFT RAILS

(2) Through shift tower opening (1) (Fig. 9) shift two shift rails (2) forward to engage two gears.

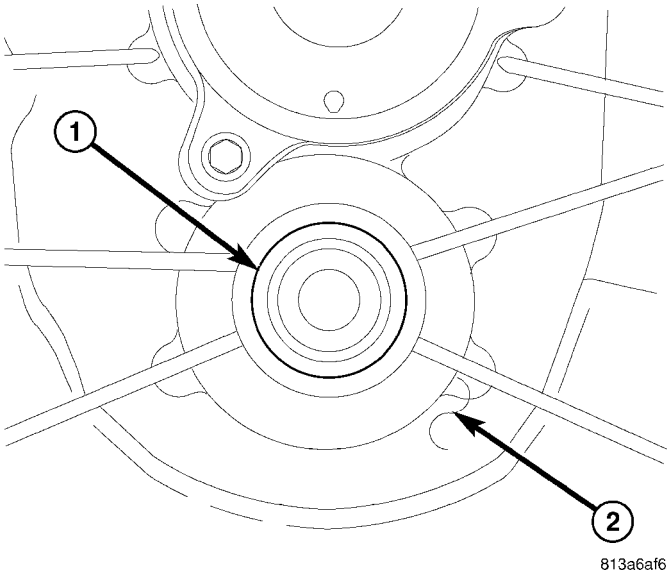

Fig. 10 COUNTERSHAFT PLUG

1 - COUNTERSHAFT PLUG
2 - FRONT HOUSING

(3) Remove countershaft plug (1) (Fig. 10) from the front housing (2) with a seal pick.

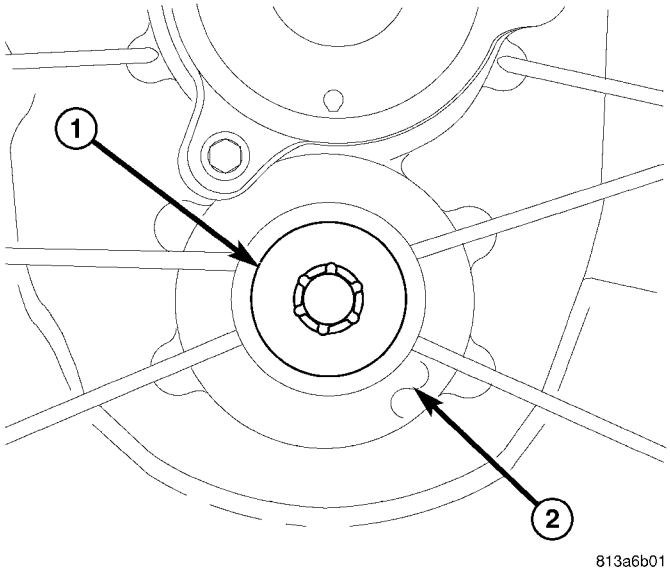

Fig. 11 COUNTERSHAFT BOLT

1 - COUNTERSHAFT BOLT
2 - FRONT HOUSING

(4) Remove countershaft bolt (1) (Fig. 11) from the front housing (2).

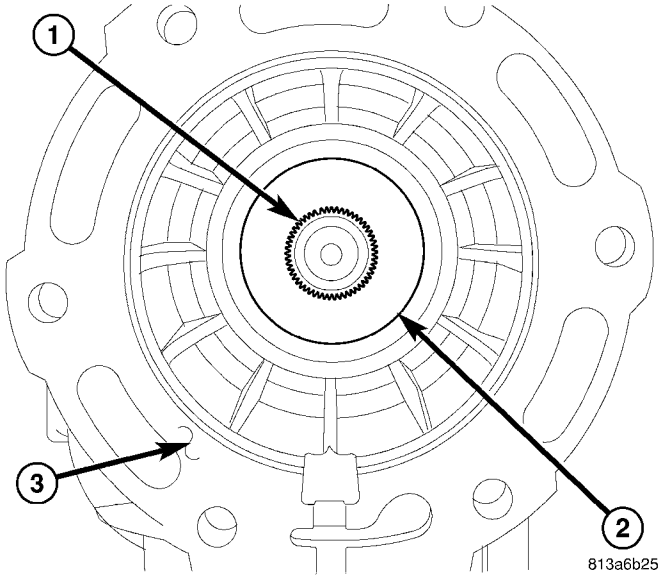

Fig. 12 OUTPUT SHAFT SEAL

1 - OUTPUT SHAFT
2 - SEAL
3 - REAR HOUSING

(5) Remove output shaft (1) (Fig. 12) seal (2) from rear housing (3) with a seal pick.