MANUAL TRANSMISSION - NSG370 (Continued)

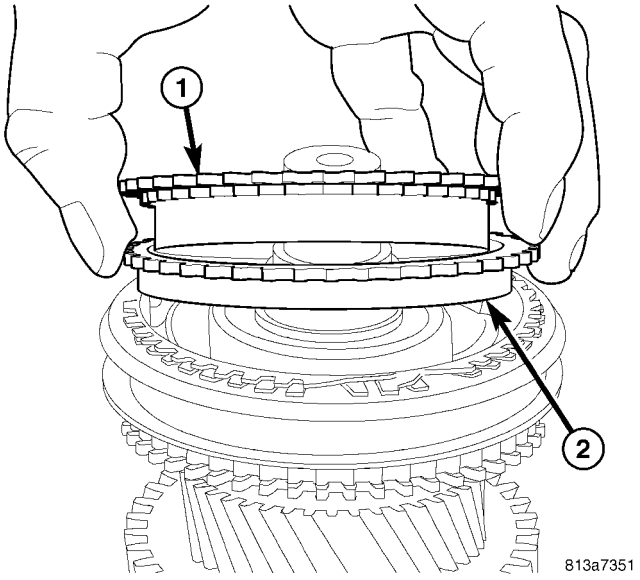

Fig. 17 FIFTH GEAR SYNCHRO

1 - FIFTH GEAR BLOCKER RING
2 - FRICTION RING

(11) Remove fifth gear synchronizer blocker ring (1) (Fig. 17) and friction ring (2).

(12) Set geartrain and shift rails with rear housing into Build Fixture 9633.

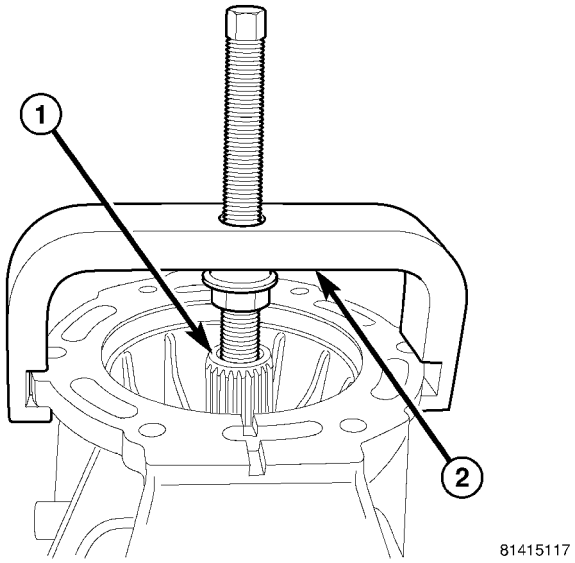

Fig. 18 MAINSHAFT REMOVER

1 - MAINSHAFT
2 - REMOVER/INSTALLER

(13) Remove mainshaft shaft (1) (Fig. 18) from rear housing bearing with Remover 9637 (2).

(14) Remove mainshaft (1), countershaft (2) and shift rails/forks (3) from fixture (Fig. 19).

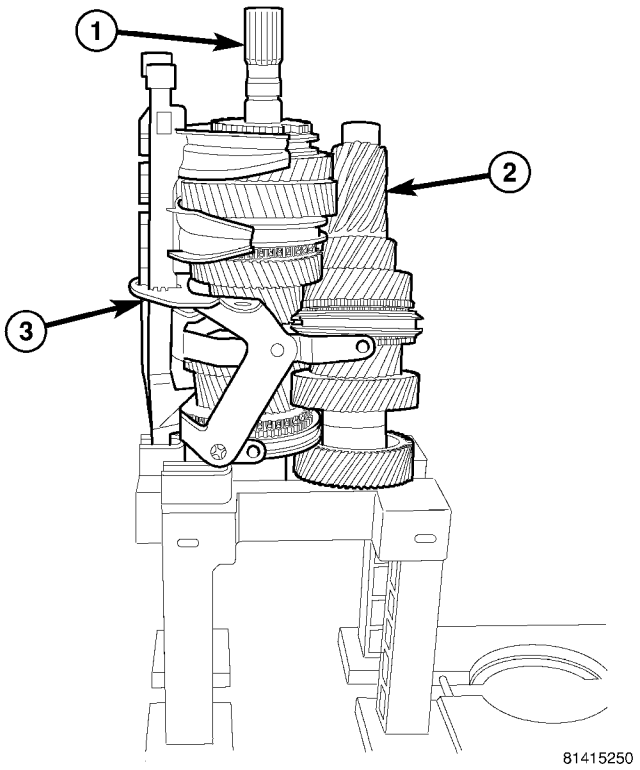

Fig. 19 MAIN/COUNTERSHAFT

1 - MAINSHAFT
2 - COUNTERSHAFT
3 - SHIFT RAILS AND FORKS

MAINSHAFT

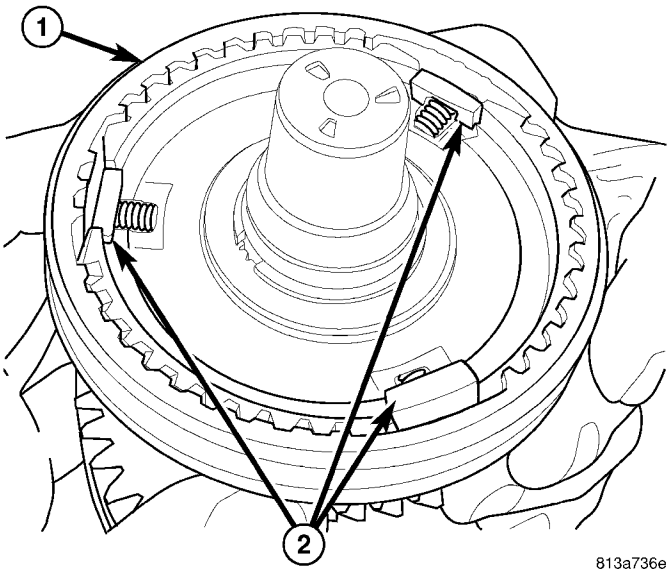

Fig. 20 5-6 SYNCHRO SLEEVE DETENTS

1 - SYNCHRONIZER SLEEVE
2 - DETENTS

(1) Place mainshaft with 5-6 synchronizer facing up in build Fixture 9648 and place in a vise.