MANUAL TRANSMISSION - NSG370 (Continued)

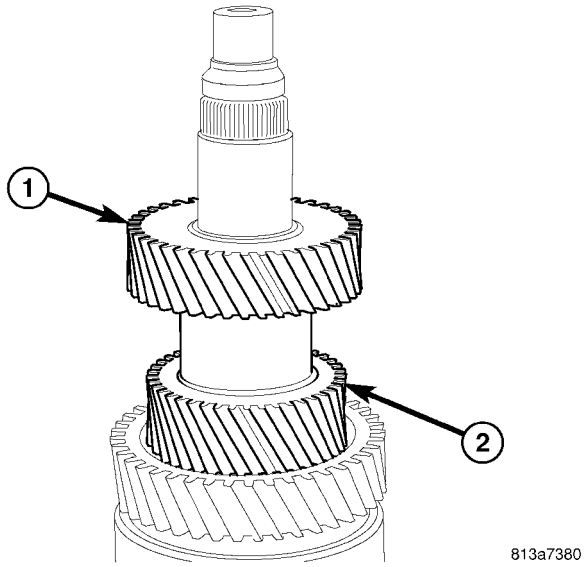

Fig. 25 3-4 GEAR

1 - THIRD GEAR
2 - FOURTH GEAR

(7) Third gear (1) (Fig. 25) and fourth gear (2) are serviced with the mainshaft only.

(8) Remove mainshaft from Fixture 9648. Turn fixture over in vise and set opposite end of mainshaft in the fixture.

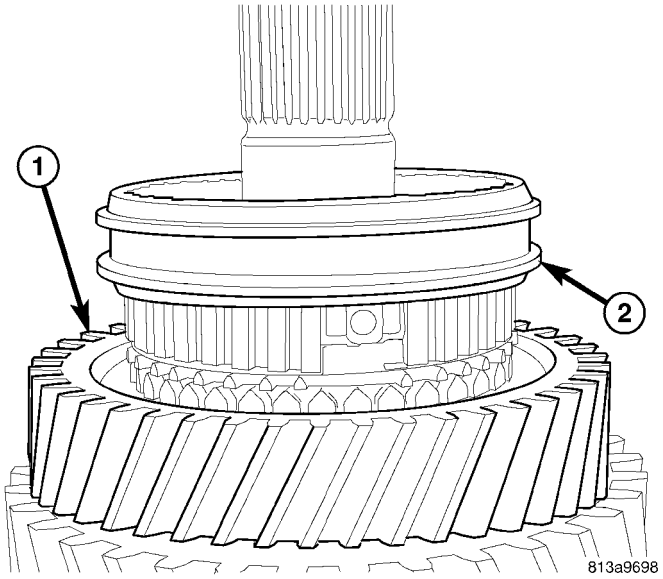

Fig. 26 REVERSE GEAR SYNCHRO SLEEVE

1 - REVERSE GEAR
2 - SYNCHRONIZER SLEEVE

(9) Remove reverse gear (1) (Fig. 26) synchronizer sleeve (2) off synchronizer hub.

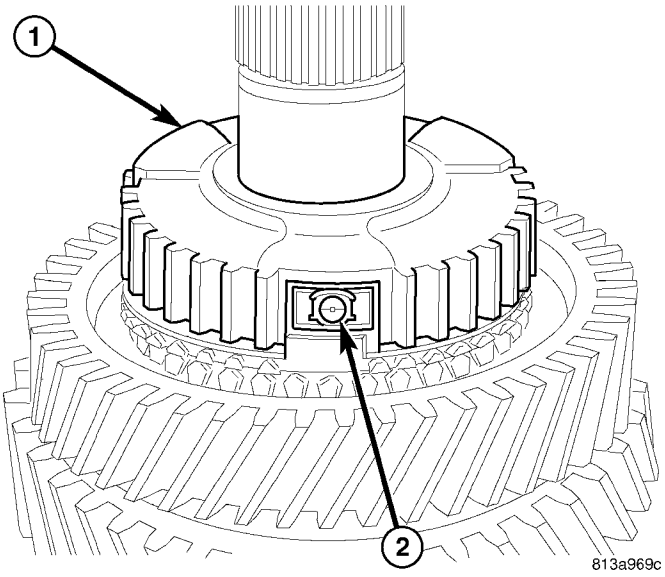

Fig. 27 REVERSE SYNCHRO HUB DETENT

1 - SYNCHRONIZER HUB
2 - DETENTS

(10) Remove reverse synchronizer hub (1) (Fig. 27) detents (2).

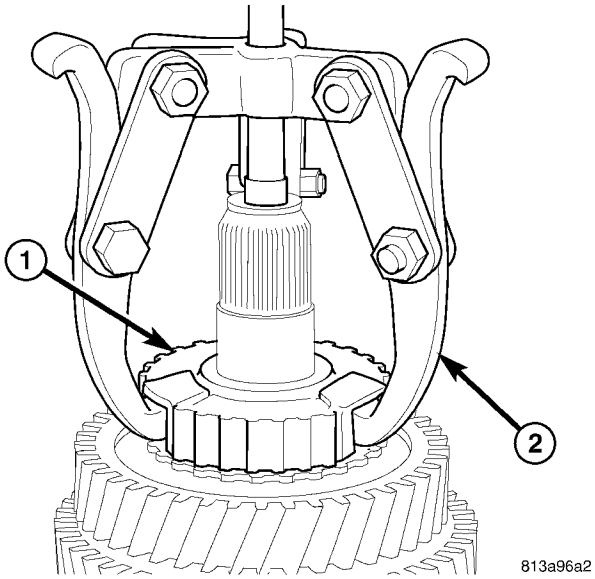

Fig. 28 REVERSE SYNCHRO HUB

1 - SYNCHRONIZER HUB
2 - THREE JAW PULLER

(11) Remove reverse synchronizer hub (1) (Fig. 28) with three jaw puller (2). Place puller jaws in hub detent openings.