MANUAL TRANSMISSION - NSG370 (Continued)

## FRONT HOUSING

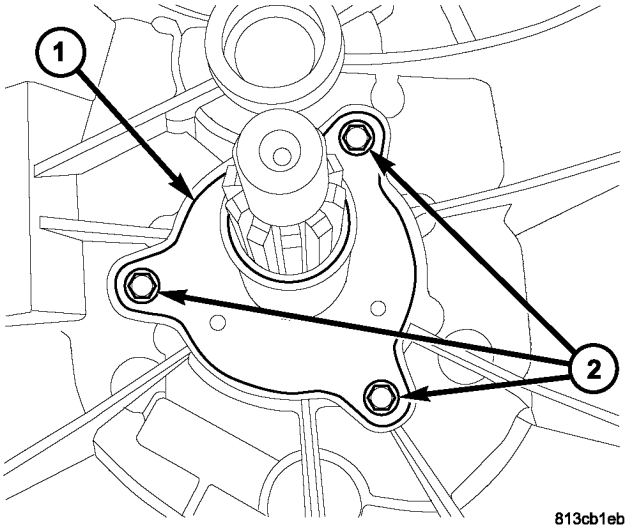


***Fig. 37 INPUT SHAFT RETAINER***

1 - INPUT SHAFT RETAINER
2 - BOLTS

(1) Remove input shaft retainer (1) (Fig. 37) bolts (2) and remove retainer.

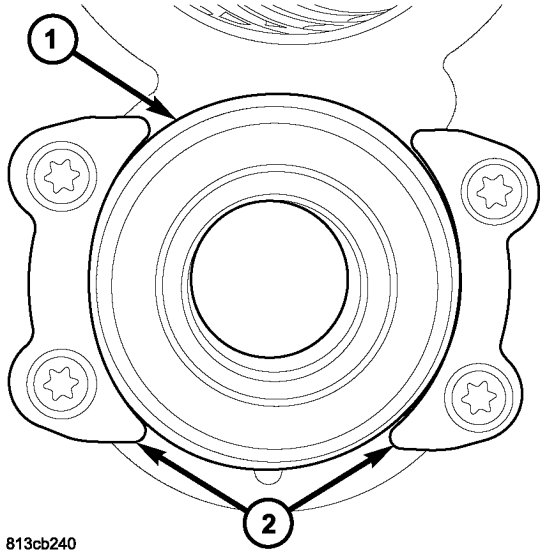


***Fig. 38 COUNTERSHAFT BEARING RETAINER***

1 - COUNTERSHAFT BEARING
2 - RETAINERS

(2) Remove countershaft bearing (1) (Fig. 38) retainer (2) bolts and remove retainers.

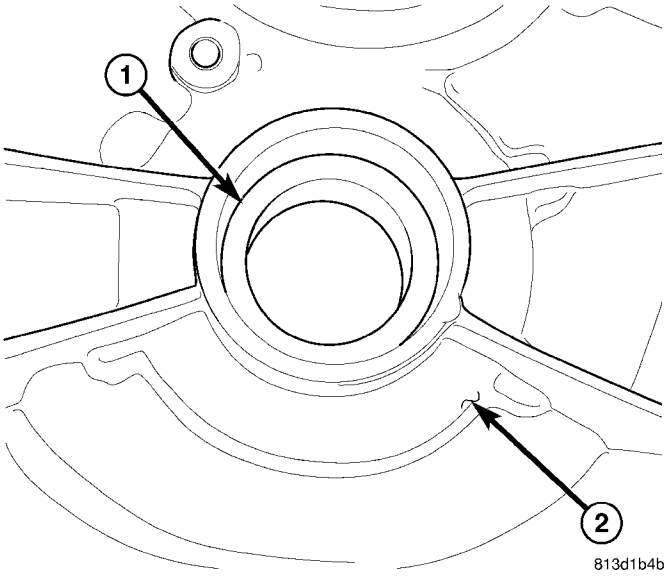


***Fig. 39 COUNTERSHAFT BEARING FRONT HOUSING***

1 - COUNTERSHAFT BEARING
2 - HOUSING

(3) Remove countershaft bearing (1) (Fig. 39) from housing (2) with a hammer and driver.

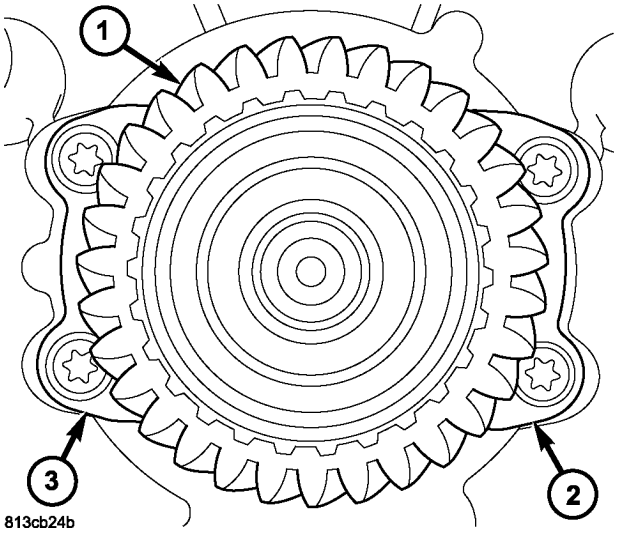


***Fig. 40 INPUT SHAFT BEARING RETAINER***

1 - INPUT SHAFT
2 - BEARING RETAINER
3 - BEARING RETAINER

(4) Remove input shaft (1) (Fig. 40) bearing retainer (2) bolts and remove retainers.