(5) Remove input shaft and bearing from housing with a dead blow hammer.

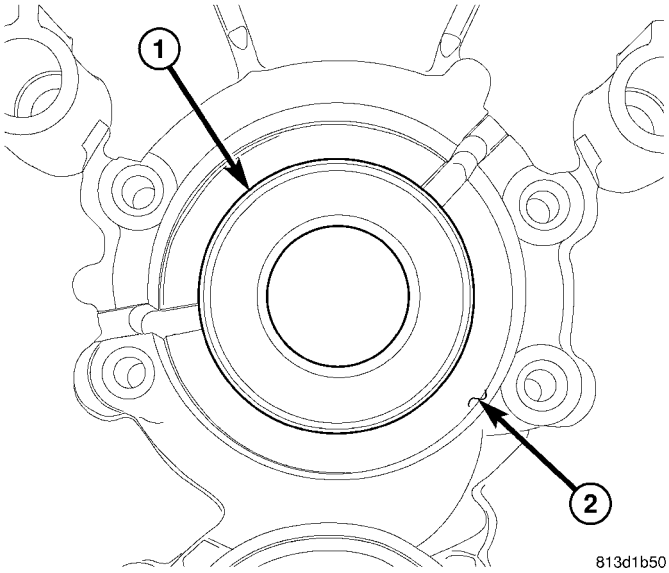

Fig. 41 INPUT SHAFT SEAL

1 - INPUT SHAFT SEAL
2 - HOUSING

(6) Remove input shaft seal (1) (Fig. 41) from housing (2) with a hammer and driver.

INPUT SHAFT

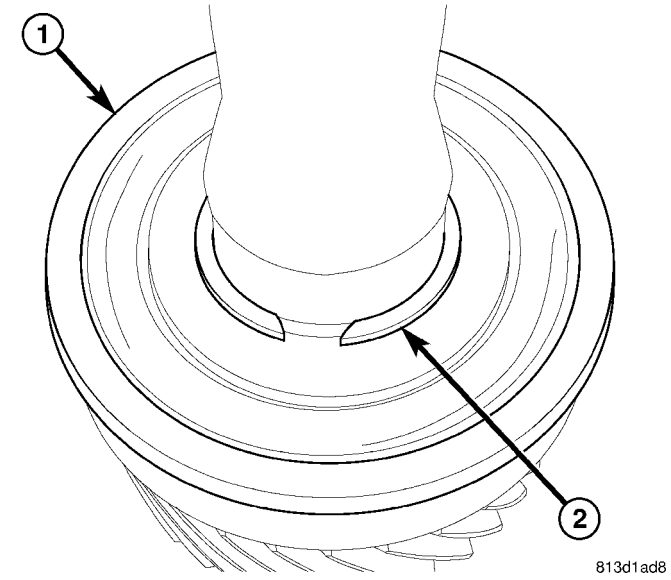

Fig. 42 INPUT SHAFT BEARING SNAP RING

1 - INPUT SHAFT BEARING
2 - SNAP RING

(1) Remove input shaft bearing (1) (Fig. 42) snap ring (2).

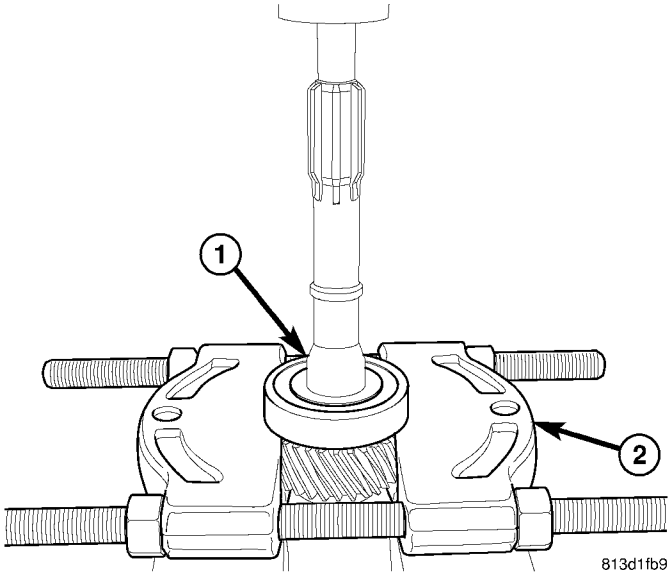

Fig. 43 INPUT SHAFT BEARING REMOVAL

1 - INPUT SHAFT BEARING
2 - BEARING SPLITTER 1130

(2) Remove input shaft bearing (1) (Fig. 43) with Splitter 1130 (2) and press. Place splitter around bearing retainer lip.

REAR HOUSING

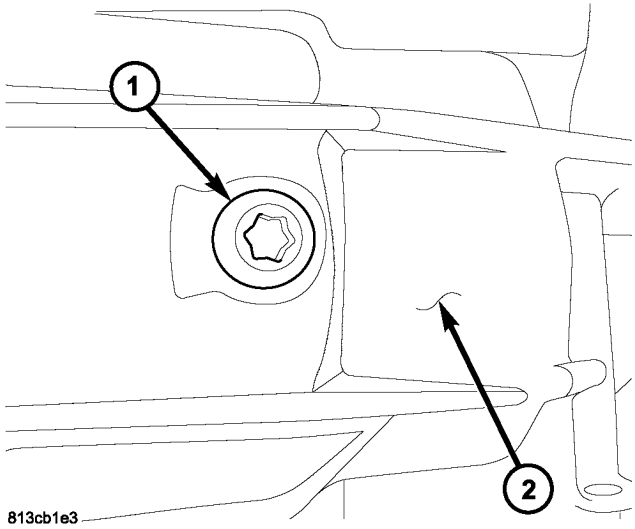

Fig. 44 IDLER SHAFT BOLT

1 - IDLER GEAR SHAFT BOLT
2 - HOUSING

(1) Remove reverse idler gear shaft bolt (1) (Fig. 44) from housing (2).