MANUAL TRANSMISSION - NSG370 (Continued)

INSPECTION

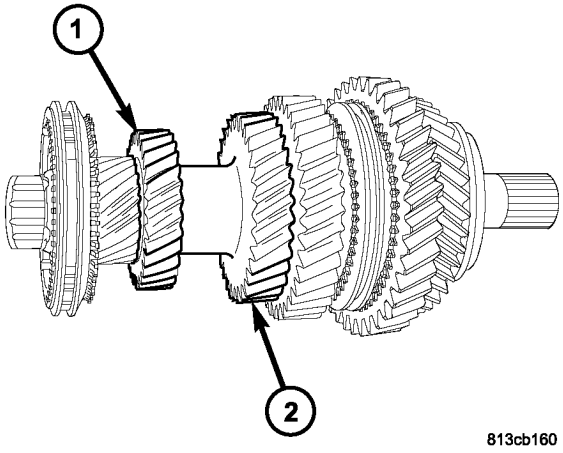

Fig. 52 MAINSHAFT

1 - THIRD GEAR
2 - FOURTH GEAR

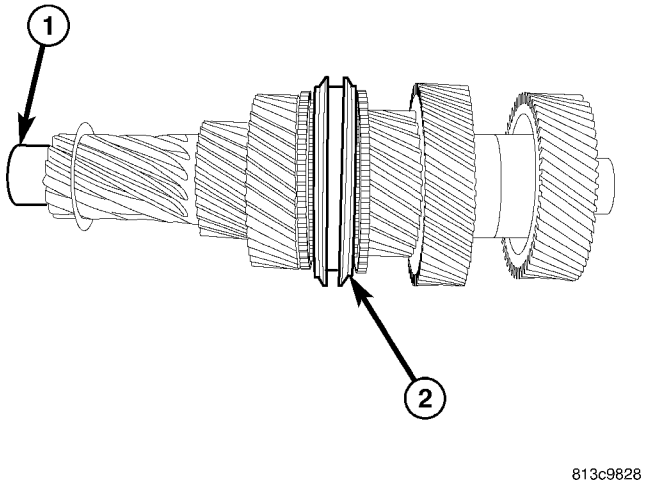

Fig. 53 COUNTERSHAFT

1 - BEARING SURFACES
2 - 3-4 SYNCHRONIZER ASSEMBLY

NOTE: Minor corrosion, nicks, or pitting can be smoothed with 400 grit emery and polished out with crocus cloth.

Bearings: Inspect for worn, cracked, flat-spotted or brinnelled.

Gears: Inspect for worn, chipped or cracked teeth. Inspect bearing surfaces for ware or flat-spotted.

Mainshaft: Inspect for worn splines, snap ring grooves and threads. Inspect bearing surfaces for ware or flat-spotted.**Third gear (1) (Fig. 52) and fourth gear (2) are serviced with mainshaft only.**

Countershaft: Inspect for worn, chipped or cracked teeth. Inspect bearing surfaces (1) (Fig. 53) for wear or flat-spots. Inspect 3-4 synchronizer assembly (2).**The countershaft is serviced as an assembly.**

Input Shaft: Inspect for worn, chipped or cracked teeth (1). Inspect bearing surface (2) for wear or flat-spots. Inspect for worn splines (3) (Fig. 54).

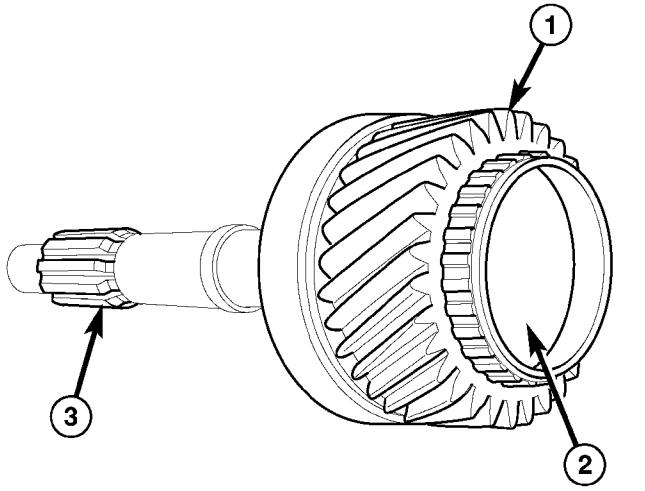

Fig. 54 INPUT SHAFT

1 - TEETH
2 - BEARING SURFACE
3 - SPLINE