MANUAL TRANSMISSION - NSG370 (Continued)

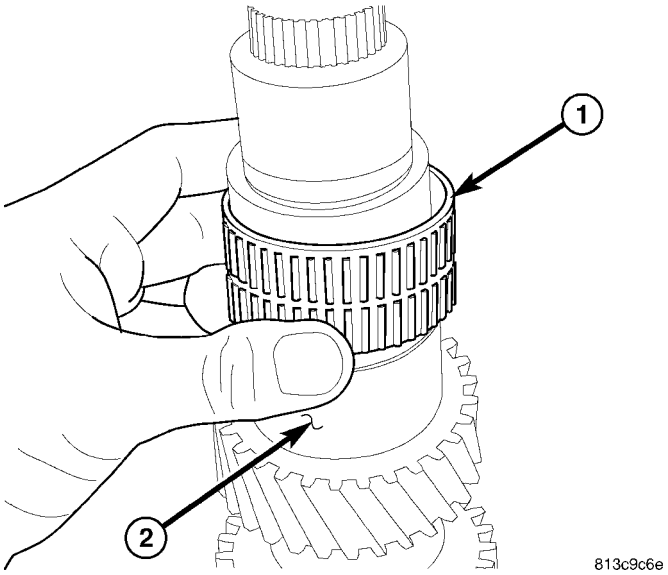


Fig. 58 SECOND GEAR BEARING

1 - SECOND GEAR BEARING
2 - MAINSHAFT

(2) Install second gear bearing (1) (Fig. 58) on mainshaft (2).

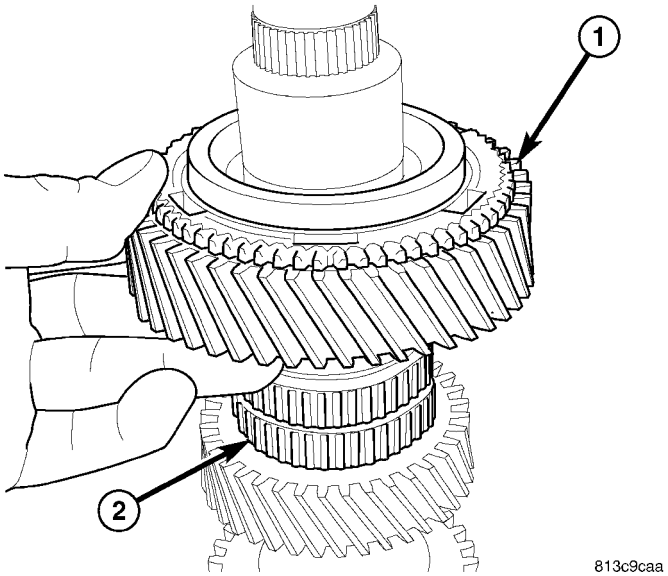


Fig. 59 SECOND GEAR

1 - SECOND GEAR
2 - BEARING

(3) Install second gear (1) (Fig. 59) on bearing (2).

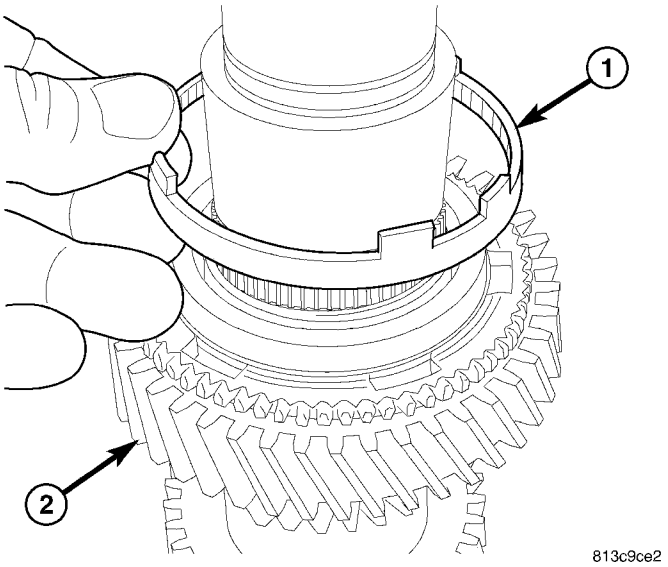


Fig. 60 2ND INNER FRICTION RING

1 - SYNCHRONIZER FRICTION RING
2 - SECOND GEAR

(4) Install inner synchronizer friction ring (1) (Fig. 60) on second gear (2).

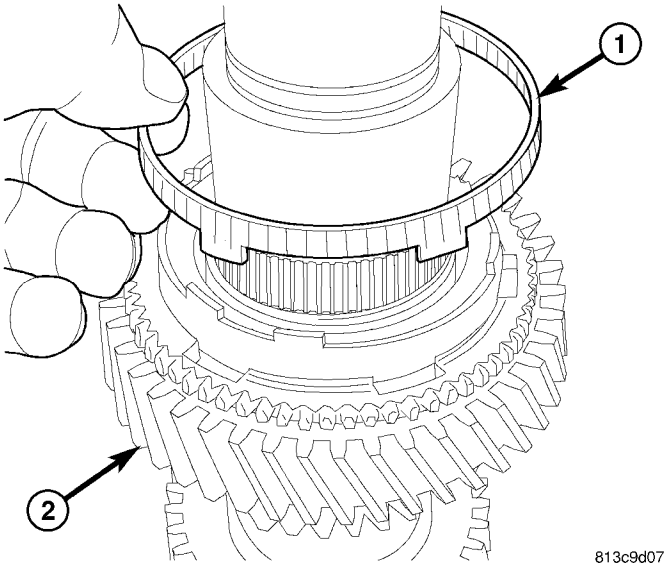


Fig. 61 2ND OUTER FRICTION RING

1 - OUTER SYNCHRONIZER FRICTION RING
2 - SECOND GEAR

(5) Install outer synchronizer friction ring (1) (Fig. 61) on second gear (2).