MANUAL TRANSMISSION - NSG370 (Continued)

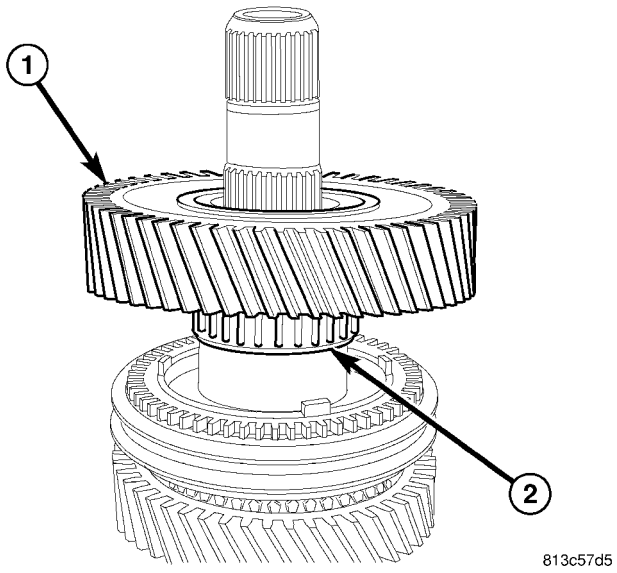

Fig. 70 1ST GEAR AND BEARING

1 - FIRST GEAR
2 - BEARING

(14) Install first gear (1) (Fig. 70) and bearing (2). Then center 1-2 synchronizer sleeve on synchronizer hub.

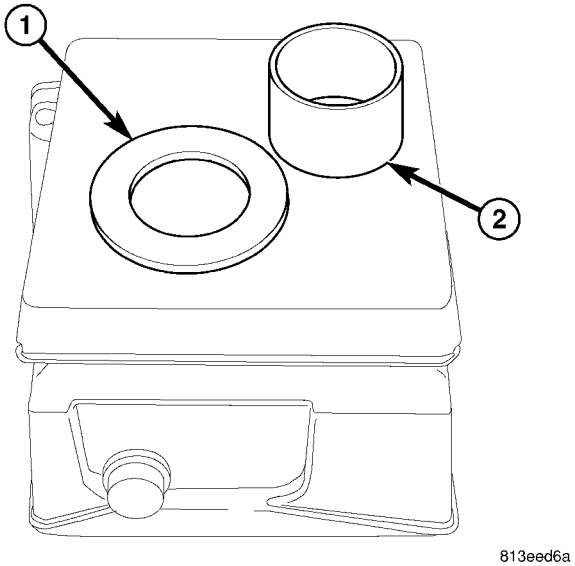

Fig. 71 WASHER AND RACE

1 - FIRST GEAR THRUST WASHER
2 - REVERSE GEAR BEARING RACE

(15) Heat first gear thrust washer (1) (Fig. 71) and reverse gear bearing race (2) with bearing heater.

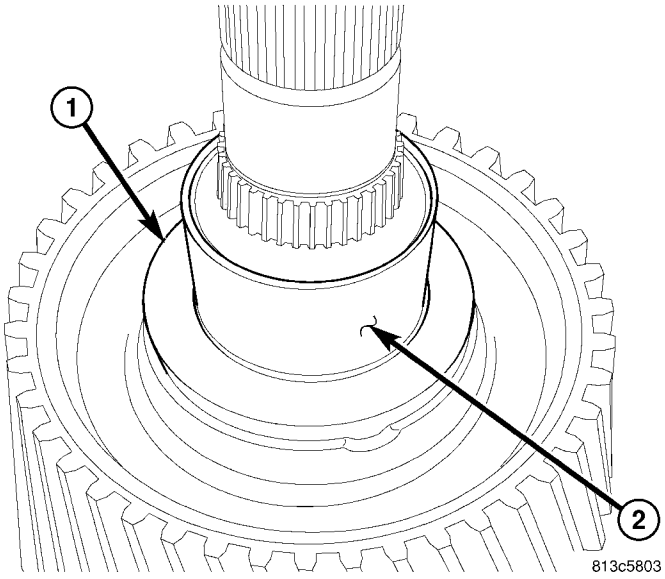

Fig. 72 THRUST WASHER & RACE

1 - FIRST GEAR THRUST WASHER
2 - REVERSE GEAR BEARING RACE

(16) Using welding gloves, install first gear thrust washer (1) (Fig. 72) and reverse gear bearing race (2).

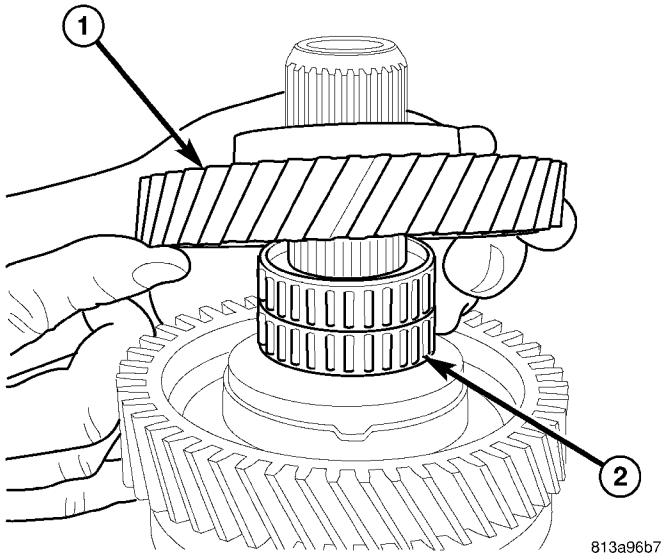

Fig. 73 REVERSE GEAR

1 - REVERSE GEAR
2 - BEARING

(17) Install reverse gear (1) (Fig. 73) and bearing (2).