MANUAL TRANSMISSION - NSG370 (Continued)

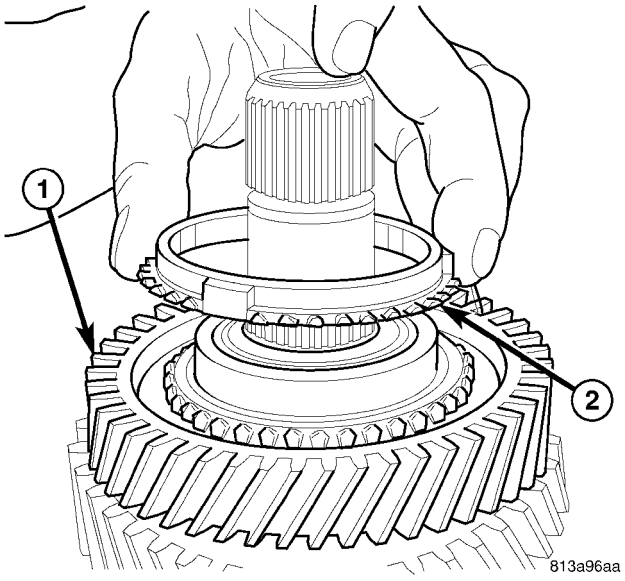


Fig. 74 REVERSE SYNCHRONIZER

1 - REVERSE GEAR
2 - SYNCHRONIZER FRICTION RING

(18) Install reverse gear (1) (Fig. 74) synchronizer friction ring (2).

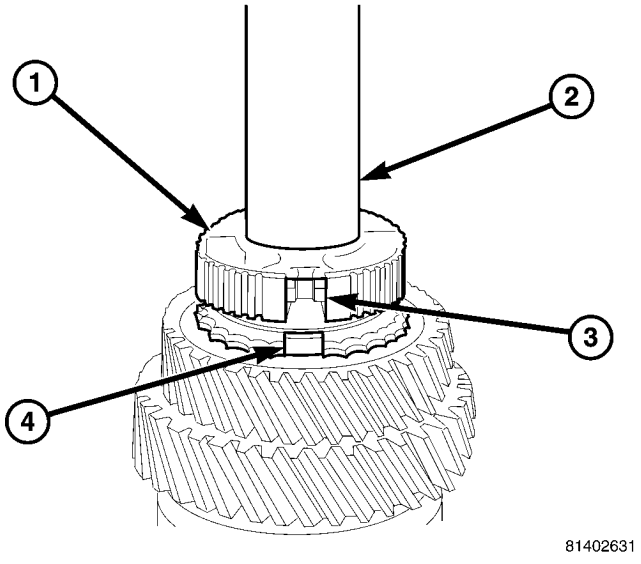


Fig. 75 REVERSE HUB INSTALLER

1 - SYNCHRONIZER HUB
2 - INSTALLER
3 - DETENT OPENING
4 - FRICTION RING TAB

(19) Install reverse gear synchronizer hub (1) on mainshaft with Installer W-262 (2) and a press. Align hub detent opening (3) with friction ring (4) lug (Fig. 75).

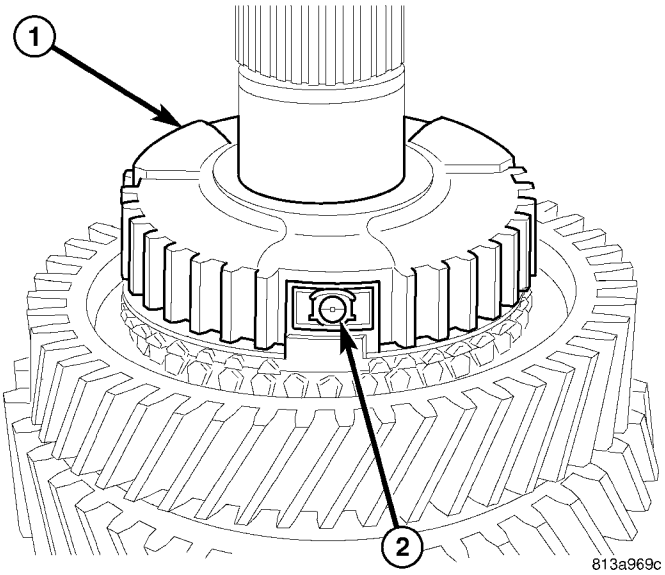


Fig. 76 REVERSE SYNCHRO HUB DETENT

1 - SYNCHRONIZER HUB
2 - DETENTS

(20) Install reverse gear synchronizer hub (1) (Fig. 76) detents (2).

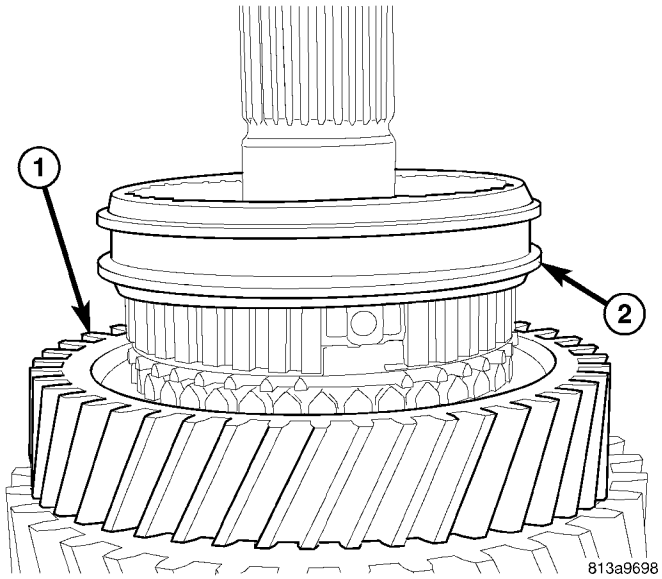


Fig. 77 REVERSE GEAR SYNCHRO SLEEVE

1 - REVERSE GEAR
2 - SYNCHRONIZER SLEEVE

(21) Install reverse gear (1) (Fig. 77) synchronizer sleeve (2) and center sleeve on synchronizer hub.

(22) Remove mainshaft from Fixture 9648. Turn fixture over in the vise, then install opposite end of mainshaft in the fixture.