MANUAL TRANSMISSION - NSG370 (Continued)

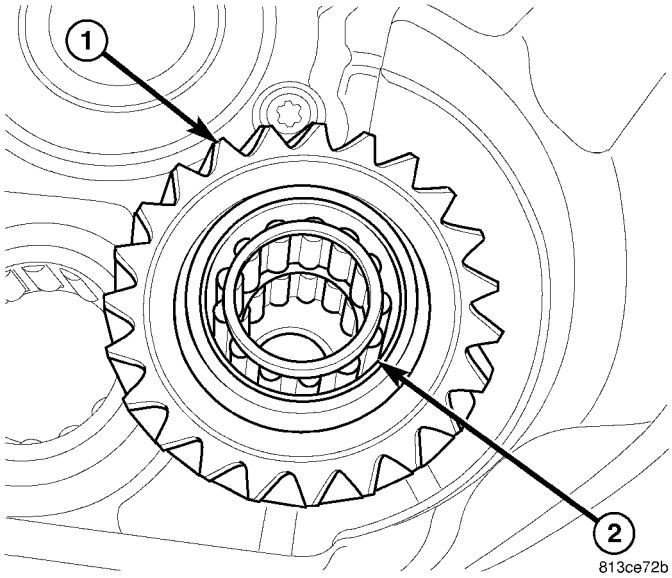


Fig. 86 IDLER GEAR BEARING

1 - REVERSE IDLER GEAR
2 - BEARING

(5) Install idler gear (1) (Fig. 86) bearing (2) into gear.

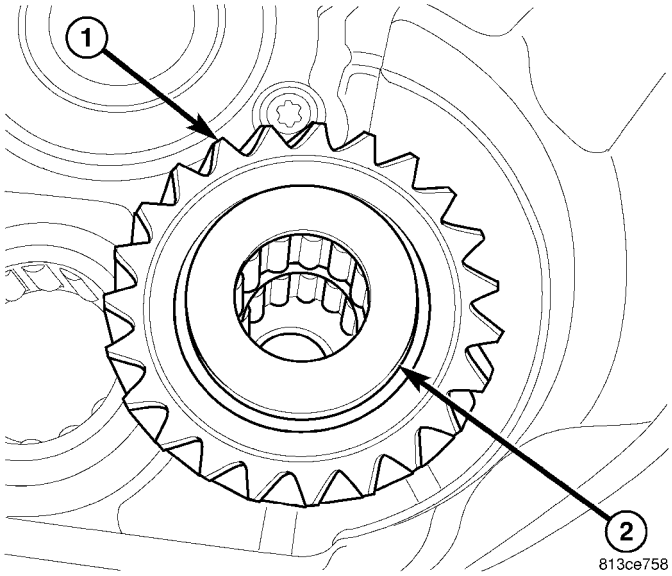


Fig. 87 IDLER GEAR THRUST WASHER

1 - REVERSE IDLER GEAR
2 - THRUST WASHER

(6) Install idler gear (1) (Fig. 87) thrust washer (2) on idler gear.

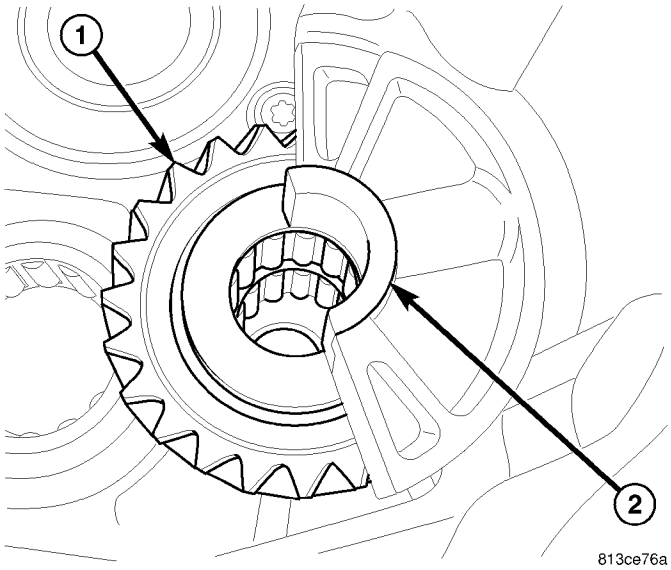


Fig. 88 IDLER SHAFT SUPPORT

1 - REVERSE IDLER GEAR
2 - SHAFT SUPPORT

(7) Install idler gear (1) (Fig. 88) shaft support (2) into housing.

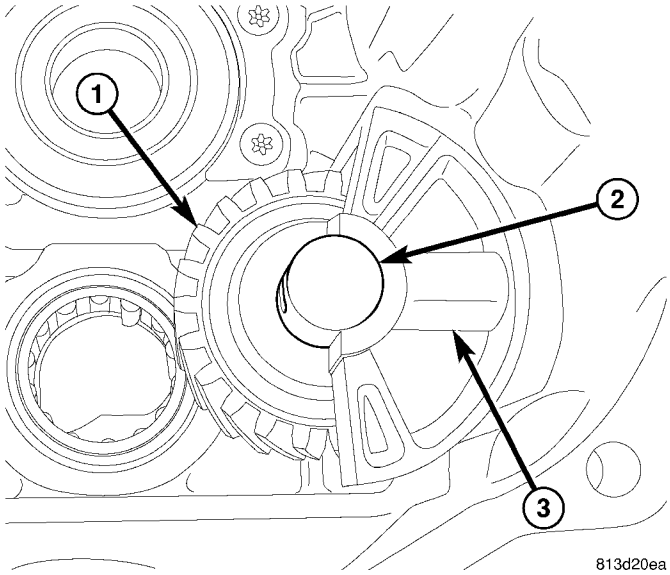


Fig. 89 IDLER GEAR SHAFT

1 - IDLER GEAR
2 - IDLER GEAR SHAFT
3 - SHAFT SUPPORT HOLE

(8) Install idler gear (1) (Fig. 89) shaft (2) with shaft bolt hole alined with shaft support hole (3).