MANUAL TRANSMISSION - NSG370 (Continued)

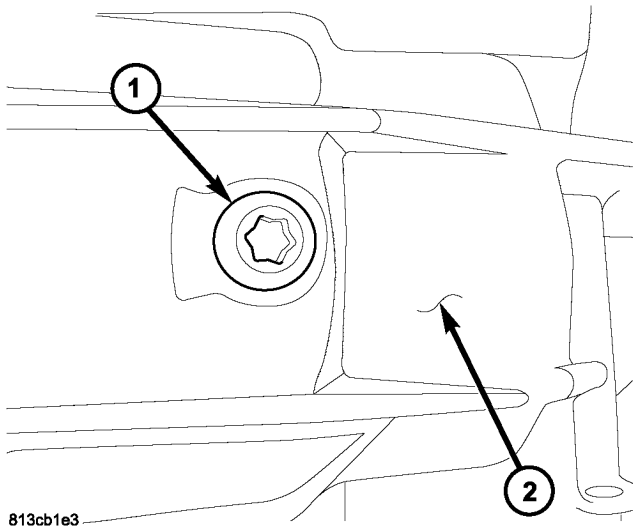

Fig. 90 IDLER SHAFT BOLT

1 - IDLER GEAR SHAFT BOLT
2 - HOUSING

(9) Install idler gear shaft bolt (1) (Fig. 90) into the housing (2) and tighten to 20 N.m (15 ft. lbs.).

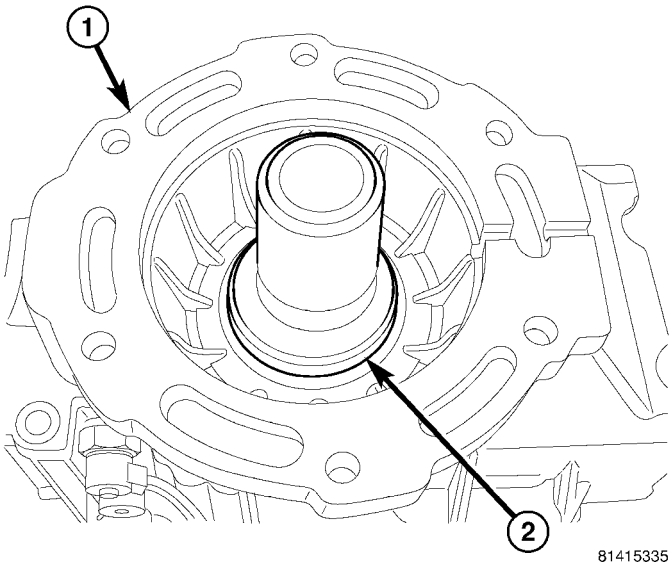

Fig. 91 OUTPUT SHAFT SEAL 4X4

1 - HOUSING
2 - INSTALLER

(10) Install 4x4 output shaft seal into rear housing (1) with Installer 9638 (2) (Fig. 91). Install 4x2 output shaft seal into rear housing with Installer 9635 and Tube 6448A.

INPUT SHAFT

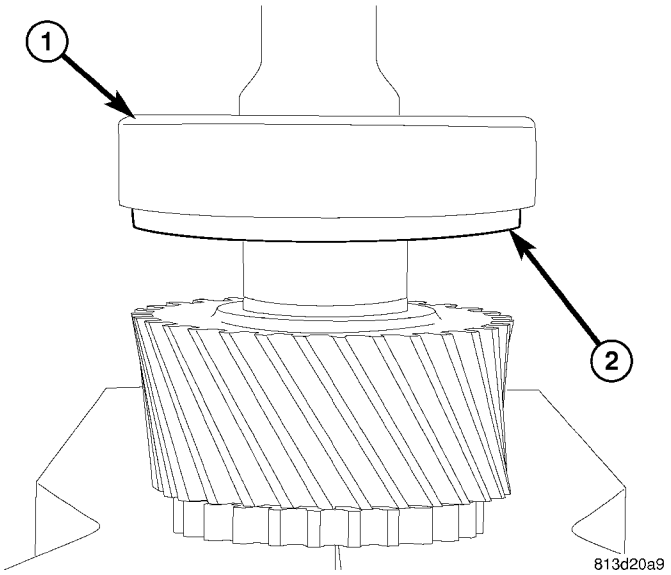

Fig. 92 INPUT SHAFT BEARING LIP

1 - INPUT SHAFT BEARING
2 - BEARING RETAINER LIP

(1) Install input shaft bearing (1) (Fig. 92) on input shaft with the bearing retainer lip (2) facing fifth gear.

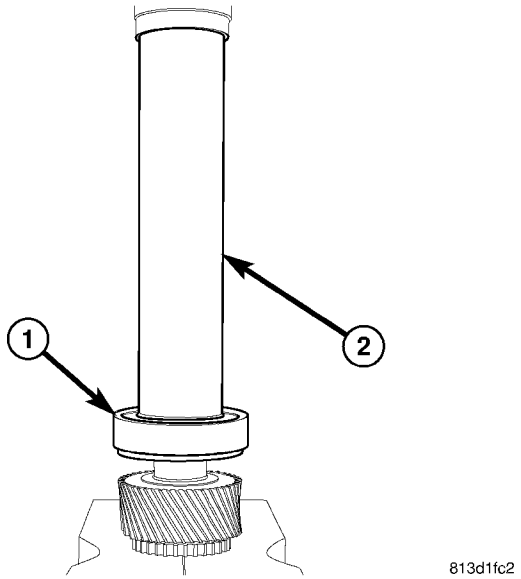

Fig. 93 INPUT SHAFT BEARING INSTALLER

1 - BEARING
2 - INSTALLER

(2) Install input shaft bearing (1) (Fig. 93) with Installer 6448A (2) and a press.