MANUAL TRANSMISSION - NSG370 (Continued)

FRONT HOUSING

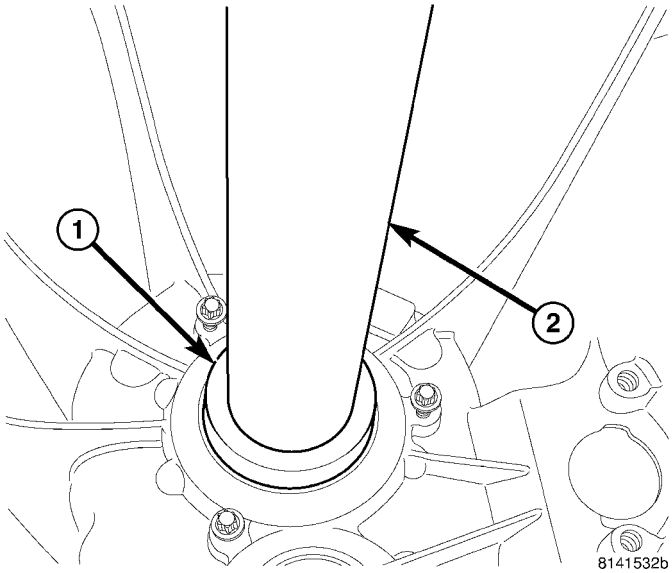

Fig. 94 INPUT SHAFT SEAL INSTALLER

1 - INSTALLER
2 - TUBE

(1) Install input shaft seal (Fig. 94) with Installer 9635 (1) tube 6448A (2).

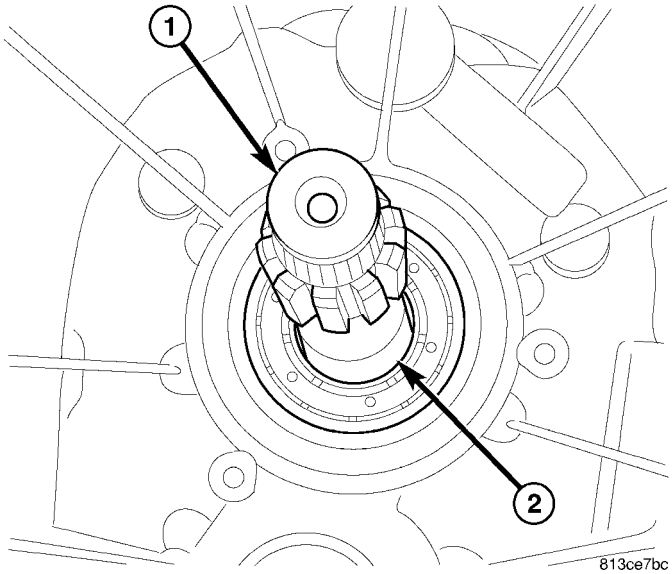

Fig. 95 INPUT SHAFT IN HOUSING

1 - INPUT SHAFT
2 - BEARING

(2) Install input shaft (1) (Fig. 95) with bearing (2) into housing.

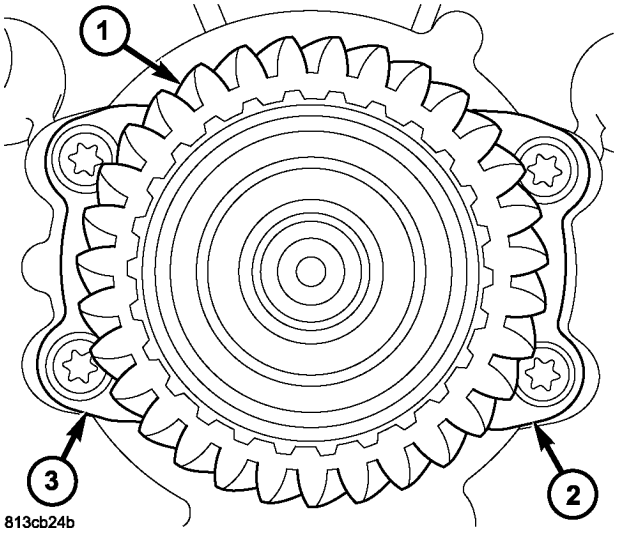

Fig. 96 INPUT SHAFT BEARING RETAINER

1 - INPUT SHAFT
2 - BEARING RETAINER
3 - BEARING RETAINER

(3) Install input shaft (1) (Fig. 96) bearing retainers (2, 3) and tighten bolts to 10 N·m (88 in. lbs.).

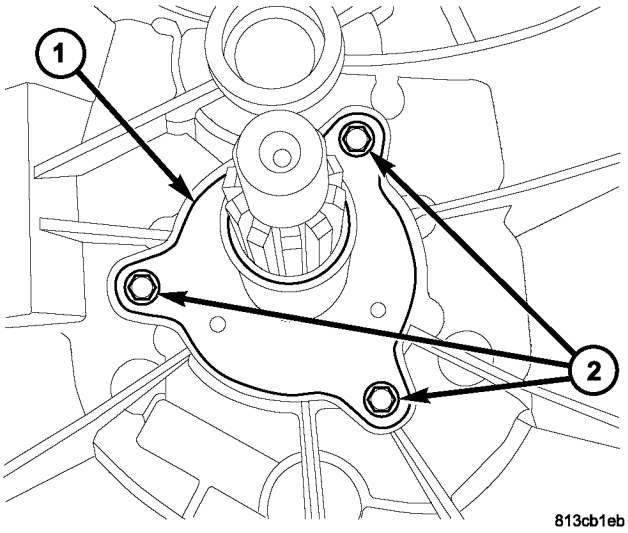

Fig. 97 INPUT SHAFT RETAINER

1 - INPUT SHAFT RETAINER
2 - BOLTS

(4) Install input shaft retainer (1) (Fig. 97) and tighten bolts (2) to 9 N·m (80 in. lbs.).