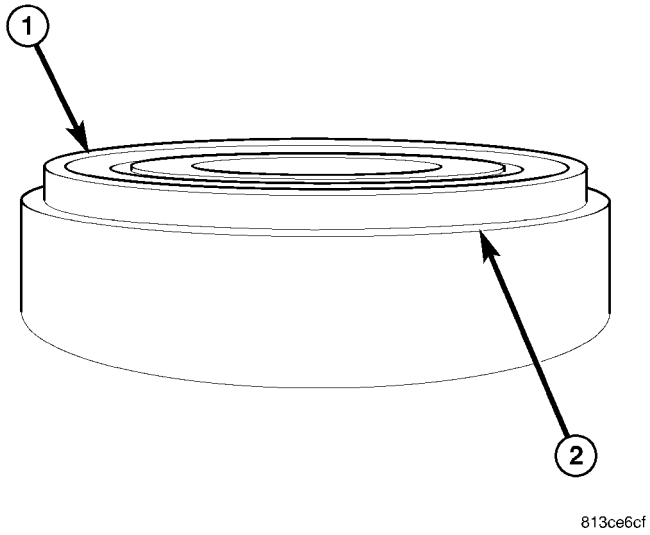


***Fig. 98 BEARING RETAINER LIP***

1 - COUNTERSHAFT BEARING
2 - BEARING RETAINER LIP

(5) Install countershaft bearing (1) (Fig. 98) into housing with bearing retainer lip (2) facing up.

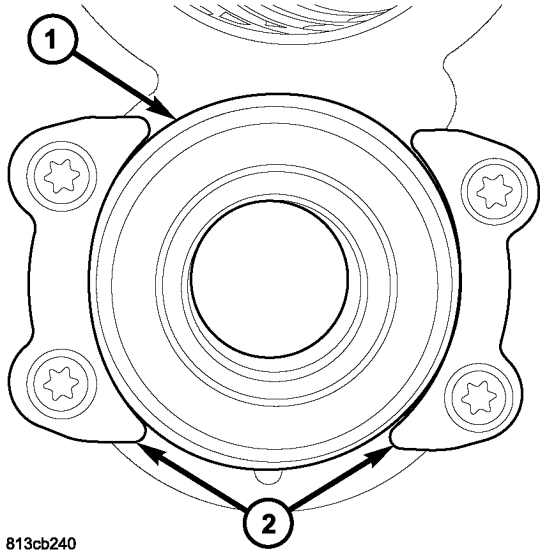


***Fig. 99 COUNTERSHAFT BEARING RETAINER***

1 - COUNTERSHAFT BEARING
2 - RETAINERS

(6) Install countershaft bearing (1) (Fig. 99) retainers (2) and tighten bolts to 10 N·m (88 in. lbs.).

## FINAL ASSEMBLY

(1) Install mainshaft (1) onto Build Fixture 9633 (2) (Fig. 100).

(2) Install countershaft (1) onto Build Fixture 9633 (2) (Fig. 101).

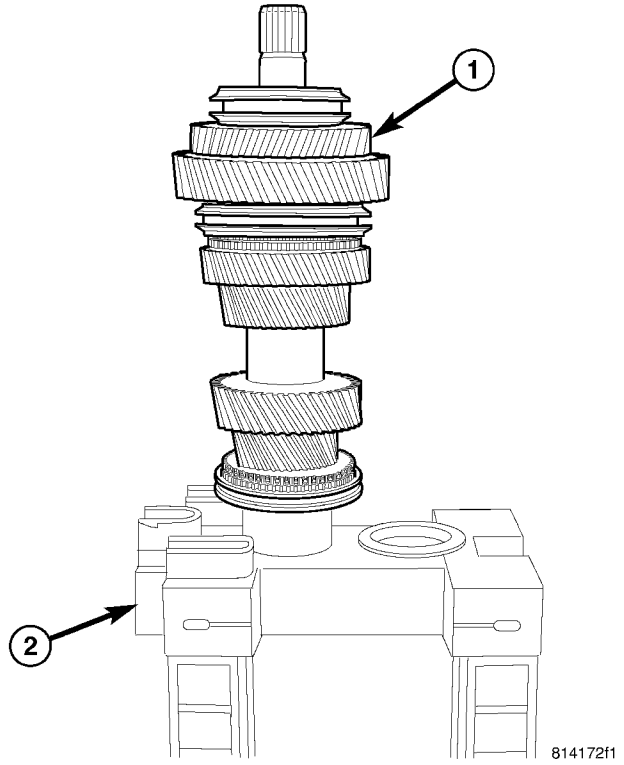


***Fig. 100 MAINSHAFT IN FIXTURE***

1 - MAINSHAFT
2 - FIXTURE

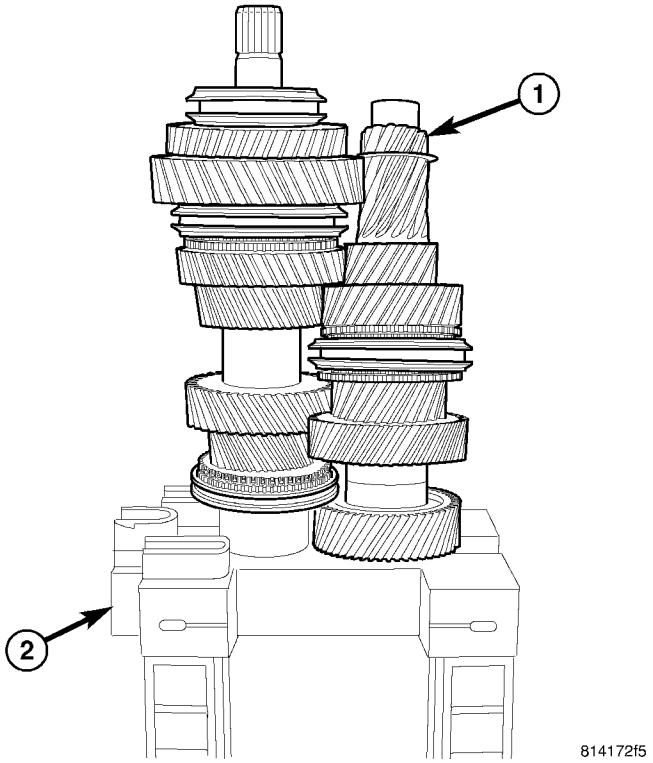


***Fig. 101 COUNTERSHAFT IN FIXTURE***

1 - COUNTERSHAFT
2 - FIXTURE